



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Identification codes, assembly allocation, capacities, Polo 2002 ▶	1
1.3 Identification codes, assembly allocation, capacities, Polo 2010 ▶	13
2 Overview - power transmission	15
3 General repair notes	17
3.1 Contact corrosion!	17
3.2 Special tools	17
3.3 Gearbox	17
3.4 Seals and sealing rings	17
3.5 Sealant	18
3.6 Locking devices	18
3.7 Nuts and bolts	18
3.8 Bearings	18
3.9 Shims	19
3.10 Synchro-rings	19
3.11 Gear wheels	19
3.12 Synchromeshed gears	19
3.13 Clutch	19
4 Safety measures for vehicles with start/stop system	20
30 - Clutch	21
1 Repairing clutch mechanism	21
1.1 Overview - clutch actuation	21
1.2 Assembly overview - pedal cluster, Polo 2002 ▶	22
1.3 Assembly overview - pedal cluster, Polo 2010 ▶	23
1.4 Distinguishing between clutch pedal switches F36	25
1.5 Removing and installing, adjusting clutch pedal switch F36 with round housing	25
1.6 Removing and installing clutch pedal switch F36 with round housing	26
1.7 Removing and installing over-centre spring, Polo 2002 ▶	27
1.8 Removing and installing mounting bracket, Polo 2002 ▶	29
1.9 Removing and installing mounting bracket with master cylinder, Polo 2010 ▶	31
1.10 Removing and installing clutch pedal, Polo 2002 ▶	35
1.11 Removing and installing clutch pedal with over-centre spring, Polo 2010 ▶ LHD	37
1.12 Removing and installing clutch pedal with extension spring, Polo 2010 ▶ LHD	40
1.13 Removing and installing clutch pedal, Polo 2010 ▶ RHD	42
1.14 Assembly overview - hydraulics (LHD)	45
1.15 Assembly overview - hydraulics (RHD)	48
1.16 Removing and installing master cylinder, Polo 2002 ▶	50
1.17 Removing and installing master cylinder, Polo 2010 ▶	52
1.18 Removing and installing slave cylinder	53
1.19 Bleeding clutch system	54
2 Repairing clutch release mechanism	56
3 Repairing clutch	58
34 - Controls, housing	61
1 Repairing selector mechanism	61
1.1 Installation position of selector mechanism	61
1.2 Overview of selector mechanism	62
1.3 Assembly overview - selector lever knob and cover, Polo 2002 ▶	63
1.4 Removing and installing gear knob and cover, Polo 2002 ▶	63



1.5	Assembly overview - selector lever knob and cover, Polo 2010 ▶	65
1.6	Removing and installing gear knob and cover, Polo 2010 ▶	66
1.7	Repairing gear lever and selector housing (through 05.06)	67
1.8	Repairing gear lever and selector housing (from 06.06)	69
1.9	Assembly overview - removing and installing selector cables	71
1.10	Removing and installing selector mechanism	75
1.11	Adjusting selector mechanism	79
2	Removing and installing gearbox, Polo 2002 ▶ with petrol engine	83
2.1	Removing gearbox	84
2.2	Installing gearbox	89
3	Removing and installing gearbox, Polo 2002 ▶ with 4-cyl. diesel engine	96
3.1	Removing gearbox	97
3.2	Installing gearbox	102
4	Removing and installing gearbox, Polo 2002 ▶ with 3-cylinder TDI engine	108
4.1	Removing gearbox	109
4.2	Installing gearbox	115
5	Removing and installing gearbox, Polo 2010 ▶	122
5.1	Removing gearbox	123
5.2	Installing gearbox	129
6	Transporting gearbox	136
7	Checking gear oil	137
8	Dismantling and assembling gearbox	139
8.1	Overview - gearbox	139
8.2	Assembly overview	140
8.3	Assembly overview - removing and installing cover for gearbox housing and 5th gear	141
8.4	Assembly overview - removing and installing clutch housing	142
8.5	Assembly overview - removing and installing input shaft, output shaft, differential, selector mechanism and selector forks	143
8.6	Dismantling and assembling procedure	144
9	Repairing gearbox housing and clutch housing	155
10	Repairing selector unit	160
11	Dismantling and assembling selector forks	163
35 - Gears, shafts		168
1	Dismantling and assembling input shaft	168
2	Dismantling and assembling output shaft	179
39 - Final drive - differential		186
1	Renewing flange shaft oil seals with gearbox installed	186
1.1	Renewing oil seal for left flange shaft	186
1.2	Renewing seal for right flange shaft	188
2	Differential	191
2.1	Dismantling and assembling differential	191
2.2	Adjusting differential	200