



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification of gearbox</b>	<b>1</b>
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation and capacities	1
<b>2 Overview - power transmission</b>	<b>3</b>
<b>3 Calculating overall gear ratio "i"</b>	<b>5</b>
<b>4 General repair instructions</b>	<b>6</b>
4.1 Gearbox	6
4.2 Gaskets and seals	6
4.3 Sealant	6
4.4 Locking devices	7
4.5 Nuts and bolts	7
4.6 Mountings	7
4.7 Shims	7
4.8 Synchro-rings	8
4.9 Gear wheels	8
4.10 Synchromeshed gears	8
4.11 Clutch	8
<b>30 - Clutch</b>	<b>9</b>
<b>1 Fault finding, power transmission</b>	<b>9</b>
<b>2 Repairing clutch mechanism</b>	<b>10</b>
2.1 Overview - clutch actuation	10
2.2 Assembly overview - pedal cluster	11
2.3 Distinguishing between clutch pedal switches F36	12
2.4 Removing and installing clutch pedal switch F36 with rectangular housing	12
2.5 Removing and installing clutch pedal switch F36 with round housing	13
2.6 Removing and installing over-centre spring	13
2.7 Removing and installing mounting bracket for clutch pedal	15
2.8 Removing and installing clutch pedal	18
2.9 Assembly overview - hydraulics - LHD	19
2.10 Assembly overview - hydraulics - RHD	22
2.11 Removing and installing master cylinder	24
2.12 Removing and installing slave cylinder	26
2.13 Bleeding clutch mechanism	28
<b>3 Repairing clutch release mechanism</b>	<b>30</b>
<b>4 Repairing clutch</b>	<b>32</b>
<b>34 - Controls, housing</b>	<b>35</b>
<b>1 Fault finding, power transmission</b>	<b>35</b>
<b>2 Repairing selector mechanism</b>	<b>36</b>
2.1 Installation position of selector mechanism	36
2.2 Overview of selector mechanism	37
2.3 Assembly overview - gear knob and cover	38
2.4 Removing and installing gaiter with selector lever knob and, if present, noise insulation	38
2.5 Repairing gear lever and selector housing (through 05. 06)	40
2.6 Repairing gear lever and selector housing (from 06.06)	42
2.7 Assembly overview - removing and installing selector cables	44
2.8 Removing and installing selector mechanism	48
2.9 Adjusting selector mechanism	52
<b>3 Removing and installing gearbox</b>	<b>56</b>
3.1 Removing gearbox	57



3.2	Transporting gearbox	62
3.3	Install gearbox	62
<b>4</b>	<b>Checking gear oil</b>	<b>68</b>
<b>5</b>	<b>Dismantling and assembling gearbox</b>	<b>69</b>
5.1	Overview - gearbox	69
5.2	Assembly overview	69
5.3	Assembly overview - removing and installing cover for gearbox housing and 5th gear	71
5.4	Assembly overview - removing and installing gearbox housing and selector mechanism	73
5.5	Assembly overview - removing and installing input shaft, output shaft, differential and selector forks	74
5.6	Assembly sequence - removing and installing cover for gearbox housing and 5th gear	75
5.7	Assembly sequence - Dismantling and assembling gearbox completely	81
<b>6</b>	<b>Repairing gearbox housing and clutch housing</b>	<b>94</b>
<b>7</b>	<b>Dismantling and assembling selector mechanism on gearbox side (selector shaft can be removed from selector mechanism cover)</b>	<b>100</b>
<b>8</b>	<b>Dismantling and assembling selector mechanism on gearbox side (selector shaft cannot be removed from selector mechanism cover)</b>	<b>104</b>
<b>9</b>	<b>Dismantling and assembling selector forks</b>	<b>106</b>
<b>35 - Gears, shafts</b>		<b>111</b>
<b>1</b>	<b>Input shaft</b>	<b>111</b>
1.1	Dismantling and assembling input shaft	111
1.2	Modification in springs for 5th gear synchronisation from gearbox date 05111	118
1.3	Adjusting input shaft	118
<b>2</b>	<b>Output shaft</b>	<b>123</b>
2.1	Dismantling and assembling output shaft	123
2.2	Adjusting output shaft	136
<b>3</b>	<b>Reverse shaft</b>	<b>140</b>
3.1	Dismantling and assembling reverse shaft	140
<b>39 - Final drive - differential</b>		<b>144</b>
<b>1</b>	<b>Renewing flange shaft oil seals with gearbox installed</b>	<b>144</b>
1.1	Renewing oil seal for left flange shaft	144
1.2	Distinguishing seals for right flange shaft	146
1.3	Renewing seal (two-part seal and sleeve for right flange shaft)	146
1.4	Renewing seal and sleeve together (one-piece seal and sleeve for right flange shaft)	149
<b>2</b>	<b>Adjustment overview</b>	<b>153</b>
<b>3</b>	<b>Differential</b>	<b>154</b>
3.1	Dismantling and assembling differential	154
3.2	Adjusting differential	162