



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation and capacities	1
2 Overview - power transmission	4
3 Calculating overall gear ratio "i"	6
4 General repair notes	7
4.1 Contact corrosion!	7
4.2 Repair instructions	7
30 - Clutch	10
1 Repairing clutch mechanism	10
1.1 Overview	10
1.2 Assembly overview - pedal cluster	11
1.3 Distinguishing between clutch pedal switches F36	12
1.4 Removing and installing clutch pedal switch F36 with rectangular housing	12
1.5 Removing and installing clutch pedal switch F36 with round housing	13
1.6 Removing and installing over-centre spring	14
1.7 Removing and installing mounting bracket	15
1.8 Removing and installing clutch pedal	18
1.9 Assembly overview - hydraulics (LHD)	20
1.10 Assembly overview - hydraulics (RHD)	22
1.11 Removing and installing master cylinder	24
1.12 Bleeding clutch system	26
2 Repairing clutch release mechanism	28
2.1 Removing pipe/hose line and bleeder from and installing on slave cylinder	29
2.2 Removing and installing slave cylinder with release bearing	29
2.3 Removing and installing pipe/hose line	30
2.4 Renewing input shaft seal	32
3 Repairing clutch	35
34 - Controls, housing	38
1 Repairing selector mechanism	38
1.1 Installation position of selector mechanism	38
1.2 Removing and installing gear knob and cover	40
1.3 Removing and installing gaiter with selector lever knob and, if present, noise insulation	40
1.4 Repairing gear lever and selector housing (through 05.06)	42
1.5 Repairing gear lever and selector housing (from 06.06)	44
1.6 Assembly overview - removing and installing selector cables	46
1.7 Removing and installing selector mechanism	48
1.8 Adjusting selector mechanism	51
1.9 Functional check	53
2 Removing and installing gearbox	55
2.1 Removing gearbox	57
2.2 Installing gearbox	62
3 Checking gear oil	68
4 Dismantling and assembling gearbox	70
4.1 Overview - gearbox	70
4.2 Assembly overview	70
4.3 Assembly overview - removing and installing gearbox housing and selector unit	72
4.4 Removing and installing input shaft, output shafts, differential and selector rods - Assembly overview	74



4.5	Installing to engine and gearbox support	75
4.6	Assembly order, gearbox »without« retaining ring A for input shaft sealing cover	76
4.7	Assembly order, gearbox »with« retaining ring A for input shaft sealing cover	86
5	Repairing gearbox housing	97
6	Repairing clutch housing	107
7	Repairing selector unit	111
8	Repairing selector forks	114
35 - Gears, shafts		117
1	Input shaft	117
1.1	Dismantling and assembling input shaft	117
2	Output shaft for 1st through 4th gears	124
2.1	Dismantling and assembling output shaft for 1st through 4th gears	124
2.2	Adjusting output shaft for 1st through 4th gears	136
3	Output shaft for 5th, 6th and reverse gears	142
3.1	Dismantling and assembling output shaft for 5th, 6th and reverse gears	142
3.2	Adjusting output shaft for 5th, 6th and reverse gears	152
39 - Final drive - differential		158
1	Renewing flange shaft oil seals with gearbox installed	158
1.1	Renewing oil seal for left flange shaft	158
1.2	Renewing seal for right flange shaft	159
2	Adjustment overview	162
3	Differential	163
3.1	Dismantling and assembling differential	163
3.2	Adjusting differential	168