



Contents

00 - Technical data	1
1 Suggestions and criticism, general repair notes	1
1.1 Suggestions and criticism of this workshop manual	1
1.2 General repair notes	2
1.3 Tools	2
1.4 Gearbox	2
1.5 ATF	3
1.6 Seals and sealing rings	4
1.7 Nuts and bolts	4
1.8 Locking devices	5
1.9 Bearing	5
1.10 Piston rings	5
1.11 Inner plates	5
1.12 Shims	5
1.13 Clutches	6
1.14 Brakes	6
1.15 Valve body	6
1.16 Electrical components	6
1.17 Guided fault finding, vehicle self-diagnosis and testing	7
2 Fault finding for the automatic 4-speed gearbox	8
2.1 Vehicle cannot drive forwards or backwards	8
2.2 Vehicle will not drive forwards	9
2.3 Vehicle will not reverse	9
2.4 Gearbox oily	9
2.5 Oil or ATF leaks around torque converter	9
2.6 Visible fouling of ATF and/or engine coolant	10
2.7 ATF level too low, final drive oil level too high (or vice versa) - no external leaks in gearbox	10
2.8 Gearbox oily only near breather - no other external leaks in gearbox	10
2.9 ATF escaping from breather (only for longitudinally installed gearbox 01N)	10
2.10 Selector mechanism does not move freely	10
2.11 Not all selector lever positions can be selected; selected drive ranges do not function	11
2.12 Parking lock does not engage	11
2.13 Parking lock disengages »with a jolt« (selector lever sometimes difficult to move from „P“ to „R“)	11
2.14 Final drive noisy	11
2.15 Performance - jolting in neutral or during certain engine and gearbox movements	12
2.16 Engine speed drops when driving range is selected	12
2.17 Vehicle does not start at all or also starts in „R-D-3-2-1“	12
2.18 Vehicle does not start or engine stalls after a short time	13
2.19 Selector lever can be moved from „N“ or „P“ without brake being operated	13
2.20 Selector lever cannot be moved from „N“ or „P“ although brake is operated	13
2.21 Shifts occur sporadically or not at all	13
2.22 All shifts are »hard or jolting«	14
2.23 One particular shift is »hard or jolting«	15
2.24 Shift from 3rd to 4th gear takes »too long« in vehicles through 12.92 having economy/sport switch	15
2.25 Shifts take »too long«	15
2.26 Hard shifts immediately after repair	16
2.27 Gearbox downshifts at constant vehicle speed without apparent reason	16
2.28 Gearbox does not downshift for kickdown	16
2.29 Gearbox does not shift until it warms up	17
2.30 Gearbox switches to emergency running	17



2.31	Selector lever position „1“, gearbox does not shift to 1st gear (no power transfer in 1st gear)	17
2.32	Selector lever position „D“, „3“ or „2“, gearbox does not shift to 1st gear	18
2.33	Selector lever position „D“, „3“ or „2“, automatic gearbox does not shift to 2nd gear (no power transfer)	18
2.34	Selector lever position „D“ or „3“ does not shift to 3rd gear, hydraulic (3H)	18
2.35	Selector lever position „D“ or „3“ does not shift to 3rd gear, mechanical (3M)	19
2.36	Selector lever position „D“ or „3“ does not shift to 3rd gear (not gearbox 001)	19
2.37	Selector lever position „D“ does not shift to 4th gear	19
2.38	Selector lever position „D“ does not shift to 4th gear, mechanical (4M)	20
2.39	Selector lever position „R“, automatic gearbox does not shift to reverse gear	20
3	Gearbox identification	21
3.1	Location on gearbox	21
4	Identification codes, engine allocation, ratios, equipment	22
5	Capacity	23
5.1	Planetary gearbox and final drive	23
32 - Torque converter		24
1	Torque converter	24
1.1	Identification of torque converter	24
1.2	Draining torque converter	24
1.3	Removing and installing torque converter oil seal	25
1.4	Installing torque converter	26
37 - Controls, housing		27
1	Connecting Volkswagen tester and selecting functions	27
2	Carry out basic setting	29
3	Electrical and electronic components and their locations	30
3.1	Components in vehicle	30
3.2	Components on gearbox	32
3.3	Adjusting multifunction switch F125	34
3.4	Removing and installing senders G38 and G68	34
3.5	Removing and installing wiring harness	35
4	Repairing selector mechanism	37
4.1	Checking selector mechanism	37
4.2	Checking and adjusting selector lever cable	38
4.3	Checking operation of the ignition key withdrawal lock	38
4.4	Dismantling and assembling selector mechanism	39
4.5	Removing and installing selector lever lock solenoid N110	42
4.6	Removing and installing selector lever cable	43
4.7	Removing and installing selector lever	45
4.8	Removing and installing locking cable	48
4.9	Adjusting locking cable	49
5	Removing and installing gearbox	51
5.1	Removing gearbox	52
5.2	Transporting automatic gearbox	57
5.3	Installing gearbox	58
5.4	Specified torques	59
6	Checking ATF level and topping up	60
6.1	Checking ATF level	61
6.2	Topping up ATF	63
6.3	Draining and filling ATF	63
7	Gearbox with selector elements	65
7.1	Position of selector elements	65
7.2	Position of selector elements	66



8	Dismantling and assembling gearbox	69
8.1	Removing and installing ATF cooler and ATF filler tube	69
8.2	Overview - dismantling and assembling planetary gearbox	69
8.3	I - Removing and installing ATF pump up to large sun gear	70
8.4	II - Removing and installing gearbox housing cover up to input gear	72
8.5	Dismantling and assembling planetary gearbox	74
8.6	Overview - all planetary gearbox adjustments	88
8.7	Adjusting reverse gear brake B1	89
8.8	Adjusting 2nd and 4th gear brake B2	91
8.9	Adjusting clutch play	93
38	Gears, control	98
1	Dismantling and assembling ATF pump	98
2	Dismantling and assembling freewheel	100
3	Dismantling and assembling 1st to 3rd gear clutch K1	101
4	Dismantling and assembling reverse gear clutch K2	104
5	Dismantling and assembling 3rd and 4th gear clutch K3	106
6	Dismantling and assembling reverse gear brake B1	109
7	Dismantling and assembling piston for 2nd and 4th gear brake B2	111
8	Removing and installing valve body	113
9	Dismantling and assembling parking lock	116
39	Final drive - differential	119
1	Renewing oil seals for flange shafts	119
1.1	Removing and installing left flange shaft	119
1.2	Removing and installing right flange shaft	120
2	Dismantling and assembling final drive	122
2.1	Overview - final drive repair	122
2.2	Removing and installing differential	123
2.3	Removing and installing pinion shaft	124
2.4	Dismantling and assembling differential	127
3	Adjusting final drive	132
3.1	Overview of adjustments	132
3.2	Adjustments to be completed after renewing individual components	132
3.3	Adjusting differential	133
3.4	Adjusting pinion shaft	135
4	Definitions:	138