



Contents

00 - Technical data	1
1 Suggestions and criticism, general repair notes	1
1.1 Suggestions and criticism of this workshop manual	1
1.2 General repair notes	2
1.3 Gearbox	2
1.4 Torque converter	2
1.5 ATF	2
1.6 Automatic gearbox control unit J217 with fuzzy logic	2
1.7 Control units in vehicle	2
1.8 Information on "09G gearbox"	2
1.9 Tools	2
1.10 Gearbox	3
1.11 Gaskets, seals and oil	4
1.12 Nuts and bolts	4
1.13 Electrical components	4
1.14 Guided fault finding, vehicle self-diagnosis and testing	5
2 Gearbox identification	6
2.1 Gearbox codes	6
3 Capacities	7
3.1 Planetary gearbox and final drive	7
4 Identification codes, engine allocation, Polo 2007 >	8
32 - Torque converter	9
1 Torque converter	9
1.1 Identification of torque converter	9
1.2 Draining torque converter	9
1.3 Removing and installing torque converter oil seal	9
1.4 Installing torque converter	10
37 - Controls, housing	11
1 Connecting »tester«	11
1.1 Connecting vehicle diagnosis, testing and information system VAS 5051	11
2 Electrical and electronic components and their locations	13
3 Multifunction switch F125	17
3.1 Removing multifunction switch F125	17
3.2 Installing multifunction switch F125	18
3.3 Adjusting multifunction switch F125	19
4 Repairing selector mechanism	21
4.1 Assembly overview - selector mechanism	21
4.2 Removing and installing selector mechanism	22
4.3 Removing and installing selector lever handle	25
4.4 Removing and installing selector lever cable	26
4.5 Checking selector lever cable	28
4.6 Adjusting selector lever cable	29
4.7 Checking selector mechanism	30
4.8 Removing and installing selector lever lock solenoid N110	31
4.9 Removing and installing locking cable	33
4.10 Adjusting locking cable	36
4.11 Checking operation of the ignition key withdrawal lock	37
5 Removing and installing gearbox	39
5.1 Removing gearbox, Polo 2007 with 1.4 l - 59 kW engine	39
5.2 Installing gearbox, Polo 2007 with 1.4 l - 59 kW engine	48



5.3	Removing gearbox, Polo 2007 with 1.6 l - 77 kW engine	50
5.4	Installing gearbox, Polo 2007 with 1.6 l - 77 kW engine	58
6	Transporting gearbox	60
7	Checking ATF level and topping up	61
7.1	Checking ATF level	62
7.2	Topping up ATF	63
7.3	Draining and filling ATF	64
8	ATF cooler	65
8.1	Assembly overview - ATF cooler	65
38 - Gears, control		66
1	Renewing oil seal for selector shaft	66
2	Removing and installing ATF pan	67
2.1	Removing	67
2.2	Installing	68
3	Removing and installing ATF strainer	70
3.1	Removing	70
3.2	Installing	70
4	Removing and installing valve body	71
4.1	Overview - valve chest	71
4.2	Removing valve body	73
4.3	Installing valve body	76
4.4	Torque settings	80
5	Removing and installing wiring harness for solenoid valves and senders	81
5.1	Removing	81
5.2	Installing	81
5.3	Removing and installing gearbox input speed sender G182	81
5.4	Removing and installing gearbox output speed sender G195	82
39 - Final drive - rear differential		84
1	Renewing oil seals for flange shafts	84
1.1	Renewing oil seal for flange shaft	84