



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing	4
1.2 Installing	8
1.3 Specified torques	9
13 - Crankshaft group	11
1 Dismantling and assembling engine	11
1.1 Assembly overview - part I, belt drive	11
1.2 Assembly overview - part II, chain drive, engine codes AWY, BMD, BBM	12
1.3 Assembly overview - part II, chain drive, engine codes AZQ, BME, BZG	15
1.4 Removing and installing poly V-belt	17
1.5 Removing and installing valve timing housing	19
2 Cylinder block, seals	24
2.1 Assembly overview	24
2.2 Renewing crankshaft oil seal - belt pulley end	25
2.3 Renewing crankshaft oil seal - flywheel end	27
15 - Cylinder head, valve gear	30
1 Cylinder head	30
1.1 Assembly overview - engine codes AWY, BMD, BBM	30
1.2 Removing and installing cylinder head, engine codes AWY, BMD, BBM	32
1.3 Assembly overview - engine codes AZQ, BME, BZG	35
1.4 Removing and installing cylinder head, engine codes AZQ, BME, BZG	38
1.5 Removing and installing camshaft housing, engine codes AZQ, BME, BZG	41
1.6 Checking valve timing, engine codes AWY, BMD, BBM	45
1.7 Checking valve timing, engine codes AZQ, BME, BZG	47
1.8 Removing and installing timing chain and drive chain for oil pump, engine codes AWY, BMD, BBM	49
1.9 Adjusting valve timing, engine codes AWY, BMD, BBM	51
1.10 Removing and installing timing chain and drive chain for oil pump, engine codes AZQ, BME, BZG	54
1.11 Adjusting valve timing, engine codes AZQ, BME, BZG	58
1.12 Checking compression	61
2 Valve gear	64
2.1 Assembly overview - engine codes AWY, BMD, BBM	64
2.2 Assembly overview - engine codes AZQ, BME, BZG	66
2.3 Checking camshaft axial clearance	69
2.4 Reworking valve seats	69
2.5 Checking valve guides	72
2.6 Renewing valve stem seals	73
17 - Lubrication	77
1 Parts of lubrication system	77
1.1 Engine oil	77
1.2 Assembly overview	77
1.3 Assembly overview - oil filter	80
1.4 Removing and installing oil filter element	80
1.5 Removing and installing oil sump	81



1.6	Checking oil pressure and oil pressure switch	82
19	- Cooling	84
1	Parts of cooling system	84
1.1	Assembly overview - parts of cooling system, body side (radiator with two fans)	84
1.2	Assembly overview - parts of cooling system, body side (radiator with one fan)	86
1.3	Assembly overview - parts of cooling system, engine side	87
1.4	Draining and filling coolant	88
1.5	Removing and installing radiator	90
1.6	Removing and installing coolant pump	92
20	- Fuel supply system	94
1	Parts of fuel supply system	94
1.1	Assembly overview - fuel tank with attachments	94
1.2	Safety precautions when working on fuel supply system	97
1.3	Rules for cleanliness	98
1.4	Removing and installing fuel delivery unit	98
1.5	Removing and installing fuel gauge sender G	100
1.6	Removing and installing fuel tank	100
1.7	Crash fuel shut-off	102
1.8	Checking fuel pump	102
1.9	Bleeding fuel system	110
2	Activated charcoal filter system	113
2.1	Function	113
2.2	Assembly overview	113
2.3	Checking fuel tank breather	114
3	Electronic power control (EPC)	116
3.1	Assembly overview	116
24	- Mixture preparation - injection	117
1	Injection system	117
1.1	Assembly overview - parts of injection system	117
1.2	Assembly overview - intake manifold, engine codes AWY, BMD, BBM	119
1.3	Assembly overview - intake manifold, engine codes AZQ, BME, BZG	120
1.4	Assembly overview - fuel rail with injectors, engine code AWY	121
1.5	Assembly overview - fuel rail with injectors, engine codes AZQ, BMD, BME, BBM, BZG	122
1.6	Assembly overview - air filter, engine codes AWY, AZQ, BME	122
1.7	Removing and installing air filter, engine codes AWY, AZQ, BME	123
1.8	Assembly overview - air filter, engine codes BMD, BBM, BZG	124
1.9	Removing and installing air filter, engine codes BMD, BBM, BZG	125
1.10	Cleaning throttle valve module J338	126
1.11	Safety precautions	127
1.12	Rules for cleanliness	128
1.13	Technical data	129
2	Checking components	130
2.1	Checking injectors	130
2.2	Checking fuel pressure regulator and holding pressure	134
2.3	Checking intake air preheating	137
2.4	Check non-return valve for crankcase breather	137
3	Engine control unit J623	140
3.1	Removing and installing engine control unit J623	140
3.2	Removing and installing anti-theft-secured engine control unit J623 (▶model year 2007)	140
3.3	Vehicles with anti-theft secured engine control unit J623 (model year 2007▶)	142
26	- Exhaust system	144



1	Parts of the exhaust system	144
1.1	Assembly overview - front exhaust system with attachments	144
1.2	Assembly overview - silencers with mountings	145
2	Exhaust gas recirculation system	147
2.1	Assembly overview	147
28	- Ignition system	148
1	Ignition system	148
1.1	Assembly overview - parts of ignition system	148
1.2	Removing and installing ignition coils with output stage	149
1.3	Safety precautions	150
1.4	Test data, spark plugs	151