



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>10 - Removing and installing engine</b>	<b>2</b>
<b>1 Removing and installing engine</b>	<b>2</b>
1.1 Removing	3
1.2 Installing	5
1.3 Specified torques	7
1.4 Additional information and assembly work for vehicles with air conditioner	8
<b>13 - Crankshaft group</b>	<b>10</b>
<b>1 Dismantling and assembling engine</b>	<b>10</b>
1.1 Assembly overview - parts I and II	10
1.2 Assembly overview - part I, belt drive	12
1.3 Part II: assembly overview - chain drive system	13
1.4 Removing and installing poly V-belt	15
1.5 Removing and installing valve timing housing (timing case)	16
<b>2 Cylinder block, sealing flange</b>	<b>20</b>
2.1 Assembly overview	20
2.2 Renewing crankshaft oil seal - pulley end	22
2.3 Poly V-belt pulley securing bolt tightening procedure	23
2.4 Characteristics of the sealing flange and the assembly device T10017 and T10134	26
2.5 Renewing crankshaft sealing flange - flywheel end ( assembly tool T10134 )	27
2.6 Renewing crankshaft sealing flange - flywheel end ( assembly tool T10017 )	35
2.7 Crankshaft dimensions	42
<b>3 Pistons and conrods</b>	<b>44</b>
3.1 Assembly overview	44
3.2 Checking piston	45
3.3 Checking cylinder bores	46
3.4 Piston and cylinder dimensions	46
<b>15 - Cylinder head, valve gear</b>	<b>47</b>
<b>1 Cylinder head</b>	<b>47</b>
1.1 Assembly overview	47
1.2 Checking valve timing	50
1.3 Adjusting valve timing	51
1.4 Removing and installing timing chain and chain drive for oil pump	55
1.5 Removing and installing camshaft housing	63
1.6 Removing and installing cylinder head	67
1.7 Checking compression	70
<b>2 Valve gear</b>	<b>72</b>
2.1 Assembly overview	72
2.2 Checking camshaft axial clearance	74
2.3 Reworking valve seats	74
2.4 Checking valve guides	76
2.5 Renewing valve stem seals	76
<b>17 - Lubrication</b>	<b>79</b>
<b>1 Parts of lubrication system</b>	<b>79</b>
1.1 Engine oil	79
1.2 Assembly overview	79



1.3	Removing and installing oil sump	82
1.4	Removing and installing oil pump	83
1.5	Checking oil pressure and oil pressure switch	85
<b>19</b>	<b>- Cooling</b>	<b>88</b>
<b>1</b>	<b>Parts of cooling system</b>	<b>88</b>
1.1	Assembly overview - parts of cooling system, body side	88
1.2	Assembly overview - parts of cooling system, engine side	90
1.3	Coolant hose schematic diagram	92
1.4	Draining and filling coolant	93
1.5	Removing and installing radiator	96
1.6	Removing and installing coolant pump	98
<b>20</b>	<b>- Fuel supply system</b>	<b>101</b>
<b>1</b>	<b>Parts of fuel supply system</b>	<b>101</b>
1.1	Assembly overview - fuel tank with attachments	101
1.2	Safety precautions when working on fuel supply system	104
1.3	Rules for cleanliness	104
1.4	Removing and installing fuel delivery unit	104
1.5	Removing and installing fuel gauge sender G	106
1.6	Removing and installing fuel tank	107
1.7	Assembly overview - fuel filter with attachments	109
1.8	Removing and installing fuel filter	110
1.9	Crash fuel shut-off	111
1.10	Checking fuel pump	111
1.11	Bleeding fuel system	116
<b>2</b>	<b>Electronic power control (EPC)</b>	<b>119</b>
2.1	Assembly overview	119
<b>3</b>	<b>Activated charcoal filter system</b>	<b>120</b>
3.1	Assembly overview	120
3.2	Checking fuel tank breather	121
<b>24</b>	<b>- Mixture preparation - injection</b>	<b>122</b>
<b>1</b>	<b>Injection system</b>	<b>122</b>
1.1	General notes on injection	122
1.2	Assembly overview - intake manifold	122
1.3	Assembly overview - fuel rail with injectors	124
1.4	Removing and installing injectors	124
1.5	Assembly overview - air filter	125
1.6	Removing and installing air filter housing	127
1.7	Cleaning throttle valve module J338	128
1.8	Safety precautions	129
1.9	Rules for cleanliness	130
1.10	Technical data	130
<b>2</b>	<b>Checking components</b>	<b>131</b>
2.1	Checking injectors for leaks and quantity injected	131
2.2	Checking fuel pressure regulator and holding pressure	133
<b>3</b>	<b>Engine control unit J623</b>	<b>136</b>
3.1	Removing and installing engine control unit J623	136
3.2	Removing and installing engine control unit J623 with protective housing	136
<b>26</b>	<b>- Exhaust system</b>	<b>138</b>
<b>1</b>	<b>Parts of the exhaust system</b>	<b>138</b>
1.1	Assembly overview - catalytic converters and attachments	138
1.2	Assembly overview - silencers with mountings	140



<b>28 - Ignition system</b> .....	<b>141</b>
<b>1 Ignition system</b> .....	<b>141</b>
1.1 Assembly overview - ignition system .....	141
1.2 Removing and installing ignition coils with output stage .....	142
1.3 Safety precautions .....	143
1.4 Test data, spark plugs .....	144