



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	5
1.2 Securing engine to assembly stand	7
1.3 Installing engine	7
1.4 Specified torques	10
1.5 Assembly mountings	10
1.6 Additional information and assembly work for vehicles with air conditioner	11
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Assembly overview - parts I and II	12
1.2 Assembly overview - part I, belt drive	14
1.3 Assembly overview - part II, cylinder block	15
1.4 Removing and installing poly-V belt	17
2 Cylinder block, sealing flange	19
2.1 Assembly overview	19
2.2 Pulling needle bearing out of and driving into crankshaft	20
2.3 Renewing crankshaft oil seal - belt pulley end	21
2.4 Poly V-belt pulley securing bolt tightening procedure	23
2.5 Removing and installing drive plate	24
2.6 Characteristics of the sealing flange and the assembly device T10017 and T10134	26
2.7 Renewing crankshaft sealing flange - flywheel end (assembly tool T10134)	26
2.8 Renewing crankshaft sealing flange - flywheel end (assembly tool T10017)	34
2.9 Crankshaft dimensions	41
3 Pistons and conrods	43
3.1 Assembly overview	43
3.2 Piston and cylinder dimensions	46
15 - Cylinder head, valve gear	47
1 Cylinder head	47
1.1 Assembly overview	47
1.2 Checking valve timing	49
1.3 Removing, installing and tensioning toothed belt	50
1.4 Checking semi-automatic toothed belt tensioner	55
1.5 Removing and installing camshaft housing	59
1.6 Removing and installing cylinder head	61
1.7 Checking compression	66
2 Valve gear	68
2.1 Assembly overview	68
2.2 Reworking valve seats	71
2.3 Renewing camshaft oil seals	72
2.4 Checking valve guides	74
2.5 Renewing valve stem seals	75
17 - Lubrication	77
1 Parts of lubrication system	77
1.1 Engine oil:	77



1.2	Assembly overview	77
1.3	Removing and installing oil sump	80
1.4	Removing and installing oil pump	81
1.5	Checking oil pressure and oil pressure switch	84
19	- Cooling	86
1	Parts of cooling system	86
1.1	Assembly overview - parts of cooling system, body side	86
1.2	Assembly overview - parts of cooling system, body side	88
1.3	Assembly overview - parts of cooling system, engine side	89
1.4	Connection diagram for coolant hoses	91
1.5	Connection diagram for coolant hoses	91
1.6	Draining and adding coolant	93
1.7	Removing and installing radiator	96
1.8	Removing and installing coolant pump	98
20	- Fuel supply system	100
1	Parts of fuel supply system	100
1.1	Assembly overview - fuel tank with attachments	100
1.2	Safety regulations for working on fuel supply	103
1.3	Rules for cleanliness	104
1.4	Removing and installing fuel delivery unit	104
1.5	Removing and installing fuel gauge sender	106
1.6	Removing and installing fuel tank	106
1.7	Crash fuel shut-off	108
1.8	Checking fuel pump (engine codes AUA, AUB, BBY, BBZ, BKY and BUD)	108
1.9	Checking fuel pump (engine code CGGB)	117
1.10	Bleeding fuel system	124
2	Electronic power control (EPC)	127
2.1	Assembly overview	127
3	Activated charcoal filter system	128
3.1	Assembly overview - parts of activated charcoal filter system	128
3.2	Checking fuel tank breather	129
24	- Mixture preparation - injection	130
1	Injection system	130
1.1	General notes on injection	130
1.2	Assembly overview - parts of injection system	130
1.3	Assembly overview - intake manifold	132
1.4	Assembly overview - intake manifold	133
1.5	Assembly overview - fuel rail with injectors	135
1.6	Assembly overview - air filter	135
1.7	Assembly overview - air filter	137
1.8	Removing and installing air filter housing	139
1.9	Cleaning throttle valve module J338	140
1.10	Checking injectors	141
1.11	Checking intake air preheating	142
1.12	Safety precautions	143
1.13	Rules for cleanliness	144
1.14	Technical data	145
2	Engine control unit J623	146
2.1	Removing and installing engine (motor) control unit J623	146
2.2	Removing and installing anti-theft engine control unit J623	146
2.3	Removing and installing anti-theft engine control unit J623 (engine codes BUD and CGGB)	148



26 - Exhaust system	150
1 Parts of the exhaust system	150
1.1 Assembly overview - front exhaust system with attachments	150
1.2 Assembly overview - front exhaust system with attachments	152
1.3 Assembly overview - silencers with mountings	154
2 Exhaust gas recirculation system	155
2.1 Assembly overview	155
28 - Ignition system	157
1 Ignition system	157
1.1 General notes on ignition system	157
1.2 Assembly overview - parts of ignition system	157
1.3 Safety precautions	159
1.4 Test data, spark plugs	160