



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	2
1.2 Securing engine to assembly stand	6
1.3 Installing engine	8
1.4 Assembly mountings	10
13 - Crankshaft group	11
1 Dismantling and assembling engine	11
1.1 Assembly overview	11
1.2 Removing and installing poly V-belt	15
2 Sealing flange and flywheel	17
2.1 Renewing crankshaft oil seal - pulley end	18
2.2 Removing and installing sealing flange - pulley end	20
2.3 Removing and installing flywheel	22
2.4 Removing and installing crankshaft sealing flange - flywheel end	23
3 Crankshaft	25
3.1 Assembly overview - crankshaft	25
3.2 Crankshaft dimensions	26
4 Pistons and conrods	28
4.1 Assembly overview - pistons and conrods	28
4.2 Checking pistons, piston rings and cylinder bores	29
4.3 Piston and cylinder dimensions	31
15 - Cylinder head, valve gear	32
1 Cylinder head	32
1.1 Assembly overview - cylinder head	32
1.2 Removing, installing and tensioning toothed belt	34
1.3 Removing and installing cylinder head	39
1.4 Checking compression	43
2	46
2.1 Assembly overview - valve gear	47
2.2 Valve dimensions	49
2.3 Reworking valve seats	49
2.4 Renewing camshaft oil seals	51
2.5 Checking hydraulic bucket tappets	55
2.6 Removing and installing camshafts	55
2.7 Checking valve guides	60
2.8 Renewing valve stem seals	60
17 - Lubrication	63
1 Parts of lubrication system	63
1.1 Engine oil	63
1.2 Assembly overview - parts of lubrication system	63
1.3 Assembly overview - oil filter bracket	65
1.4 Removing and installing oil sump	66
1.5 Checking oil pressure and oil pressure switch	69



19 - Cooling	72
1 Parts of cooling system	72
1.1 Parts of cooling system - body side	72
1.2 Parts of cooling system - engine side	73
1.3 Coolant hose schematic diagram	76
1.4 Draining and filling coolant	77
1.5 Removing and installing radiator	80
1.6 Removing and installing coolant pump	82
1.7 Removing and installing thermostat	83
20 - Fuel supply system	85
1 Fuel tank	85
1.1 Safety precautions when working on fuel supply system	85
1.2 Rules for cleanliness	85
1.3 Assembly overview - fuel tank with attachments	86
1.4 Removing and installing fuel tank	88
2 Repairing fuel supply system	91
2.1 Safety precautions when working on fuel supply system	91
2.2 Rules for cleanliness	91
2.3 Assembly overview - fuel delivery unit	92
2.4 Removing and installing fuel delivery unit	92
2.5 Removing and installing fuel gauge sender G	94
2.6 Checking fuel pump	94
3 Electronic power control (EPC)	102
3.1 Assembly overview	102
4 Activated charcoal filter system	104
4.1 Function	104
4.2 Assembly overview - parts of activated charcoal filter system	104
4.3 Overview of activated charcoal filter system	106
4.4 Checking fuel tank breather	106
21 - Turbocharging/supercharging	108
1 Turbocharger	108
1.1 Rules for cleanliness	108
1.2 Assembly overview part 1 - turbocharger	109
1.3 Assembly overview part 2 - turbocharger	111
1.4 Removing and installing turbocharger	111
2 Charge air system	117
2.1 Assembly overview - charge air cooler	117
2.2 Schematic diagram of turbocharging system	118
2.3 Checking vacuum unit for charge pressure control valve	118
2.4 Checking overrun shut-off valve	119
2.5 Checking charge air system for leaks	120
24 - Mixture preparation - injection	122
1 Injection system	122
1.1 General notes on injection.	122
1.2 Safety precautions	122
1.3 Rules for cleanliness	123
1.4 Technical data	123
1.5 Assembly overview - intake manifold	124
1.6 Assembly overview - fuel rail with injectors	125
1.7 Assembly overview - air filter	126
1.8 Removing and installing intake manifold	126



2	Checking components	128
2.1	Checking injectors	128
2.2	Checking fuel pressure regulator and holding pressure	130
3	Engine control unit	134
3.1	Removing and installing engine control unit	134
3.2	Removing and installing anti-theft engine control unit	134
26	- Exhaust system	137
1	Parts of exhaust system	137
1.1	Assembly overview - exhaust system	137
1.2	Separating centre and rear silencers	139
1.3	Removing and installing front exhaust pipe with catalytic converter	140
2	Secondary air system	142
2.1	Function	142
2.2	Assembly overview - secondary air system	142
2.3	Removing and installing secondary air pump motor V101	143
2.4	Checking combination valve	143
28	- Ignition system	145
1	Repairing ignition system	145
1.1	General notes on ignition system	145
1.2	Safety precautions	145
1.3	Assembly overview - parts of the ignition	145
1.4	Removing and installing ignition coils with output stage	147
1.5	Test data, spark plugs	148