



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	3
1.2 Securing engine to assembly stand	9
1.3 Notes on installing	10
1.4 Assembly mountings	11
1.5 Additional information and assembly work for vehicles with air conditioner	12
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Assembly overview - toothed belt drive	13
1.2 Assembly overview - crankcase	15
1.3 Removing and installing poly V-belt	16
2 Sealing flange and flywheel	20
2.1 Assembly overview - sealing flange and flywheel, engine codes AMF, BAY, BNM, BNV	20
2.2 Assembly overview - sealing flange and flywheel, engine codes BMS, BWB	22
2.3 Renewing crankshaft oil seal - pulley end	23
2.4 Removing and installing sealing flange - pulley end	24
2.5 Renewing crankshaft sealing flange - flywheel end, engine codes BMS, BWB	27
2.6 Removing and installing engine speed sender G28 , engine codes BMS, BWB	35
3 Balancer shaft and retaining frame	36
3.1 Assembly overview - balancer shaft and retaining frame	36
3.2 Removing and installing balancer shaft	38
4 Crankshaft	43
4.1 Assembly overview - crankshaft	43
4.2 Crankshaft dimensions	44
5 Pistons and conrods	46
5.1 Assembly overview - pistons and conrods	46
5.2 Separating new conrods	48
5.3 Checking pistons, piston rings and cylinder bores	48
5.4 Checking piston projection at TDC	50
5.5 Piston and cylinder dimensions	51
15 - Cylinder head, valve gear	52
1 Cylinder head	52
1.1 Assembly overview - cylinder head	52
1.2 Removing, installing and tensioning toothed belt	56
1.3 Removing and installing cylinder head	66
1.4 Checking compression	70
2 Valve gear	73
2.1 Assembly overview - valve gear	73
2.2 Reworking valve seats	76
2.3 Checking valve guides	78
2.4 Renewing valve stem seals	78
2.5 Removing and installing camshaft	80
2.6 Removing and installing camshaft oil seal	84



17 - Lubrication	87
1 Engine oil	87
1.1 Oil capacities	87
1.2 Checking engine oil level	87
2 Parts of lubrication system	88
2.1 Assembly overview - parts of lubrication system	88
2.2 Assembly overview - oil filter bracket	91
2.3 Removing and installing oil sump	92
2.4 Checking oil pressure and oil pressure switch	93
19 - Cooling	96
1 Removing and installing parts of cooling system	96
1.1 Assembly overview - parts of cooling system, body side	96
1.2 Assembly overview - parts of cooling system, engine side	98
1.3 Coolant hose schematic diagram	99
1.4 Draining and filling coolant	101
1.5 Removing and installing radiator	105
1.6 Removing and installing coolant pump	106
1.7 Removing and installing thermostat	108
1.8 Checking cooling system for leaks	109
1.9 Checking engine oil cooler for leaks	111
20 - Fuel supply system	114
1 Removing and installing parts of fuel supply system	114
1.1 Safety precautions when working on fuel supply system	115
1.2 Rules for cleanliness	115
1.3 Assembly overview - fuel tank with attachments	116
1.4 Removing and installing fuel tank	118
1.5 Assembly overview - fuel filter	119
1.6 Removing and installing fuel cooler	122
1.7 Removing and installing fuel delivery unit	122
1.8 Removing and installing fuel gauge sender G	124
1.9 Checking fuel pump	124
1.10 Assembly overview - accelerator mechanism	125
1.11 Checking tandem pump	126
1.12 Removing and installing tandem pump	130
21 - Turbocharging/supercharging	133
1 Charge air system with turbocharger	133
1.1 Safety precautions	133
1.2 Rules for cleanliness	134
1.3 Installing hose connections with connector couplings	134
1.4 Hose connections with spring band ring	135
1.5 Assembly overview - turbocharger	135
1.6 Removing and installing turbocharger, engine codes BMS, BWB	140
1.7 Assembly overview - parts of charge air cooling	142
1.8 Checking charge air system for leaks	144
23 - Mixture preparation - injection	147
1 Repairing diesel direct injection system	147
1.1 Safety precautions	147
1.2 Rules for cleanliness	148
1.3 Assembly overview - intake manifold with intake manifold flap	148
1.4 Assembly overview - air filter	152
1.5 Assembly overview - unit injector	152



1.6	Removing and installing unit injector	154
1.7	Adjusting non-contact gap of unit injectors	156
1.8	Removing and installing O-rings for unit injector	156
2	Engine control unit	159
2.1	Removing and installing engine control unit	159
2.2	Removing and installing anti-theft engine control unit , engine codes AMF, BAY, BNM, BNV	159
2.3	Removing and installing anti-theft engine control unit , engine codes BMS, BWB	161
2.4	Reading and clearing engine control unit event memory	162
2.5	Adapting functions and components	163
26	- Exhaust system	165
1	Exhaust system	165
1.1	Assembly overview - front exhaust pipe with catalytic converter and silencer	165
1.2	Assembly overview - front exhaust pipe with particulate filter	167
1.3	Assembly overview - silencer, vehicles with particulate filter	168
1.4	Removing and installing front exhaust pipe with particulate filter	169
1.5	Aligning exhaust system free of stress	170
2	Exhaust gas recirculation system	173
2.1	Assembly overview - parts of exhaust gas recirculation system, engine code AMF	173
2.2	Assembly overview - parts of exhaust gas recirculation system, engine codes BAY, BNM, BNV	174
2.3	Assembly overview - parts of exhaust gas recirculation system, engine codes BMS, BWB	175
2.4	Assembly overview - exhaust gas recirculation cooler, engine codes BMS, BWB	176
2.5	Removing and installing exhaust gas recirculation cooler, engine codes BMS, BWB	177
2.6	Vacuum hose assembly	178
28	- Glow plug system	180
1	Checking glow plug system	180
1.1	Removing, installing and checking glow plugs	180
1.2	Characteristics of ceramic glow plugs	181
1.3	Removing, installing and checking ceramic glow pin plugs	181