



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Engine number | 1 |
| 1.2 Engine data | 1 |
| 10 - Removing and installing engine | 2 |
| 1 Removing and installing engine | 2 |
| 1.1 Removing engine | 2 |
| 1.2 Securing engine to assembly stand | 6 |
| 1.3 Notes on installing | 7 |
| 1.4 Assembly mountings | 8 |
| 1.5 Additional notes and assembly work for vehicles with air conditioner | 9 |
| 13 - Crankshaft group | 10 |
| 1 Dismantling and assembling engine | 10 |
| 1.1 Assembly overview - toothed belt drive | 10 |
| 1.2 Assembly overview - poly V-belt drive | 11 |
| 1.3 Removing and installing poly V-belt | 13 |
| 1.4 Assembly overview - crankcase | 15 |
| 2 Sealing flange and flywheel | 17 |
| 2.1 Assembly overview - sealing flange and flywheel, engine codes ASZ, ATD, AXR, BLT | 17 |
| 2.2 Assembly overview - sealing flange and flywheel, engine code BMT | 19 |
| 2.3 Renewing crankshaft oil seal - belt pulley end | 20 |
| 2.4 Removing and installing sealing flange - belt pulley end | 21 |
| 2.5 Renewing crankshaft sealing flange - flywheel end, engine code BMT | 23 |
| 2.6 Removing and installing engine speed sender G28, engine code BMT | 30 |
| 3 Crankshaft | 32 |
| 3.1 Assembly overview - crankshaft | 32 |
| 3.2 Crankshaft dimensions | 33 |
| 4 Pistons and conrods | 35 |
| 4.1 Assembly overview - pistons and conrods | 35 |
| 4.2 Separating new conrods | 36 |
| 4.3 Checking pistons, piston rings and cylinder bores | 37 |
| 4.4 Checking piston projection at TDC | 38 |
| 4.5 Piston and cylinder dimensions | 40 |
| 15 - Cylinder head, valve gear | 41 |
| 1 Cylinder head | 41 |
| 1.1 Assembly overview - cylinder head | 41 |
| 1.2 Removing and installing cylinder head cover | 44 |
| 1.3 Removing, installing and tensioning toothed belt | 45 |
| 1.4 Removing and installing cylinder head | 54 |
| 1.5 Checking compression | 58 |
| 2 Valve gear | 61 |
| 2.1 Assembly overview - valve gear | 61 |
| 2.2 Checking valve guides | 64 |
| 2.3 Renewing valve stem oil seals | 65 |
| 2.4 Removing and installing camshaft | 66 |
| 2.5 Removing and installing camshaft oil seal | 70 |
| 17 - Lubrication | 73 |
| 1 Engine oil | 73 |



| | | |
|-----------|---|------------|
| 1.1 | Oil capacities | 73 |
| 1.2 | Checking engine oil level | 73 |
| 2 | Parts of lubrication system | 74 |
| 2.1 | Assembly overview - parts of lubrication system | 74 |
| 2.2 | Removing and installing sump | 75 |
| 2.3 | Assembly overview - oil filter bracket | 77 |
| 2.4 | Checking oil pressure and oil pressure switch | 78 |
| 2.5 | Assembly overview - oil supply line | 79 |
| 2.6 | Removing and installing oil supply line | 80 |
| 19 | Cooling | 83 |
| 1 | Parts of cooling system | 83 |
| 1.1 | Assembly overview - parts of cooling system, body side | 84 |
| 1.2 | Assembly overview - parts of cooling system, engine side | 87 |
| 1.3 | Coolant hose schematic diagram | 88 |
| 1.4 | Draining and filling coolant | 92 |
| 1.5 | Removing and installing radiator | 94 |
| 1.6 | Removing and installing coolant pump | 96 |
| 1.7 | Removing and installing thermostat | 97 |
| 1.8 | Checking cooling system for leaks | 99 |
| 1.9 | Checking oil cooler for leaks | 101 |
| 20 | Fuel supply system | 104 |
| 1 | Removing and installing parts of fuel supply system | 104 |
| 1.1 | Safety precautions when working on fuel supply system | 104 |
| 1.2 | Rules for cleanliness | 105 |
| 1.3 | Assembly overview - fuel tank with attachments | 105 |
| 1.4 | Assembly overview - fuel filter | 108 |
| 1.5 | Removing and installing fuel cooler | 109 |
| 1.6 | Removing and installing fuel tank | 110 |
| 1.7 | Removing and installing fuel delivery unit | 111 |
| 1.8 | Removing and installing fuel gauge sender G | 113 |
| 1.9 | Checking fuel pump | 114 |
| 1.10 | Assembly overview - accelerator mechanism | 115 |
| 1.11 | Checking tandem pump | 116 |
| 1.12 | Removing and installing tandem pump | 119 |
| 21 | Turbocharging/supercharging | 123 |
| 1 | Charge air system with turbocharger | 123 |
| 1.1 | Safety precautions | 123 |
| 1.2 | Rules for cleanliness | 124 |
| 1.3 | Disconnecting and reconnecting hose connections with push-in connectors | 124 |
| 1.4 | Hose connections with spring band ring | 125 |
| 1.5 | Assembly overview - turbocharger with attachments | 125 |
| 1.6 | Removing and installing turbocharger, engine code BMT | 130 |
| 1.7 | Assembly overview - parts of charge air cooling | 132 |
| 1.8 | Checking charge air system for leaks | 134 |
| 23 | Mixture preparation - injection | 137 |
| 1 | Repairing diesel direct injection system | 137 |
| 1.1 | Safety precautions | 137 |
| 1.2 | Rules for cleanliness | 138 |
| 1.3 | Assembly overview - intake manifold with intake manifold flap | 138 |
| 1.4 | Assembly overview - air filter | 142 |
| 1.5 | Assembly overview - unit injector | 142 |
| 1.6 | Removing and installing unit injector O-rings | 143 |



| | | |
|-----------|---|------------|
| 1.7 | Removing and installing unit injector | 145 |
| 2 | Engine control unit | 149 |
| 2.1 | Reading and clearing engine control unit fault memory | 149 |
| 2.2 | Adapting functions and components | 149 |
| 2.3 | Removing and installing engine control unit | 150 |
| 26 | Exhaust system | 155 |
| 1 | Exhaust system | 155 |
| 1.1 | Assembly overview - front exhaust pipe with catalytic converter and silencers | 157 |
| 1.2 | Assembly overview - front exhaust pipe with particulate filter | 158 |
| 1.3 | Assembly overview - silencer (vehicle with particulate filter) | 160 |
| 1.4 | Removing and installing front exhaust pipe with particulate filter | 160 |
| 1.5 | Aligning exhaust system stress free | 163 |
| 2 | Exhaust gas recirculation system | 165 |
| 2.1 | Assembly overview - parts of exhaust gas recirculation | 165 |
| 2.2 | Assembly overview - exhaust gas recirculation cooler, engine code BMT | 169 |
| 2.3 | Removing and installing exhaust gas recirculation cooler, engine code BMT | 170 |
| 2.4 | Schematic diagram for vacuum hoses | 171 |
| 28 | Glow plug system | 172 |
| 1 | Checking glow plug system | 172 |
| 1.1 | Removing, installing and checking glow plugs | 172 |
| 1.2 | Characteristics of ceramic glow plugs | 173 |
| 1.3 | Removing, installing and checking ceramic glow plugs | 173 |