

001 - Basic equipment	1-12
1. Basic equipment	1
2. Battery, Ignition/starter switch, Onboard supply control unit, Fuse 2 (30), in battery fuse holder, Fuse 10 (30), in battery fuse holder, Terminal 30 wiring junction	2
3. Heated rear window button, X-contact relief relay, Onboard supply control unit, Cigarette lighter	3
4. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit, Windscreen wiper motor	4
5. Bonnet contact switch, Right backrest contact switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	5
6. Fresh air blower switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	6
7. Light switch, Onboard supply control unit	7
8. Onboard supply control unit, Fuse holder B	8
9. Onboard supply control unit, Fuse holder B, 12 V socket	9
10. Horn plate, Horn or dual tone horn, Onboard supply control unit, Data bus diagnostic interface, Fuse holder B, Diagnostic connection	10
11. Immobiliser reader coil, Coolant shortage indicator sender, Windscreen washer fluid level sender, Control unit in dash panel insert, Immobiliser control unit, Onboard supply control unit, Dash panel insert	11
12. Driver side belt switch, Handbrake warning switch, Brake fluid level warning contact, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	12
002 - Exterior lighting	13-20
1. Exterior lighting	13
2. Light switch, Onboard supply control unit	14
3. Onboard supply control unit, Front left headlight, Front right headlight, Fuse holder B	15
4. Turn signal switch, Headlight dipper and flasher switch, Parking light switch, Hazard warning lights button, Onboard supply control unit	16
5. Onboard supply control unit, Left turn signal repeater bulb, Right turn signal repeater bulb	17
6. Switch and instrument illumination regulator, Onboard supply control unit, Left headlight range control motor, Right headlight range control motor	18
7. Brake light switch, Reversing light relay, Onboard supply control unit, Left tail light, Right tail light	19
8. Onboard supply control unit, Dash panel insert, Additional brake light bulb, Left number plate light, Right number plate light	20
003 - Interior lights/warning lamps	21-24
1. Interior lights/warning lamps	21
2. Terminal 30 voltage supply relay, front interior light, reading lights, rear interior light	22
3. Door contact switch, vanity mirror contact switch	23
4. Convenience system central control unit, entry and footwell lights relay, door warning lights, luggage compartment light switch, left luggage compartment light	24
004 - 1.2 l/47 kW Simos 3PE, engine code AZQ	25-34
1. 1.2 l/47 kW Simos 3PE, engine code AZQ	25
2. Onboard supply control unit, battery, alternator, voltage regulator, starter, radiator fan, thermal switch	26
3. Injectors, engine speed sender, intake manifold pressure sender, intake air temperature sender, exhaust gas recirculation potentiometer, Hall sender, coolant temperature sender	27
4. Simos control unit, ignition system	28
5. Onboard supply control unit, Simos control unit, throttle valve control module, accelerator pedal position sender	29
6. Simos control unit, lambda probe, lambda probe after catalytic converter, active charcoal filter system solenoid valve 1, lambda probe heating	30
7. Simos control unit, knock sensor, brake light switch, clutch pedal switch, crankcase breather heater element	31
8. Onboard supply control unit, data bus diagnostic interface, Simos control unit, fuel supply relay, fuel pump relay, fuses, diagnostic socket	32
9. Simos control unit, control unit with display in dash panel insert, Motronic current supply relay, oil pressure switch, oil pressure warning lamp	33
10. Fuel gauge sender, fuel gauge, fuel pressurising pump, speedometer sender, warning lamps, oil level and oil temperature sender	34
005 - 1.4 l - 4MV/55kW, engine code BBY	35-44
1. 1.4 l - 4MV/55kW, engine code BBY	35
2. Onboard supply system control unit, battery, alternator, voltage regulator, starter, radiator fan, thermostat switch for radiator fan	36
3. Injectors, sender for engine speed, intake manifold pressure, intake manifold temperature and coolant temperature, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, heater element	37

4. Onboard supply control unit, 4MV control unit (injection system), ignition coils 1-3 with output stage, spark plug connector, spark plugs	38
5. Onboard supply system control unit, 4MV control unit (injection system), throttle valve module, accelerator position sender, ignition coil 4 with output stage	39
6. Onboard supply system control unit, 4MV control unit (injection system), lambda probe, lambda probe after catalytic converter, activated charcoal filter system solenoid valve 1, lambda probe heating	40
7. 4MV control unit (injection system), knock sensor, brake light switch, clutch pedal switch	41
8. Onboard supply system control unit, data bus diagnosis interface, 4MV control unit (injection system), fuel pressurisation relay, fuel pump relay, fuses, diagnosis connection	42
9. Onboard supply system control unit, display in dash panel insert, oil pressure switch, oil pressure warning lamp, speedometer, fuses	43
10. Fuel gauge sender, fuel gauge, fuel pump (pressurisation pump), speedometer sender, warning lamps, oil level and oil temperature sender	44
006 - 1.2 l/40 kW - Simos 3PD, engine code AWY	45-54
1. 1.2 l/40 kW - Simos 3PD, engine code AWY	45
2. Onboard supply control unit, batterie, alternator, voltage regulator, starter, radiator fan, radiator fan thermal switch	46
3. Injector, engine speed sender, intake manifold pressure sender, intake air temperature sender, Hall sender, coolant temperature sender	47
4. Onboard supply control unit, Simos control unit, ignition coil 1-3 with output stage, spark plug connector, spark plugs	48
5. Onboard supply control unit, Simos control unit, throttle valve module, accelerator position sender	49
6. Simos control unit, lambda probe, lambda probe after catalytic converter, activated charcoal filter system solenoid valve 1, lambda probe heating	50
7. Simos control unit, knock sensor, brake light switch, clutch pedal switch	51
8. Data bus diagnostic interface, Simos control unit, fuel supply relay, fuel pump relay, diagnosis connection	52
9. Simos control unit, display control unit in dash panel insert, current supply relay, oil pressure switch, oil pressure warning lamp, fuses, speedometer	53
10. Fuel gauge sender, fuel gauge, fuel pump (pre-supply pump), oil level and oil temperature sender	54
007 - 1.4 l/55kW Turbo-diesel engine with unit injectors, engine code AMF	55-63
1. 1.4 l/55kW Turbo-diesel engine with unit injectors, engine code AMF	55
2. Onboard supply control unit, battery, alternator, voltage regulator, starter, radiator fan, radiator fan thermal switch	56
3. Onboard power supply control unit, diesel direct injection system control unit, relay for glow plugs, glow plugs (engine)	57
4. Brake light switch, kick-down switch, clutch pedal switch, brake pedal switch, idling switch, coolant temperature sender, accelerator pedal position sender, fuel temperature sender	58
5. Diesel direct injection control unit, hall sender, intake manifold pressure sender, intake manifold temperature sender, EGR valve, charge pressure control solenoid valve, intake manifold flap change-over valve	59
6. Diesel direct injection system control unit, engine speed sender, air mass meter, unit injector solenoid valves cylinders (1, 2, 3), diagnosis connection, data bus diagnostic interface	60
7. Onboard supply control unit, diesel direct injection system control unit, low heat output relay, high heat output relay, heater element fuse, auxiliary heating heater element	61
8. Diesel direct injection system relay, fuel pump relay	62
9. Oil pressure switch, fuel pump, fuel gauge, oil level/oil temperature sender, warning lamps, fuel consumption sender	63
008 - 1.4 l/55kW Turbo-diesel engine with unit injectors, engine code BAY	64-72
1. 1.4 l/55kW Turbo-diesel engine with unit injectors, engine code BAY	64
2. Onboard supply control unit, battery, alternator, voltage regulator, starter, radiator fan, radiator fan thermal switch	65
3. Onboard power supply control unit, diesel direct injection system control unit, relay for glow plugs, glow plugs (engine)	66
4. Brake light switch, kick-down switch, clutch pedal switch, brake pedal switch, idling switch, coolant temperature sender, accelerator pedal position sender, fuel temperature sender	67
5. Onboard power supply control unit, Hall sender, intake manifold pressure sender, exhaust gas recirculation valve, charge pressure control solenoid valve, intake manifold flap motor	68
6. Diesel direct injection system control unit, engine speed sender, air mass meter, unit injector solenoid valves (cylinders 1-3), diagnosis connection, data bus diagnostic interface	69
7. Onboard supply control unit, diesel direct injection system control unit, low heat output relay, high heat output relay, heater element fuse, auxiliary heating heater element	70
8. Diesel direct injection system relay, fuel pump relay	71
9. Oil pressure switch, fuel pump, fuel gauge, oil level/oil temperature sender, warning lamps, fuel	72

gauge sender	
009 - 1.4 l/55 kW 4LV, engine code AUA	73-81
1. 1.4 l/55 kW 4LV, engine code AUA	73
2. Onboard supply control unit, battery, alternator, voltage regulator, starter, radiator fan, radiator fan thermal switch	74
3. 4LV control unit (injection system), injectors, engine speed sender, intake manifold pressure and temperature and coolant temperature senders, exhaust gas recirculation potentiometer, hall sender, exhaust gas recirculation valve	75
4. 4LV control unit (injection system), throttle valve control module, accelerator pedal position sender, ignition transformer, throttle valve drive, spark plug, spark plug connector	76
5. 4LV control unit (injection system), lambda probe, lambda probe after catalytic converter, active charcoal filter system solenoid valve 1, lambda probe heating	77
6. 4LV control unit (injection system), knock sensor, brake light switch, clutch pedal switch, brake pedal switch	78
7. Data bus diagnostic interface, 4LV control unit (injection system), fuel supply relay, fuel pump relay, diagnostic socket	79
8. Onboard power supply control unit, control unit with display in dash panel insert, oil pressure switch, oil pressure warning lamp, speedometer, fuses	80
9. Fuel gauge sender, fuel gauge, fuel pump (pressurising pump), warning lamps, oil level/oil temperature sender	81
010 - 1.9 l/47 kW SDI, engine code ASY	82-90
1. 1.9 l/47 kW SDI, engine code ASY	82
2. Onboard supply control unit, battery, alternator, voltage regulator, starter, radiator fan, radiator fan thermal switch	83
3. Onboard supply control unit, diesel direct injection system control unit, relay for glow plugs, exhaust gas recirculation valve, engine glow plugs	84
4. Diesel direct injection system control unit, brake light switch, kick-down switch, clutch pedal switch, brake pedal switch, idling switch, accelerator pedal position sender, intake manifold temperature sender	85
5. Fuel temperature sender, modulating piston movement sender, fuel shut-off valve, metering unit, commencement of injection valve, data bus diagnostic interface, diagnostic socket	86
6. Onboard supply control unit, diesel direct injection system control unit, engine speed sender, needle lift sender, intake manifold flap motor	87
7. Diesel direct injection system control unit, low heat output relay, high heat output relay, heater element fuse, auxiliary heating heater element, coolant temperature sender	88
8. Diesel direct injection system relay	89
9. Onboard supply control unit, oil pressure switch, fuel gauge, oil level and oil temperature sender, warning lamps, fuel gauge sender	90
011 - 1.9 l/74 kW Turbo diesel engine with unit injectors, engine code AXR	91-101
1. 1.9 l/74 kW Turbo diesel engine with unit injectors, engine code AXR	91
2. Radiator fan control unit, alternator, voltage regulator, starter, radiator fan, radiator fan thermal switch	92
3. Onboard power supply control unit, diesel direct injection system control unit, radiator fan control unit, radiator fan, right, glow plug relay, glow plug (engine)	93
4. Diesel direct injection system control unit, kick-down switch, clutch pedal switch, brake pedal switch, idling switch, coolant temperature sender, accelerator pedal position sender, fuel temperature sender	94
5. Hall sender, intake manifold pressure sender, intake manifold temperature sender, exhaust gas recirculation valve, charge pressure control solenoid valve, intake manifold flap motor	95
6. Onboard power supply control unit, diesel direct injection system control unit, engine speed sender, air mass meter, Data bus diagnostic interface, diagnosis connection	96
7. Onboard power supply control unit, diesel direct injection system control unit, unit injector solenoid valves (cylinder 1-4)	97
8. Onboard power supply control unit, multi-function unit control unit, low heat output relay, high heat output relay, heater element fuse, additional heating heater element	98
9. Diesel direct injection system relay, fuel pump relay	99
10. Control unit with display in dash panel insert, oil pressure switch, fuel pump, fuel gauge, warning lamps, fuel gauge sender	100
11. Heater element (crankcase breather), speedometer sender, oil level/oil temperature sender	101
012 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and brake wear indicator	102-106
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and brake wear indicator	102
2. Onboard supply control unit, ABS control unit with EDL, ABS hydraulic pump, brake light switch	103
3. Onboard supply control unit, ABS control unit, inlet valves, outlet valves, speed sensor, ABS solenoid valve relay	104

4. Onboard supply control unit, ABS control unit with EDL, control unit with display in dash panel insert, traction control system switch, warning lamps	105
5. Onboard supply control unit, control unit with display in dash panel insert, warning lamps, brake pad wear sender	106
013 - Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	107-112
1. Anti-locking brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	107
2. Onboard supply control unit, ABS control unit with EDL, brake light switch, ABS return flow pump relay, ABS inlet valve, ABS outlet valve, ABS return flow pump	108
3. Onboard supply control unit, ABS control unit, ABS hydraulic pump, inlet valves, outlet valves, ABS solenoid valve relay, speed sensor	109
4. Onboard supply control unit, ABS control unit with EDL, TCS and ESP button, vehicle stabilization program valve, lateral acceleration sender, yaw rate sender, brake pressure sender 1	110
5. Onboard supply control unit, ABS control unit with EDL, steering angle sender, handbrake warning switch	111
6. ABS control unit with EDL, control unit with display in dash panel insert, warning lamps, brake pad wear sender	112
014 - Automatic gearbox (001)	113-117
1. Automatic gearbox (001)	113
2. Onboard supply control unit, battery, starter inhibitor relay, reversing light relay, alternator, voltage regulator, starter	114
3. Onboard power supply control unit, automatic gearbox control unit, multi-function switch, fuses	115
4. Onboard power supply control unit, automatic gearbox control unit, solenoid valve, vehicle speed sender, data bus diagnostic interface, diagnosis connection	116
5. Automatic gearbox control unit, gearbox speed sender, selector lever lock solenoid valve, selector lever display illumination, selector lever position P/N warning lamp	117
015 - Power assisted steering	118-120
1. Power assisted steering	118
2. Steering hydraulics pump, power steering control unit, power steering sensor	119
3. Display control unit in dash panel insert, servotronic warning lamp	120
016 - Airbag, driver and front passenger airbag, with no side-airbags	121-123
1. Airbag, driver and front passenger airbag, with no side-airbags	121
2. Onboard supply control unit, airbag control unit, key switch for airbag deactivation (front passenger airbag), airbag coil spring, airbag off warning lamp, airbag igniter (driver and front passenger side)	122
3. Onboard supply control unit, airbag control unit, control unit with display in dash panel insert	123
017 - Airbag	124-127
1. Airbag	124
2. Vehicle voltage control unit, airbag control unit, airbag disabling key switch (front passenger's airbags), airbag coil connector, airbag disabled warning lamp, airbag igniter	125
3. Airbag control unit, onboard power supply control unit, side airbag crash sensors, belt tensioner igniter, side airbag igniter	126
4. Onboard power supply control unit, airbag control unit, control unit with display in dash panel insert	127
018 - Climatic	128-134
1. Climatic	128
2. Fresh air blower switch, Air conditioning system control unit, Fresh air blower	129
3. Air conditioning system control unit, Temperature flap control motor, Fresh air and air recirculation flap control motor	130
4. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Air conditioning system control unit	131
5. Air conditioning system control unit, Onboard supply control unit, Air conditioner compressor regulating valve	132
6. High-pressure sender, Radiator fan control unit, Fuse 5 (30), in battery fuse holder, Fuse 8 (30), in battery fuse holder, Fuse 11 (30), in battery fuse holder	133
7. Radiator fan thermal switch, Radiator fan control unit, Radiator fan, Radiator fan on right of radiator	134
019 - Climatronic	135-141
1. Climatronic	135
2. Air conditioning system control unit, photo sensor, potentiometer for air flow flap control motor, air flow flap control motor, temperature sensor blower	136
3. Climatronic control unit, potentiometer for centre flap control motor, potentiometer for defroster flap control motor, potentiometer for temperature selection rotary knob	137
4. Climatronic control unit, fresh air intake duct temperature sensor, vent temperature, potentiometer for temperature flap control motor. temperature flap control motor	138

5. Air conditioning system control unit, Climatronic control unit, air conditioner compressor regulating valve	139
6. Onboard supply system control unit, fan control unit, thermal switch for cooling system circulation, high-pressure sender, fuses on battery	140
7. Onboard supply control unit, radiator fan control unit, right radiator fan, radiator fan	141
020 - Convenience electronics	142-153
1. Convenience electronics	142
2. Onboard supply control unit, driver door control unit, rear window regulator isolation switch, window regulator switch, driver side window regulator motor	143
3. Driver door control unit, heated exterior mirror relay, mirror adjustment switch, mirror adjustment change-over switch, exterior mirror heater button, interior locking switch	144
4. Front passenger/driver door control unit, window regulator switch, in front passenger door, driver side mirror adjustment motor, front passenger side window regulator motor, left heated exterior mirror	145
5. Front passenger door control unit, rear left door control unit, front passenger side mirror adjustment, rear left window regulator, right heated exterior mirror	146
6. Rear right door control unit, rear right window regulator switch, rear lid handle release button, rear right window regulator motor	147
7. Convenience system central control unit, rear lid central locking motor, rear lid handle release button	148
8. Onboard supply control unit, convenience system central control unit, driver side central locking lock unit, central locking deadlock function warning lamp, diagnosis connection	149
9. Onboard supply control unit, convenience system central control unit, front passenger side central locking lock unit, tank filler flap locking motor, central locking and anti-theft alarm system aerial	150
10. Onboard supply control unit, convenience system central control unit, rear central locking lock unit	151
11. Convenience system central control unit, anti-theft alarm ultra-sonic sensor, interior monitoring deactivation switch	152
12. Convenience system central control unit, sliding sunroof adjustment control unit, sliding sunroof lift/lower switch, sliding sunroof adjustment regulator, bonnet contact switch, alarm horn	153
021 - Cruise control system	154-155
1. Cruise control system	154
2. Onboard supply system control unit, cruise control system (CCS) switch, cruise control system (CCS) set button	155
022 - Radio systems	156-160
1. Radio systems	156
2. Radio, dash panel insert	157
3. Vehicle voltage control unit, radio, aerial, front loudspeakers, aerial amplifier	158
4. Vehicle voltage control unit, radio, rear loudspeakers	159
5. Vehicle voltage control unit, radio, CD changer	160
023 - Radio and navigation system with CD changer	161-165
1. Radio and navigation system with CD changer	161
2. Control unit with display for radio and navigation system,	162
3. Control unit with display for radio and navigation, onboard supply control unit, front loudspeaker, navigation system aerial (GPS), radio and telephone aerial	163
4. Control unit with display for radio and navigation system, onboard supply control unit, rear right loudspeaker	164
5. Control unit with display for radio and navigation system, onboard supply control unit, CD changer	165
024 - Preperation for telephone	166-167
1. Preperation for telephone	166
2. Control unit with display for radio and navigation, preperation for telephone, antenna per radio/telephone	167
025 - Multifunction display (MFI)	168-169
1. Multifunction display (MFI)	168
2. Multifunction display, function selection switch, reset button, ambient temperature sensor	169
026 - CAN bus network (drive)	170-172
1. CAN bus network (drive)	170
2. Airbag control unit, control unit with display in dash panel insert, data bus diagnostic interface, diagnosis connection	171
3. ABS control unit with EDL, automatic gearbox control unit, power steering control unit	172
027 - CAN bus network (convenience)	173-176
1. CAN bus network (convenience)	173
2. Onboard supply control unit, Climatronic control unit, air conditioning system control unit, control unit with displav in dash panel insert. data bus dianostic interface. dianosis connection	174

3. Onboard supply control unit, driver door control unit, front passenger door control unit, rear left door control unit, rear right door control unit	175
4. Convenience system central control unit, control unit with display for radio and navigation, onboard supply control unit	176
028 - Seat heating	177-179
1. Seat heating	177
2. Onboard supply control unit, heated driver seat control unit, heated driver seat adjuster, temperature sensor (driver seat), heated driver seat, heated driver seat backrest	178
3. Onboard supply control unit, heated front passenger seat control unit, temperature sensor (front passenger seat), heated front passenger seat adjuster, heated front passenger seat, heated front passenger seat backrest	179
029 - Trailer towing	180-182
1. Trailer towing	180
2. Onboard supply control unit, trailer socket, fuses	181
3. Trailer socket, trailer turn signal warning lamp	182
030 - Daytime driving lights	183-188
1. Daytime driving lights	183
2. Vehicle voltage control unit, lighting switch	184
3. Vehicle voltage control unit, headlight, fuse box	185
4. Turn signal switch, headlight dip and flasher switch, hazard warning lights button	186
5. Side turn signals bulb, number plate light	187
6. Onboard power supply control unit, brake light switch, left tail light, right tail light, high level brake light bulb	188
031 - Fog lights	189-190
1. Fog lights	189
2. Onboard supply control unit, fog light bulbs, fog light warning lamp	190
032 - Heated washer jets	191-192
1. Heated washer jets	191
2. Onboard supply control unit, washer jet heater element	192
033 - Headlight washer system HWS	193-194
1. Headlight washer system HWS	193
2. Onboard supply control unit, headlight washer system relay, headlight washer system pump	194
034 - Automatic anti-dazzle interior mirror, rain sensor	195-196
1. Automatic anti-dazzle interior mirror, rain sensor	195
2. Vehicle voltage control unit, rain sensor, automatic anti-dazzle interior mirror	196
035 - 1.4 l/63 kW Motronic, engine code AXU	197-208
1. 1.4 l/63 kW Motronic, engine code AXU	197
2. Onboard supply control unit, voltage regulator, battery, alternator, starter, radiator fan, radiator fan control unit	198
3. Onboard supply control unit, Motronic control unit, ignition coil 1, 2 and 3, engine speed sender	199
4. Motronic control unit, throttle valve module, pedal value sender, brake light switch, brake pedal switch, ignition coil 4	200
5. Motronic control unit, onboard supply control unit, Hall sender, coolant temperature sender, injectors	201
6. Active charcoal filter system solenoid valve, intake air temperature sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, clutch pedal switch, current supply relay	202
7. Motronic control unit, NOx sensor control unit, NOx sender, intake manifold pressure sender, intake air temperature sender	203
8. Motronic control unit, onboard supply control unit, radiator outlet coolant temperature sender, exhaust gas temperature sender, fuel pressure regulating valve, low fuel level sender, low pressure	204
9. Motronic control unit, fuel pressure sender, intake manifold flap potentiometer, intake manifold flap valve, lambda probe, lambda probe heater	205
10. Onboard supply control unit, Motronic control unit, knock sensor, data bus diagnostic interface, fuel pump (pre-supply pump), fuel gauge sender, cruise control system switch	206
11. Onboard supply control unit, control unit with display in dash panel insert, oil pressure switch, oil pressure warning lamp, speedometer, fuel gauge, fuses	207
12. Speedometer sender, warning lamps, oil level and oil temperature sender, dash panel insert, onboard supply control unit	208
036 - Airbag	209-212
1. Airbag	209
2. Airbag control unit, driver airbag igniter, side airbag igniter on driver side, curtain airbag igniter on driver side	210
3. Airbag control unit, key switch for airbag deactivation, front passenger airbag igniter 1, front passenger curtain airbag igniter	211
4. Onboard supply control unit. side airbag crash sensor. curtain airbag crash sensor. airbag	212

warning lamp, belt tensioner igniter 1	
037 - Basic equipment	213-224
1. Basic equipment	213
2. Battery, Ignition/starter switch, Onboard supply control unit, Fuse 2 (30), in battery fuse holder, Fuse 10 (30), in battery fuse holder, Terminal 30 wiring junction	214
3. Heated rear window button, X-contact relief relay, Onboard supply control unit, Cigarette lighter	215
4. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit, Windscreen wiper motor	216
5. Bonnet contact switch, Right backrest contact switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Heated rear window	217
6. Fresh air blower switch, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	218
7. Light switch, Onboard supply control unit	219
8. Onboard supply control unit, Fuse holder B	220
9. Onboard supply control unit, Fuse holder B, 12 V socket	221
10. Horn plate, Horn or dual tone horn, Onboard supply control unit, Data bus diagnostic interface, Fuse holder B, Diagnostic connection	222
11. Immobiliser reader coil, Coolant shortage indicator sender, Windscreen washer fluid level sender, Control unit in dash panel insert, Immobiliser control unit, Onboard supply control unit, Dash panel insert	223
12. Driver side belt switch, Handbrake warning switch, Brake fluid level warning contact, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	224
038 - Interior lights/warning lamps	225-228
1. Interior lights/warning lamps	225
2. Terminal 30 voltage supply relay, front interior light, reading lights, rear interior light	226
3. Onboard supply control unit, door contact switch, vanity mirror contact switch	227
4. Convenience system central control unit, entry and footwell lights relay, door warning lights, luggage compartment light switch, left luggage compartment light	228
039 - Electrically adjustable and heated exterior mirror (with manually operated windows)	229-231
1. Electrically adjustable and heated exterior mirror (with manually operated windows)	229
2. Mirror adjustment switch, exterior mirror heater switch, heated exterior mirror, driver door mirror adjustment motor	230
3. Heated exterior mirror relay, mirror adjustment motor, front passenger door heated exterior mirror	231
040 - Driving school vehicle	232-234
1. Driving school vehicle	232
2. Footwell light switch, driving school vehicle relay, fuse, 12 V socket, driving school vehicle footwell light	233
3. Switch for warning buzzer, driving school vehicle accelerator switch, front passenger side pedal switch for warning buzzer	234
041 - Basic equipment	235-251
1. Basic equipment	235
2. Battery, starter, ignition/starter switch, fuses on fuse holder on battery	236
3. Light switch, X-contact relief relay, onboard supply control unit	237
4. Intermittent wiper switch, rear wiper switch, rear window wiper motor, windscreen and rear window washer pump	238
5. Turn signal switch, onboard supply control unit, horn plate	239
6. Onboard supply control unit, left headlight, fuse holder, turn signal	240
7. Onboard supply control unit, right headlight, fuse holder, turn signal	241
8. Switches and instruments illumination regulator, headlight range control regulator, headlight range control motor, fuses	242
9. Brake light switch, reversing light switch, rear left fog light, rear right fog light	243
10. Hazard warning lights button, heated rear window button	244
11. Data bus diagnostic interface, fuses, diagnosis connection	245
12. Horn and dual tone horn, heated rear window control relay, horn relay, heated rear window, cigarette lighter	246
13. Fuses, 12 V socket	247
14. Fresh air blower switch, contact switch for heater element for auxiliary heater, fresh air blower, blower series resistor, fresh air/recirculated air flap servomotor	248
15. Bonnet contact switch, right backrest contact switch, automatic intermittent wash and wipe relay, windscreen wiper motor	249
16. Control unit with display in dash panel insert, immobilize reader coil, driver side belt switch, immobilize control unit, warning lamps	250
17. Dash panel insert, handbrake warning switch, brake fluid level warning contact, coolant shortage indicator sender, warning lamps	251
042 - 1.9l/96 kW - Turbo diesel engine with unit injectors. engine code ASZ	252-263

1. 1.9l/96 kW - Turbo diesel engine with unit injectors, engine code ASZ	252
2. Battery, starter, alternator	253
3. Ignition/starter switch	254
4. Ignition/starter switch, auxiliary heater element	255
5. Diesel direct injection system control unit, fuel pump relay, terminal 30 voltage supply relay, fuses	256
6. Brake light switch, clutch pedal switch, accelerator position sender, diesel direct injection system control unit	257
7. Diesel direct injection system control unit, coolant temperature display sender, intake manifold pressure sender, intake manifold temperature sender, fuel temperature sender	258
8. Hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, heater element for crankcase breather, variable intake manifold flap change-over valve	259
9. Diesel direct injection system control unit, engine speed sender, diagnosis connection	260
10. Diesel direct injection system control unit, air mass meter	261
11. Diesel direct injection system control unit, glow plug relay, unit injector valves (cylinders 1 - 4), glow plugs	262
12. Oil pressure switch, fuel gauge, dash panel insert, warning lamps, fuel pump	263
043 - Automatic anti-dazzle interior mirror, rain sensor	264-265
1. Automatic anti-dazzle interior mirror, rain sensor	264
2. Rain sensor, automatic anti-dazzle interior mirror	265
044 - Trailer operation	266-268
1. Trailer operation	266
2. Onboard supply control unit, trailer socket	267
3. Trailer socket, rear fog light cut-out contact switch and warning lamp	268
045 - Front interior light/warning lamps	269-272
1. Front interior light/warning lamps	269
2. Front interior light, reading lights, rear interior light, vanity mirror	270
3. Driver door contact switch, front passenger door contact switch	271
4. Entry and footwell light relay, door warning lamps, luggage compartment light switch, luggage compartment light on left	272
046 - Convenience electronics	273-285
1. Convenience electronics	273
2. Fuses	274
3. Fuses, alarm, convenience system central control unit	275
4. Interior monitoring deactivation switch, anti-theft alarm ultrasonic sensor, convenience system central control unit	276
5. Driver side interior locking switch, driver side central locking lock unit, central locking deadlock function warning lamp -SAFE-	277
6. Front passenger side central locking lock unit, tank filler flap locking motor, convenience system central control unit	278
7. Rear left central locking lock unit, rear right central locking lock unit	279
8. Sliding sunroof adjustment regulator, sliding sunroof buttons, sliding sunroof motor, convenience system central control unit, sliding sunroof adjustment control unit	280
9. Window regulator switch, driver door control unit, driver window regulator motor	281
10. Mirror adjustment switch, driver door control unit, driver mirror adjustment motor	282
11. Front passenger window regulator switch, front passenger door control unit, front passenger mirror adjustment motor, window regulator motor	283
12. Door control unit, rear left window regulator switch, rear right window regulator switch, window regulator motor	284
13. Luggage compartment light switch, bonnet contact switch, luggage compartment light, central locking switch, rear lid, release button, rear lid handle	285
047 - Headlight washer system -HWS-	286-287
1. Headlight washer system -HWS-	286
2. Onboard supply control unit, headlight washer system relay, headlight washer system pump	287
048 - Day driving lights	288-294
1. Day driving lights	288
2. Light switch	289
3. Turn signal switch, hazard warning light button, onboard power supply control unit	290
4. Onboard supply control unit, left headlight, fuse holder, turn signals	291
5. Onboard supply control unit, right headlight, fuse holder, turn signals	292
6. Switches and instruments illumination regulator, headlight range control regulator, headlight range control motor, fuses	293
7. Brake light switch, reversing light switch, left tail light, right tail light	294
049 - Telephone preparation	295-298
1. Telephone preparation	295
2. Mobile telephone operating electronics control unit. telephone microphone. fuses	296

3. Mobile telephone operating electronics control unit, control unit with display for radio and navigation, radio, aerial, telephone holder	297
4. Mobile telephone operating electronics control unit, telephone holders	298
050 - 1.2l petrol engine , AWY	299-310
1. 1.2l petrol engine , AWY	299
2. Battery, Starter, Alternator, Onboard supply control unit, Fuse 1 (30), in battery fuse holder, Fuse 2 (30), in battery fuse holder	300
3. Ignition/starter switch, Fuel pump relay, Main relay, Radiator fan	301
4. Fuse holder B	302
5. Simos control unit	303
6. Simos control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	304
7. Accelerator position sender, Throttle valve module, Simos control unit	305
8. Engine speed sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Simos control unit	306
9. Lambda probe, Simos control unit, Activated charcoal filter solenoid valve 1	307
10. Knock sensor 1, Simos control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Diagnostic connection	308
11. Brake light switch, Clutch pedal switch, Brake pedal switch, Simos control unit	309
12. Oil pressure switch, Fuel system pressurisation pump, Speedometer sender, Oil level and oil temperature sender, Dash panel insert	310
051 - 1.2l - Simos 3PE/47kW, engine code AZQ	311-320
1. 1.2l - Simos 3PE/47kW, engine code AZQ	311
2. Battery, starter, alternator, thermal switch for radiator fan, radiator fan	312
3. Ignition/starter switch, fuel pump relay, fuel supply relay, fuses	313
4. Motronic current supply relay, Simos control unit, fuses	314
5. Simos control unit, ignition coils with output stage	315
6. Clutch pedal switch, brake pedal switch, accelerator position sender, throttle valve module, Simos control unit	316
7. Simos control unit, Hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender, exhaust gas recirculation valve	317
8. Lambda probes, Simos control unit, heater element for crankcase breather, activated charcoal filter system solenoid valve 1	318
9. CCS switch, engine speed sender, knock sensor 1, Simos control unit, injectors for cylinders	319
10. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, dash panel insert	320
052 - 1.4 l/55 kW, 4MV, engine code BBY	321-330
1. 1.4 l/55 kW, 4MV, engine code BBY	321
2. Battery, starter, alternator, radiator fan thermal switch, radiator fan	322
3. Ignition/starter switch, fuel pump relay, fuel supply relay, fuses	323
4. 4MV injection system control unit, fuses	324
5. 4MV injection system control unit, ignition coils with output stage, heater element for crankcase breather	325
6. 4MV injection system control unit, engine speed sender, Hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender, exhaust gas recirculation valve	326
7. Clutch pedal switch, brake pedal switch, accelerator position sender, throttle valve module, 4MV injection system control unit	327
8. Lambda probes, 4MV injection system control unit, active charcoal filter system solenoid valve 1	328
9. Cruise control system switch, knock sensor 1, 4MV injection system control unit, injectors for cylinders	329
10. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, dash panel insert	330
053 - 1.4l petrol engine , AXU	331-345
1. 1.4l petrol engine , AXU	331
2. Battery, Starter, Alternator, Onboard supply control unit, Fuse 1 (30), in battery fuse holder, Fuse 2 (30), in battery fuse holder	332
3. Ignition/starter switch, Main relay	333
4. Fuse holder B	334
5. Motronic control unit	335
6. Motronic control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plugs	336
7. Accelerator position sender, Motronic control unit, Throttle valve module	337
8. Clutch pedal switch, Brake pedal switch, Motronic control unit	338
9. Intake air temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Fuel pressure sender for low-pressure, Motronic control unit, Exhaust gas recirculation valve	339
10. Engine speed sender, Hall sender, Knock sensor 1, Coolant temperature sender, Intake air temperature sender 2. Motronic control unit	340

11. Lambda probe, Motronic control unit, Activated charcoal filter solenoid valve 1, Fuel pressure regulating valve, Intake manifold flap valve	341
12. Brake servo pressure sensor, NOx sender, Motronic control unit, Control unit for NOx sender	342
13. Radiator outlet coolant temperature sender, Exhaust gas temperature sender 1, Motronic control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	343
14. Fuel system pressurisation pump, Motronic control unit, Fuel pump control unit, Diagnostic connection	344
15. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert	345
054 - 1.9l - SDI/47 kW, engine code ASY	346-354
1. 1.9l - SDI/47 kW, engine code ASY	346
2. Battery, starter, alternator, radiator fan	347
3. Ignition/starter switch, auxiliary heater element	348
4. Fuel pump relay, diesel direct injection system control unit, fuses	349
5. Brake light switch, clutch pedal switch, intake manifold temperature sender, accelerator position sender, diesel direct injection system control unit	350
6. Fuel temperature sender, modulating piston movement sender, exhaust gas recirculation valve, commencement of injection valve, fuel shut-off valve, metering adjuster, intake manifold flap motor	351
7. Engine speed sender, needle lift sender, diesel direct injection system control unit, data bus diagnostic interface	352
8. Cruise control system switch, coolant temperature sender, diesel direct injection system control unit, engine glow plug	353
9. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, dash panel insert	354
055 - 1.4 l/55 kW - Turbo diesel engine with unit injectors, engine code AMF	355-365
1. 1.4 l/55 kW - Turbo diesel engine with unit injectors, engine code AMF	355
2. Battery, starter, alternator, radiator fan	356
3. Ignition/starter switch, auxiliary heater element	357
4. Fuel pump relay, diesel direct injection system control unit, fuses	358
5. Brake light switch, clutch pedal switch, accelerator position sender, diesel direct injection system control unit	359
6. Coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, fuel temperature sender, diesel direct injection system control unit	360
7. Hall sender, diesel direct injection system control unit, exhaust gas recirculation valve, harge pressure control solenoid valve, variable intake manifold flap change-over valve	361
8. Engine speed sender, diesel direct injection system control unit, data bus diagnostic interface	362
9. Cruise control system switch, air mass meter, diesel direct injection system control unit	363
10. Diesel direct injection system control unit, unit injector valves the cylinder, engine glow plug	364
11. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, dash panel insert	365
056 - 1.4l diesel engine , BAY,BNM,BNV	366-377
1. 1.4l diesel engine , BAY,BNM,BNV	366
2. Battery, Starter, Alternator	367
3. Ignition/starter switch, Low heat output relay, High heat output relay, Auxiliary air heater element	368
4. Fuel pump relay, Diesel direct injection system control unit, Terminal 30 voltage supply relay	369
5. Idling speed switch, Diesel direct injection system control unit	370
6. Clutch pedal switch, Brake pedal switch, Diesel direct injection system control unit	371
7. Charge pressure sender, Coolant temperature sender, Intake manifold temperature sender, Fuel temperature sender, Diesel direct injection system control unit	372
8. Engine speed sender, Hall sender, Diesel direct injection system control unit, Exhaust gas recirculation valve, Charge pressure control solenoid valve, Intake manifold flap motor	373
9. Diesel direct injection system control unit	374
10. Cruise control system switch, Air mass meter, Diesel direct injection system control unit	375
11. Glow plug relay, Diesel direct injection system control unit, Unit injector valve, No. 1 cyl., Engine glow plug	376
12. Oil pressure switch, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Speedometer sender, Oil level and oil temperature sender, Control unit in dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Glow period warning lamp, Exhaust emissions warning lamp	377
057 - 1.9 l/74 kW - turbo diesel engine with unit injectors, engine code AXR	378-389
1. 1.9 l/74 kW - turbo diesel engine with unit injectors, engine code AXR	378
2. Battery, starter, alternator	379
3. Ignition/starter switch, radiator fan	380
4. Ignition/starter switch, auxiliary heater element	381
5. Fuel pump relay, diesel direct injection system control unit, fuses	382
6. Clutch pedal switch, accelerator position sender, diesel direct injection system control unit, kickdown switch. brake pedal switch	383

7. Coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, fuel temperature sender, diesel direct injection system control unit	384
8. Hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, heater element for crankcase breather, intake manifold flap change-over valve	385
9. Engine speed sender, diesel direct injection system control unit, data bus diagnostic interface, intake manifold flap motor	386
10. Cruise control system switch, air mass meter, diesel direct injection system control unit, fuses	387
11. Diesel direct injection system control unit, unit injector valves for cylinders 1-4, glow plug relay, engine glow plugs	388
12. Oil pressure switch, fuel gauge, speedometer, oil level and oil temperature sender, dash panel insert, fuel system pressurisation pump	389
058 - Driving school equipment	390-392
1. Driving school equipment	390
2. Footwell light switch, driving school mode relay, fuse, 12 V socket, driving school vehicle footwell illumination	391
3. Warning buzzer switch, accelerator switch for driving school vehicle, warning buzzer for pedal switch on front passenger side	392
059 - Radio systems	393-397
1. Radio systems	393
2. Radio, fuses	394
3. Mobile telephone operating electronics control unit, radio, aerial, front loudspeakers	395
4. Radio, rear loudspeakers	396
5. Radio, CD changer	397
060 - Radio/navigation system	398-402
1. Radio/navigation system	398
2. Control unit with display for radio and navigation system, fuses	399
3. Control unit with display for radio and navigation system, aerial, front loudspeaker	400
4. Mobile telephone operating electronics control unit, control unit with display for radio and navigation, rear loudspeaker	401
5. Control unit with display for radio and navigation system, CD changer	402
061 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	403-407
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	403
2. Brake light switch, Brake pedal switch, ABS control unit	404
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	405
4. TCS and ESP button, Lateral acceleration sender, Yaw rate sender, ABS control unit, ABS return flow pump	406
5. Steering angle sender, ABS control unit, Control unit in dash panel insert	407
062 - 1.2 l/40 kW - Simos 3PG, engine code BMD	408-417
1. 1.2 l/40 kW - Simos 3PG, engine code BMD	408
2. Battery, starter, alternator, fuses	409
3. Ignition/starter switch, fuel pump relay, fuses, onboard supply control unit	410
4. Motronic current supply relay, Simos control unit, fuses	411
5. Simos control unit, ignition coils with output stage	412
6. Clutch pedal switch, brake pedal switch, accelerator position sender, throttle valve module, Simos control unit	413
7. Simos control unit, engine speed sender, Hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender	414
8. Lambda probes, Simos control unit, active charcoal filter system solenoid valve 1	415
9. Cruise control system switch, knock sensor 1, Simos control unit, injectors for cylinders	416
10. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, dash panel insert	417
063 - 1.9l diesel engine , BLT	418-429
1. 1.9l diesel engine , BLT	418
2. Battery, Starter, Alternator	419
3. Ignition/starter switch, Low heat output relay, High heat output relay, Auxiliary air heater element	420
4. Fuel pump relay, Diesel direct injection system control unit, Terminal 30 voltage supply relay	421
5. Idling speed switch, Diesel direct injection system control unit	422
6. Clutch pedal switch, Brake pedal switch, Diesel direct injection system control unit	423
7. Charge pressure sender, Coolant temperature sender, Intake manifold temperature sender, Fuel temperature sender, Diesel direct injection system control unit	424
8. Hall sender, Diesel direct injection system control unit, Exhaust gas recirculation valve, Charge pressure control solenoid valve. Heater element for crankcase breather	425

9. Engine speed sender, Diesel direct injection system control unit, Intake manifold flap motor	426
10. Cruise control system switch, Air mass meter, Diesel direct injection system control unit	427
11. Automatic glow period control unit, Diesel direct injection system control unit, Unit injector valve, No. 1 cyl., Engine glow plug	428
12. Oil pressure switch, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Oil level and oil temperature sender, Control unit in dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Glow period warning lamp	429
064 - Seat heating with lateral support heater	430-432
1. Seat heating with lateral support heater	430
2. Heated driver seat regulator, heated driver seat cushion	431
3. Heated front passenger seat regulator, heated front passenger seat cushion	432
065 - Seat heating with no lateral support heater	433-435
1. Seat heating with no lateral support heater	433
2. Heated driver seat regulator, heated driver seat cushion	434
3. Heated front passenger seat regulator, heated front passenger seat cushion	435
066 - Convenience system (with electric window regulators)	436-448
1. Convenience system (with electric window regulators)	436
2. Alarm horn, Fuse holder B	437
3. Bonnet contact switch, Onboard supply control unit, Fuse holder B	438
4. Rear lid handle release button, Rear lid central locking switch, Onboard supply control unit, Rear lid central locking motor, Luggage compartment light on left	439
5. Interior monitoring deactivation switch, Anti-theft alarm ultrasonic sensor, Convenience system central control unit, Diagnostic connection, Tank filler flap locking motor	440
6. Driver side interior locking switch, Driver side central locking lock unit, Convenience system central control unit, Central locking deadlock function warning lamp -SAFE-	441
7. Convenience system central control unit	442
8. Rear left central locking lock unit, Rear right central locking lock unit, Convenience system central control unit	443
9. Sliding sunroof adjustment control unit, Convenience system central control unit	444
10. Front left window regulator switch, Rear left window regulator switch, in driver door	445
11. Rear window regulator isolation switch	446
12. Window regulator switch in front passenger door, Front passenger door control unit	447
13. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Rear left door control unit, Rear right door control unit	448
067 - Electrically adjustable and heated exterior mirrors	449-452
1. Electrically adjustable and heated exterior mirrors	449
2. Fuses	450
3. Mirror adjustment switch, adjustment switch for mirror with fold-in feature, driver side mirror adjustment motor, driver side heated exterior mirror	451
4. Folding exterior mirror control unit, front passenger side mirror adjustment, front passenger side heated exterior mirror	452
068 - Parking aid (PDC)	453-455
1. Parking aid (PDC)	453
2. Rear parking aid warning buzzer, parking aid control unit, fuse	454
3. Parking aid sender, parking aid control unit	455
069 - Fuse concept	456-473
1. Fuse concept	456
2. Fuse 2 (30) in fuse holder on battery, fuse 31, 35, 38, 39, 53 on fuse holder B	457
3. Fuse 8, 24, 26, 33, 34 on fuse holder B	458
4. Fuse 27, 28, 29 on fuse holder B	459
5. Fuse 30, 46, 47, 48, 49, 50 on fuse holder B	460
6. Fuse 51, 52 on fuse holder B	461
7. Fuse 16, 17, 18 on fuse holder B	462
8. Fuse 18 on fuse holder B	463
9. Fuse 19, 20, 45 on fuse holder B	464
10. Fuse 7, 10, 15, 23 on fuse holder B	465
11. Fuse 1, 11, 32, 36 on fuse holder B	466-467
12. Fuse 2, 4, 5 on fuse holder B	468-469
13. Fuse 2, 12, 13 on fuse holder B	470
14. Fuse 6, 43, 54 on fuse holder B	471
15. Fuse 21, 22, 44 on fuse holder B	472
16. Fuse 9, 14, 25, 37, 40, 41, 42 on fuse holder B	473
070 - Fuse concept	474-492
1. Fuse concept	474
2. Fuse 2 (30) in fuse holder on battery, fuses 31, 35, 38, 39, 53 on fuse holder B	475
3. Fuses 8. 24. 26. 33. 34 on fuse holder B	476

4. Fuses 27, 28, 29 on fuse holder B	477
5. Fuses 30, 46, 47, 48, 49, 50 on fuse holder B	478
6. Fuses 51, 52 on fuse holder B	479
7. Fuses 16, 17, 18 on fuse holder B	480
8. Fuse 18 on fuse holder B	481
9. Fuses 19, 20, 45 on fuse holder B	482
10. Fuses 7, 15, 23, 32 on fuse holder B	483
11. Fuses 1, 10, 11, 36 on fuse holder B	484-485
12. Fuses 2, 4, 5 on fuse holder B	486-487
13. Fuses 2, 12, 13 on fuse holder B	488-489
14. Fuses 6, 43, 54 on fuse holder B	490
15. Fuses 21, 22, 44 on fuse holder B	491
16. Fuses 9, 14, 25, 37, 40, 41, 42 on fuse holder B	492
071 - Basic equipment	493-509
1. Basic equipment	493
2. Battery, starter, ignition/starter switch, fuses on battery fuse holder	494
3. Light switch, X-contact relief relay, onboard supply control unit	495
4. Intermittent wiper switch, rear wiper switch, rear window wiper motor, windscreen and rear window washer pump	496
5. Turn signal switch, onboard supply control unit, horn plate	497
6. Onboard supply control unit, left headlight, fuse holder, turn signal in exterior mirror	498
7. Onboard supply control unit, right headlight, fuse holder, front passenger side exterior mirror turn signal bulb	499
8. Switches and instruments illumination regulator, headlight range control	500
9. Brake light switch, reversing light switch, left tail light, right tail light	501
10. Hazard warning lights button, heated rear window button	502
11. Data bus diagnostic interface, fuses, diagnosis connection	503
12. Treble horn, bass horn, heated rear window control relay, horn relay, cigarette lighter, heated rear window	504
13. Fuses, 12 V socket	505
14. Fresh air blower switch, auxiliary heating heater element contact switch, fresh air and air recirculation flap control motor	506
15. Bonnet contact switch, backrest contact switch, automatic intermittent wash and wipe relay, windscreen wiper motor	507
16. Dash panel insert, control unit in dash panel insert, immobilize reader coil, driver side belt switch, warning lamps, digital clock	508
17. Handbrake warning switch, brake fluid level warning contact, coolant shortage indicator sender, windscreen washer fluid level sender, brake pad wear sender	509
072 - 1.2 l/47 kW - Simos 3PG, engine code BME	510-519
1. 1.2 l/47 kW - Simos 3PG, engine code BME	510
2. Battery, starter, alternator	511
3. Ignition/starter switch, fuel pump relay, fuel supply relay, fuses	512
4. Motronic current supply relay, Simos control unit, fuses	513
5. Simos control unit, ignition coils with output stage	514
6. Clutch pedal switch, brake pedal switch, accelerator position sender, throttle valve module, Simos control unit	515
7. Simos control unit, Hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender, exhaust gas recirculation valve	516
8. Lambda probes, Simos control unit, heater element for crankcase breather, active charcoal filter system solenoid valve 1	517
9. Cruise control system switch, engine speed sender, knock sensor 1, Simos control unit, injectors for cylinders	518
10. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, dash panel insert	519
073 - 1.4 l - 4TV/55 kW, engine code BKY	520-529
1. 1.4 l - 4TV/55 kW, engine code BKY	520
2. Battery, starter, alternator, ignition/starter switch	521
3. Fuel pump relay, fuel supply relay, fuses	522
4. 4MV injection system control unit, fuses	523
5. 4MV injection system control unit, ignition coils with output stage, heater element for crankcase breather	524
6. 4MV injection system control unit, engine speed sender, Hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender, exhaust gas recirculation valve	525
7. Clutch pedal switch, brake pedal switch, accelerator position sender, throttle valve module, 4MV injection system control unit	526
8. Lambda probes. 4MV injection system control unit. active charcoal filter system solenoid valve 1	527

9. Cruise control system switch, knock sensor 1, 4MV injection system control unit, injectors for cylinders	528
10. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, dash panel insert	529
074 - 1.4 l/74 kW - 4MV, engine code BBZ	530-539
1. 1.4 l/74 kW - 4MV, engine code BBZ	530
2. Battery, starter, alternator, ignition/starter switch	531
3. Fuel pump relay, fuel supply relay, fuses	532
4. 4MV injection system control unit, fuses	533
5. 4MV injection system control unit, ignition coils with output stage, crankcase breather heater element	534
6. 4MV injection system control unit, engine speed sender, Hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender, exhaust gas recirculation valve	535
7. Clutch pedal switch, brake pedal switch, accelerator position sender, throttle valve module, 4MV injection system control unit	536
8. Lambda probes, 4MV injection system control unit, activated charcoal filter solenoid valve 1	537
9. Cruise control system switch, knock sensor 1, 4MV injection system control unit, injectors for cylinders	538
10. 4MV injection system control unit, oil pressure switch, fuel gauge, speedometer, oil level and oil temperature sender, dash panel insert, warning lamps, fuel system pressurisation pump	539
075 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP) , ASZ,ATD,AXR,BAY,BJX,BKY,BLT,BMD,BNM,BNV	540-545
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP) , ASZ,ATD,AXR,BAY,BJX,BKY,BLT,BMD,BNM,BNV	540
2. Brake light switch, Brake pedal switch, ABS control unit	541
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	542
4. Lateral acceleration sender, Yaw rate sender, ESP sensor unit, ABS control unit, ABS return flow pump	543
5. TCS and ESP button, Tyre pressure monitor display button, ABS control unit	544
6. Steering angle sender, ABS control unit, Control unit in dash panel insert	545
076 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP) , AXU,BBZ,BKY,BME	546-551
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP) , AXU,BBZ,BKY,BME	546
2. Brake light switch, Brake pedal switch, ABS control unit	547
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	548
4. Lateral acceleration sender, Yaw rate sender, ESP sensor unit, ABS control unit, ABS return flow pump	549
5. TCS and ESP button, Tyre pressure monitor display button, ABS control unit	550
6. Steering angle sender, ABS control unit, Control unit in dash panel insert	551
077 - Airbag	552-555
1. Airbag	552
2. Airbag control unit, driver airbag igniter, side airbag igniter on driver side, curtain airbag igniter on driver side	553
3. Airbag control unit, front passenger airbag igniter 1, front passenger curtain airbag igniter 1	554
4. Onboard supply control unit, side airbag crash sensor, curtain airbag crash sensor, airbag warning lamp, belt tensioner igniter -1-	555
078 - Airbag, driver and front passenger airbag, without side-airbag	556-557
1. Airbag, driver and front passenger airbag, without side-airbag	556
2. Airbag control unit, driver airbag igniter, front passenger airbag igniter 1	557
079 - Trailer operation	558-561
1. Trailer operation	558
2. Onboard supply control unit, trailer socket, fuses	559
3. Trailer socket, rear fog light cut-out contact switch	560
4. Control unit in dash panel insert, trailer operation warning lamp, rear fog light cut-out warning lamp	561
080 - Electrically adjustable and heated exterior mirrors	562-566
1. Electrically adjustable and heated exterior mirrors	562
2. Fuses	563
3. Mirror adjustment switch, driver side exterior mirror turn signal bulb, driver side mirror adjustment motor, driver side mirror adjustment motor, heated exterior mirror on driver side	564
4. Fold-in mirror contact switch, folding exterior mirror control unit, fold-in mirror motor	565
5. Front passenger side exterior mirror side repeater bulb, front passenger side mirror adjustment motor. heated exterior mirror on front passenger side	566

081 - Coming Home	567-569
1. Coming Home	567
2. Dipped headlight control unit, on/off (Coming home system), fuse	568
3. Onboard supply control unit	569
082 - Driving school equipment	570-572
1. Driving school equipment	570
2. Footwell light switch, driving school mode relay, fuse, 12 V socket, driving school vehicle footwell illumination	571
3. Warning buzzer switch, accelerator switch for driving school vehicle, warning buzzer for pedal switch on front passenger side	572
083 - Front interior light/warning lamps	573-579
1. Front interior light/warning lamps	573
2. Front interior light, reading lights, rear interior light, vanity mirror	574
3. Driver door contact switch	575-576
4. Front passenger door contact switch	577-578
5. Entry and footwell light relay, door warning lamps, luggage compartment light switch, luggage compartment light on left	579
084 - Radio systems RCD 200	580-584
1. Radio systems RCD 200	580
2. Radio, fuses	581
3. Mobile telephone operating electronics control unit, radio, aerial, front loudspeaker	582
4. Radio, rear loudspeaker	583
5. Radio, CD changer	584
085 - Seat heating with lateral support heater	585-587
1. Seat heating with lateral support heater	585
2. Heated driver seat regulator, heated driver seat cushion	586
3. Heated front passenger seat regulator, heated front passenger seat cushion	587
086 - Seat heating without lateral support heater	588-590
1. Seat heating without lateral support heater	588
2. Heated driver seat regulator, heated driver seat cushion	589
3. Heated front passenger seat regulator, heated front passenger seat cushion	590
087 - Day driving light	591-598
1. Day driving light	591
2. Light switch, fuses	592
3. Turn signal switch, hazard warning lights button, onboard supply control unit	593
4. Onboard supply control unit, left headlight, fuse holder	594
5. Onboard supply control unit, right headlight, fuse holder	595
6. Switches and instruments illumination regulator, headlight range control regulator, headlight range control motor	596
7. Brake light switch, left tail light, right tail light	597
8. Reversing light switch, fuse, number plate lights	598
088 - Heated washer jets	599-600
1. Heated washer jets	599
2. Washer jets heater element	600
089 - 1.8l petrol engine , BBU,BJX	601-612
1. 1.8l petrol engine , BBU,BJX	601
2. Battery, Starter, Alternator, Fuse holder B	602
3. Ignition/starter switch, Fuel pump relay, Onboard supply control unit, Fuel supply relay, Fuse holder B	603
4. Motronic control unit, Coolant pump relay, Terminal 30 voltage supply relay, Fuse holder B, Continued coolant circulation pump	604
5. Motronic control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	605
6. Cruise control system switch, Intake air temperature sender, Knock sensor 1, Coolant temperature sender, Knock sensor 2, Motronic control unit	606
7. Engine speed sender, Hall sender, Intake manifold pressure sender, Motronic control unit	607
8. Clutch pedal switch, Brake pedal switch, Accelerator position sender, Motronic control unit, Throttle valve module	608
9. Lambda probe, Lambda probe after catalytic converter, Motronic control unit	609
10. Motronic control unit, Secondary air pump relay, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Turbocharger air recirculation valve, Secondary air pump motor	610
11. Air mass meter, Motronic control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	611
12. Oil pressure switch, Fuel system pressurisation pump, Oil level and oil temperature sender, Control unit in dash panel insert. Dash panel insert	612

090 - Radiator fan, models without air conditioning system	613-614
1. Radiator fan, models without air conditioning system	613
2. Radiator fan thermal switch, fuse 8 (30), in fuse holder on battery, radiator fan	614
091 - Radiator fan with air conditioning system , ATD,AXR,BAY,BBM,BKY,BMD,BNM,BNV	615-616
1. Radiator fan with air conditioning system , ATD,AXR,BAY,BBM,BKY,BMD,BNM,BNV	615
2. Radiator fan thermal switch, Radiator fan control unit, Radiator fan	616
092 - Radiator fan, vehicles with air conditioning system	617-619
1. Radiator fan, vehicles with air conditioning system	617
2. Radiator fan thermal switch, radiator fan control unit, radiator fan	618
3. Radiator fan control unit, fuses	619
093 - Radiator fan with air conditioning system , AXU,BKY,BLM,BME,BMS,BMT,BTS,BUD,BWB,BZG	620-621
1. Radiator fan with air conditioning system , AXU,BKY,BLM,BME,BMS,BMT,BTS,BUD,BWB,BZG	620
2. Radiator fan thermal switch, Radiator fan control unit, Radiator fan	621
094 - Radiator fan, vehicles with air conditioning system	622-624
1. Radiator fan, vehicles with air conditioning system	622
2. Radiator fan thermal switch, radiator fan control unit, fuses	623
3. Radiator fan relay, radiator fan control unit, radiator fan	624
095 - Radiator fan, vehicles with air conditioning system	625-627
1. Radiator fan, vehicles with air conditioning system	625
2. Radiator fan thermal switch, radiator fan control unit, fuses, radiator fan	626
3. Radiator fan control unit, fuses	627
096 - Climatic	628-631
1. Climatic	628
2. Fresh air blower switch, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	629
3. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Air conditioning system control unit, Temperature flap control motor	630
4. High-pressure sender, Radiator fan control unit, Air conditioning system control unit, Onboard supply control unit, Air conditioner compressor regulating valve	631
097 - Climatronic	632-636
1. Climatronic	632
2. Sunlight penetration photosensor, Fresh air blower control unit, Climatronic control unit, Fresh air blower, Air flow flap control motor	633
3. Climatronic control unit, Onboard supply control unit, Centre flap control motor, Defroster flap control motor	634
4. Centre vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Climatronic control unit, Temperature flap control motor	635
5. High-pressure sender, Climatronic control unit, Radiator fan control unit, Air conditioner compressor regulating valve	636
098 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	637-643
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	637
2. Brake light switch, Brake pedal switch, Brake light suppression relay	638
3. ABS control unit	639
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	640
5. Lateral acceleration sender, Yaw rate sender, ESP sensor unit, ABS control unit, ABS return flow pump	641
6. TCS and ESP button, Tyre pressure monitor display button, ABS control unit	642
7. Steering angle sender, ABS control unit, Control unit in dash panel insert	643
099 - Seat heating with lateral support heater	644-646
1. Seat heating with lateral support heater	644
2. Heated driver seat regulator, heated driver seat cushion	645
3. Heated front passenger seat regulator, heated front passenger seat cushion	646
100 - Seat heating with no lateral support heater	647-649
1. Seat heating with no lateral support heater	647
2. Heated driver seat regulator, heated driver seat cushion	648
3. Heated front passenger seat regulator, heated front passenger seat cushion	649
101 - Radio and navigation system (models for Japan)	650-655
1. Radio and navigation system (models for Japan)	650
2. Control unit with display for radio and navigation system, fuses	651
3. Mobile telephone operating electronics control unit, control unit with display for radio and navigation, aerial, front loudspeaker	652
4. Control unit with display for radio and navigation system, rear loudspeaker	653
5. Control unit with display for radio and navigation system. CD changer	654

6. Navigation system tuner for TV, TV aerial	655
102 - Basic equipment	656-673
1. Basic equipment	656
2. Battery, starter, ignition/starter switch, fuses on battery fuse holder	657
3. Light switch, X-contact relief relay, onboard supply control unit	658
4. Intermittent wiper switch, rear wiper switch, rear window wiper motor, windscreen and rear window washer pump	659
5. Turn signal switch, onboard supply control unit, horn plate	660
6. Left headlight, fuse holder, exterior mirror turn signal	661
7. Right headlight, fuse holder, front passenger side exterior mirror turn signal bulb	662
8. Switches and instruments illumination regulator, headlight range control regulator, headlight range control motor, number plate light	663
9. Reversing light switch, left tail light, right tail light	664
10. Hazard warning lights button, heated rear window button	665
11. Data bus diagnostic interface, fuses, diagnosis connection	666
12. Heated rear window relay, cigarette lighter, heated rear window	667
13. Treble tone horn, bass tone horn, horn relay	668
14. Brake light switch, fuses, cigarette lighter, 12 V socket	669
15. Fresh air blower switch, auxiliary heating heater element contact switch, fresh air and air recirculation flap control motor	670
16. Bonnet contact switch, backrest contact switch, automatic intermittent wash and wipe relay, windscreen wiper motor	671
17. Dash panel insert, immobilize reader coil, control unit in dash panel insert, driver side belt switch, warning lamps	672
18. Handbrake warning switch, brake fluid level warning contact, coolant shortage indicator sender, windscreen washer fluid level sender, brake pad wear sender	673
103 - 1.2l petrol engine , BBM,BMD	674-685
1. 1.2l petrol engine , BBM,BMD	674
2. Battery, Starter, Alternator, Onboard supply control unit, Fuse 1 (30), in battery fuse holder, Fuse 2 (30), in battery fuse holder	675
3. Ignition/starter switch, Fuel pump relay, Main relay, Fuse holder B	676
4. Fuse holder B	677
5. Simos control unit	678
6. Simos control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	679
7. Engine speed sender, Intake air temperature sender, Intake manifold pressure sender, Throttle valve module, Simos control unit	680
8. Coolant temperature sender, Accelerator position sender, Simos control unit	681
9. Lambda probe, Simos control unit, Activated charcoal filter solenoid valve 1	682
10. Knock sensor 1, Simos control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Diagnostic connection	683
11. Brake light switch, Clutch pedal switch, Brake pedal switch, Simos control unit	684
12. Oil pressure switch, Fuel system pressurisation pump, Speedometer sender, Oil level and oil temperature sender, Dash panel insert	685
104 - 1.2l/47 kW - Simos, engine code BME	686-695
1. 1.2l/47 kW - Simos, engine code BME	686
2. Battery, starter, alternator	687
3. Ignition/starter switch, fuel pump relay, fuel supply relay, fuses	688
4. Motronic current supply relay, Simos control unit, fuses	689
5. Simos control unit, ignition coils with output stage	690
6. Brake light switch, clutch pedal switch, brake pedal switch, accelerator position sender, throttle valve module, Simos control unit	691
7. Simos control unit, engine speed sender, Hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender	692
8. Lambda probes, Simos control unit, activated charcoal filter system solenoid valve 1	693
9. Cruise control system switch, knock sensor 1, Simos control unit, injectors for cylinders	694
10. Oil pressure switch, fuel gauge, speedometer, oil level and oil temperature sender, dash panel insert	695
105 - 1.4 l - 4TV/59 kW, engine code BUD	696-705
1. 1.4 l - 4TV/59 kW, engine code BUD	696
2. Battery, starter, alternator, fuse (30) on fuse holder/battery	697
3. Ignition/starter switch, fuel pump relay, fuel supply relay, fuses	698
4. Motronic current supply relay, engine control unit, fuses	699
5. Engine control unit, ignition coils with output stage, heater element for crankcase breather	700
6. Engine control unit, engine speed sender, Hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender	701
7. Brake light switch. clutch pedal switch. brake pedal switch. accelerator position sender.	702

throttle valve module, engine control unit	
8. Lambda probes, engine control unit, active charcoal filter system solenoid valve 1	703
9. Cruise control system switch, knock sensor 1, engine control unit, injectors for cylinders	704
10. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, dash panel insert	705
106 - 1.4l diesel engine , BMS,BWB	706-718
1. 1.4l diesel engine , BMS,BWB	706
2. Battery, Starter, Alternator	707
3. Ignition/starter switch, Low heat output relay, High heat output relay, Auxiliary air heater element	708
4. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	709
5. Kickdown switch, Idling speed switch, Accelerator position sender, Accelerator position sender 2, Engine control unit	710
6. Clutch pedal switch, Brake pedal switch, Engine control unit	711
7. Cruise control system switch, Hall sender, Coolant temperature sender, Fuel temperature sender, Temperature sender after particulate filter, Engine control unit	712
8. Engine speed sender, Engine control unit, Exhaust gas recirculation valve, Intake manifold flap motor	713
9. Engine control unit, Charge pressure control solenoid valve, Heater element for crankcase breather	714
10. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine control unit	715
11. Lambda probe, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas pressure sensor 1, Engine control unit	716
12. Automatic glow period control unit, Engine control unit, Unit injector valve, No. 1 cyl., Engine glow plug	717
13. Oil pressure switch, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Oil level and oil temperature sender, Control unit in dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Glow period warning lamp	718
107 - 1.9l diesel engine , BMT	719-731
1. 1.9l diesel engine , BMT	719
2. Battery, Starter, Alternator	720
3. Ignition/starter switch, Low heat output relay, High heat output relay, Auxiliary air heater element	721
4. Fuel pump relay, Terminal 30 voltage supply relay, Engine control unit	722
5. Kickdown switch, Idling speed switch, Accelerator position sender, Accelerator position sender 2, Engine control unit	723
6. Clutch pedal switch, Brake pedal switch, Engine control unit	724
7. Cruise control system switch, Hall sender, Coolant temperature sender, Fuel temperature sender, Temperature sender after particulate filter, Engine control unit	725
8. Engine speed sender, Engine control unit, Exhaust gas recirculation valve, Variable intake manifold flap changeover valve, Intake manifold flap motor	726
9. Engine control unit, Charge pressure control solenoid valve, Heater element for crankcase breather	727
10. Charge pressure sender, Intake air temperature sender, Air mass meter, Engine control unit	728
11. Lambda probe, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas pressure sensor 1, Engine control unit	729
12. Automatic glow period control unit, Engine control unit, Unit injector valve, No. 1 cyl., Engine glow plug	730
13. Oil pressure switch, Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Oil level and oil temperature sender, Control unit in dash panel insert, Alternator warning lamp, Oil pressure warning lamp, Glow period warning lamp	731
108 - 1.6 l - 77 kW, engine code BTS	732-742
1. 1.6 l - 77 kW, engine code BTS	732
2. Starter, battery, alternator, fuses on fuse holder/battery	733
3. Fuel pump relay, fuel supply relay, fuses, ignition/starter switch	734
4. Engine control unit, fuses, Motronic current supply relay	735
5. Engine control unit, ignition coils with output stage	736
6. Intake air temperature sender, knock sensor 1, intake manifold pressure sender, engine control unit, intake manifold pressure sender	737
7. Throttle valve module, accelerator position sender, air mass meter, engine control unit	738
8. Active charcoal filter system solenoid valve 1, lambda probes, engine control unit, inlet camshaft control valve 1	739
9. Data bus diagnostic interface, injector, cylinder, engine control unit, cruise control system switch	740
10. Speedometer sender, fuel gauge, oil level and oil temperature sender, oil pressure switch, oil level and oil temperature sender. dash panel insert	741

11. Brake light switch, brake pedal switch, clutch pedal switch	742
109 - 6-speed automatic gearbox 09G	743-750
1. 6-speed automatic gearbox 09G	743
2. Starter, battery, alternator, starter inhibitor relay, reversing light relay, onboard supply control unit, fuses	744
3. Automatic gearbox control unit, fuses	745
4. Automatic gearbox control unit, multifunction switch	746
5. Automatic gearbox control unit, solenoid valves	747
6. Automatic gearbox control unit, gearbox oil temperature sender, gearbox input and output speed sender	748
7. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	749
8. Automatic gearbox control unit, dash panel insert, data bus diagnostic interface	750
110 - Fuse concept	751-766
1. Fuse concept	751
2. Fuse 2 (30) in battery fuse holder, fuses 31, 35, 38, 39, 53 on fuse holder B	752
3. Fuses 8, 26, 33 on fuse holder B	753
4. Fuses 27, 29 on fuse holder B	754
5. Fuses 28, 30, 46, 47, 48, 49, 50 on fuse holder B	755
6. Fuses 51, 52 on fuse holder B	756
7. Fuses 16, 17, 18 on fuse holder B	757
8. Driver door control unit, dipped headlight control unit, mobile telephone operating electronics control unit	758
9. Fuses 19, 20, 45 on fuse holder B	759
10. Fuses 7, 15, 23, 32 on fuse holder B, fuse 4	760
11. Fuses 1, 11, 24, 34, 36 on fuse holder B	761
12. Fuses 3, 4, 5 on fuse holder B	762
13. Fuses 2, 12, 13 on fuse holder B	763
14. Fuses 6, 10, 43, 54 on fuse holder B	764
15. Fuses 21, 22, 44 on fuse holder B	765
16. Fuses 9, 14, 25, 37, 40, 41, 42 on fuse holder B	766
111 - Preparation for navigation system Japan	767-771
1. Preparation for navigation system Japan	767
2. Radio, telephone and navigation system aerial, fuses	768
3. Front loudspeaker	769
4. Rear loudspeaker	770
5. TV aerial, window aerial suppression filter	771
113 - Seat heating	772-774
1. Seat heating	772
2. Heated driver seat regulator, Heated front seats control unit, Heated seat cushion for driver seat, Heated backrest for driver seat	773
3. Heated front passenger seat regulator, Heated front seats control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	774
117 - Convenience electronics with LIN-bus	775-786
1. Convenience electronics with LIN-bus	775
2. Fuses	776
3. Fuses, alarm, convenience system central control unit	777
4. Interior monitoring deactivation switch, anti-theft alarm ultrasonic sensor, convenience system central control unit	778
5. Driver side interior locking switch for central locking system, driver side central locking lock unit, central locking deadlock function warning lamp	779
6. Front passenger side central locking lock unit, tank filler flap locking motor, convenience system central control unit	780
7. Rear left central locking lock unit, rear right central locking lock unit	781
8. Sliding sunroof adjustment regulator, sliding sunroof button, sliding sunroof adjustment control unit, convenience system central control unit	782
9. Rear window regulator isolation switch, window regulator switch, driver door control unit, driver side window regulator motor	783
10. Window regulator switch in front passenger door, front passenger door control unit, driver side window regulator motor	784
11. Rear window regulator switch, in door, rear door control unit, rear window regulator motor	785
12. Luggage compartment light switch, bonnet contact switch, luggage compartment light	786
801 - -Fitting locations: Earth points - 3	787-792
1. Earth points	787-792
1.1 Overview of all earth points	787-788
1.2 Earth point, in engine compartment	789-791
1.3 Earth points. in interior	792

802 - Fitting Locations: Position of fuses - 3	793-812
1. Fuse assignment	793-812
1.1 Overview of all fuse holders	793
1.2 Fuse assignment on battery fuse holder, to November 2005	794-799
1.2.1 Models with engine codes AXU, BBZ, BME, BKY and 5-speed manual gearbox, to May 2005	794
1.2.2 Fuse colours	794-796
1.2.3 Models with engine codes AXU, BBZ, BME, BKY and 5-speed manual gearbox, from May 2005	797
1.2.4 All models from November 2005	797
1.2.5 Fuse colours	797-799
1.3 Fuse assignment on fuse holder B, from November 2001	800-803
1.3.1 Fuse colours	800-803
1.4 Fuse assignment on fuse holder B, from May 2005	804-810
1.4.1 Fuse colours	804-810
1.5 Fuse assignment on relay carrier	811-812
1.5.1 Fuse colours	811-812
803 - Relay positions: Relay assignment - 3	813-821
1. Relay positions	813-821
1.1 Overview of relay carrier locations	813
1.2 Relay carrier (15 slot), from November 2001	814-815
1.3 Relay carrier (15 slot), from May 2005	816-818
1.4 Relay carrier (15 slot), from May 2008	819-821
804 - Fitting locations: Control units in interior - 3	822-845
1. Control units in interior	822-845
1.1 Overview of control units	822-825
1.2 Convenience system central control unit -J393-	826-827
1.2.1 Connectors convenience system central control unit -J393-	827
1.3 32-pin connector, T32a, on dash panel insert -J285-	828-829
1.4 8-pin connector, T8c, on dash panel insert -J285-	830
1.5 Right door control unit, to November 2007	831
1.5.1 Front passenger door control unit -J387-	831
1.6 Right door control unit, from November 2007	832
1.6.1 Front passenger door control unit -J387-	832
1.7 Parking aid control unit -J446-	833-834
1.7.1 Connectors for parking aid control unit -J446-	834
1.8 Fuel pump control unit -J538-	835
1.9 Left door control unit, to November 2007	836
1.9.1 Driver door control unit -J386-	836
1.10 Left door control unit, from November 2007	837
1.10.1 Driver door control unit -J386-	837
1.11 Heated driver seat control unit -J131-	838
1.12 Heated front passenger seat control unit -J132-	838
1.13 Heated front seats control unit -J774-	838
1.14 Onboard supply control unit -J519-	839-840
1.14.1 Connectors on onboard supply control unit -J519-	840
1.15 Airbag control unit -J234-	841-843
1.15.1 Connectors on airbag control unit -J234-	842
1.15.2 Connectors on airbag control unit -J234-	843
1.16 Mobile telephone operating electronics control unit -J412-	844-845
805 - Fitting locations: Control units in engine compartment - 3	846-859
1. Control units in engine compartment	846-859
1.1 Overview of all control units	846
1.2 ABS control unit -J104-	847-849
1.2.1 Connectors for ABS control unit -J104-	848
1.2.2 Connectors for ABS control unit -J104-	849
1.3 Glow plug activation control unit -J370- / automatic glow period control unit -J179-	850
1.4 Automatic gearbox control unit -J217-	851-852
1.4.1 Connectors for automatic gearbox control unit -J217-	852
1.5 Power steering control unit -J500-	853
1.6 Radiator fan control unit -J293-	854
1.7 NOx sensor control unit -J583-	855
1.8 Engine control unit - J...	856-859
1.8.1 Engine control unit - J...	857
1.8.2 Engine control unit - J...	858
1.8.3 Engine control unit - J...	859
806 - Fitting locations: Coupling station assignment - 3	860-866
1. Coupling station assignment	860-866

1.1 Coupling station rear lid	862
1.2 coupling station heater, air conditioning system	862
1.3 Coupling station driver seat	863
1.4 coupling station front passenger seat	863
1.5 Coupling station bulkhead (14-pin)	864-865
1.5.1 Pin connector:	864-865
1.6 Coupling station left in engine compartment	866
1.7 Coupling station, on right in engine compartment	866