

500 - Basic equipment (only for Polo Limousine)	1-27
1. Basic equipment (only for Polo Limousine)	1
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	2
3. Onboard power supply control unit	3
4. Ignition/starter switch, X contact relief relay, onboard power supply control unit	4
5. Vanity mirror contact switch, illuminated make-up mirror (driver's side)/(front driver's side), interior light, front, interior light, centre	5
6. Lighting switch, front and rear fog light switch, onboard power supply control unit	6
7. Horn plate, Horn activation contact ring, Onboard power supply control unit, Tail light bulb, left, Turn signal bulb, rear left, Brake light bulb, left, High level brake light bulb, Auxiliary heater	7
8. Tail light bulb, right, Turn signal bulb, rear right, Brake light bulb, right, Reversing light bulb, right, Reversing light bulb, right, Rear lid release motor, Number plate light	8
9. Door contact switch, driver side, Rear left door contact switch, Cigarette lighter	9
10. Switches and instruments light regulator, Headlight range control adjuster, Heated rear window button, Onboard power supply control unit, Button illumination, Switches and instruments regulator illumination bulb	10
11. Wiper switch, rear wiper switch, intermittent wiper control, hazard warning lights button, handbrake warning switch	11
12. Door contact switch, front passenger's side, rear right door contact switch, onboard power supply control unit, windscreen and rear window washer pump	12
13. Turn signal switch, headlight dipper/flasher switch, parking light switch	13
14. Heated rear window control relay, Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction	14
15. Fresh air blower switch, Fresh air/air recirculating flap switch, Additional heating heater element contact switch, Heater control unit, Terminal 30 voltage supply relay, Onboard power supply control unit, Fresh air/air recirculation warning lamp	15
16. Reversing light switch, Onboard power supply control unit, Side turn signal bulb, right	16
17. Luggage compartment light switch, Onboard power supply control unit, Side turn signal bulb, left, Luggage compartment light	17
18. Side light bulb, right, turn signal bulb, front right, dipped beam bulb, right, main beam bulb, right	18
19. Side light bulb, left, turn signal bulb, front left, dipped beam bulb, left, main beam bulb, left	19
20. Horn/dual tone horn, Automatic intermittent wash/wipe relay, Horn relay, Windscreen wiper motor	20
21. Rear lid remote release button, Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, Button illumination	21
22. Immobilizer reading coil, oil pressure switch, brake fluid level warning contact, immobilizer control unit, dash panel insert	22
23. Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, Main beam warning lamp, Electronic power control fault lamp, Dash panel insert light bulb	23
24. Brake light switch, Cruise control system brake pedal switch (diesel direct injection system), Onboard power supply control unit	24
25. onboard power supply control unit	25
26. Onboard power supply control unit	26
27. Headlight range control motor, left, Headlight range control motor, right	27
501 - Climatronic (Polo Limousine)	28-38
1. Climatronic (Polo Limousine)	28
2. Battery, starter, alternator, voltage regulator, Onboard power supply control unit	29
3. Ignition/starter switch, X contact relief relay	30
4. Climatronic control unit, fresh air blower, temperature sensor blower, fresh/recirculating air flap control motor	31
5. Climatronic control unit, temperature flap control motor, central flap control motor, control motor potentiometer, temperature flap	32
6. Climatronic control unit, Fresh air intake duct temperature sensor, vent temperature sender, centre and footwell, defroster, flap control motor	33
7. Climatronic control unit, Terminal 30a junction box	34
8. Climatronic control unit, compressor regulating valve, air conditioning system	35
9. Climatronic control unit, sunlight penetration photo sensor, high pressure sender, data bus diagnostic interface	36
10. Radiator fan, radiator fan, right, radiator fan control unit	37
11. Radiator fan thermo-switch, radiator fan control unit	38
502 - Climatic (Polo Limousine)	39-48
1. Climatic (Polo Limousine)	39
2. Battery, starter, alternator, voltage regulator, Onboard power supply control unit	40
3. Ignition/starter switch. X contact relief relay	41

4. Air conditioning system control unit, fresh air blower, fresh air blower switch, dash panel temperature sensor, fresh air/air recirculating flap switch	42
5. Vent temperature sender, centre, footwell, evaporator, temperature flap control motor, potentiometer, air conditioner switch	43
6. Air conditioning system control unit, Onboard power supply control unit, terminal 30a junction box	44
7. Air conditioning system control unit, Onboard power supply control unit	45
8. Air conditioning system control unit, high pressure sender, pressure control valve, air conditioning system, data bus diagnostic interface	46
9. Radiator fan thermo-switch, radiator fan, radiator fan control unit	47
10. Radiator fan control unit, Onboard power supply control unit	48
503 - 1,4 ltr. - 4MV/55 kW, engine code BBY (Polo Limousine)	49-66
1. 1,4 ltr. - 4MV/55 kW, engine code BBY (Polo Limousine)	49
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	50
3. Ignition/starter switch, Onboard power supply control unit	51
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction	52
5. Engine speed sender, Hall sender, Intake air temperature sender, Intake manifold pressure sender, Exhaust gas recirculation potentiometer, Onboard power supply control unit, 4MV (injection system) control unit, Exhaust gas recirculation valve	53
6. Knock sensor I, Throttle valve drive (electric power control), Throttle valve drive angle sender -1- (electric power control), Throttle valve drive angle sender -2- (electric power control), 4MV (injection system) control unit	54
7. Accelerator pedal position sender, Accelerator pedal position sender -2-, Onboard power supply control unit, 4MV (injection system) control unit	55
8. Speedometer sender (Hall sender on gearbox), Onboard power supply control unit, 4MV (injection system) control unit	56
9. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Onboard power supply control unit, 4MV (injection system) control unit	57
10. Lambda probe after catalytic converter, Onboard power supply control unit, 4MV (injection system) control unit, Lambda probe 1 heater, after catalytic converter	58
11. Lambda probe, Coolant temperature sender, Onboard power supply control unit, 4MV (injection system) control unit, Ignition coil 1 with output stage, Spark plug connector, Spark plug	59
12. Onboard power supply control unit, 4MV (injection system) control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plug	60-66
504 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP) (only for Polo Limousine - Europe)	67-76
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP) (only for Polo Limousine - Europe)	67
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	68
3. Ignition/starter switch, Onboard power supply control unit	69
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction	70
5. Front right speed sensor, Front left speed sensor, Brake pressure sender 1, ABS with EDL control unit, ABS inlet valve, front right, ABS outlet valve, front right, ABS inlet valve, front left, ABS outlet valve, front left	71
6. Rear right speed sensor, Rear left speed sensor, ABS with EDL control unit, ABS return flow pump relay, Onboard power supply control unit, ABS return flow pump	72
7. ABS with EDL control unit, ABS solenoid valve relay, Onboard power supply control unit, ABS inlet valve, rear right, ABS inlet valve, rear left, ABS outlet valve, rear right, ABS outlet valve, rear left	73
8. Steering angle sender, Lateral acceleration sender, Yaw rate sender, Vehicle stabilising program switch valve -1-, Vehicle stabilising program switch valve -2-, Vehicle stabilising program high pressure valve	74
9. Light switch, TCS/ESP button, ABS with EDL control unit, Traction control switch illumination	75
10. Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, ABS warning lamp, Immobilizer warning lamp, Light switch light bulb	76
505 - 1,4 l - TDI/55 kW, engine code BAY (only for Polo Limousine - Europe)	77-90
1. 1,4 l - TDI/55 kW, engine code BAY (only for Polo Limousine - Europe)	77
2. Battery, starter, alternator, voltage regulator, onboard power supply control unit	78
3. Ignition/starter switch, Onboard power supply control unit	79
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction	80
5. Hall sender, Coolant temperature sender, Fuel temperature sender, Diesel direct injection system control unit, Onboard power supply control unit, Exhaust gas recirculation valve, Charge pressure control solenoid valve, Variable intake manifold flap chang	81
6. Air mass meter, Diesel direct injection system control unit, Onboard power supply control unit, Unit injector valve. No. 1 cvl.. Unit injector valve. No. 2 cvl.. Unit injector valve. No. 3 cvl..	82

Unit injector valve, No. 4 cyl.	
7. Kick-down switch, Idling switch, Intake air temperature sender, Intake manifold pressure sender, Accelerator pedal position sender, Diesel direct injection system control unit, Onboard power supply control unit	83
8. Brake fluid level warning contact, Engine speed sender, Diesel direct injection system control unit, Low heat output relay, High heat output relay, Onboard power supply control unit	84
9. Brake light switch, Clutch pedal switch, Cruise control system brake pedal switch (diesel direct injection system), Diesel direct injection system control unit, Onboard power supply control unit	85
10. Fuel pump relay, Diesel direct injection system control unit, Diesel direct injection system relay, Onboard power supply control unit	86
11. Speedometer sender (Hall sender on gearbox), Glow plug relay, Diesel direct injection system control unit, Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert	87
12. Fuel gauge sender, Fuel gauge, Fuel pump (pre-supply pump), Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, Oil pressure warning lamp, Glow period warning lamp, Reserve fuel warning lamp	88
13. Onboard power supply control unit, Glow plug - (engine), Additional heating heater element	89
14. Radiator fan thermal switch, Radiator fan control unit, Onboard power supply control unit, Radiator fan, Radiator fan, right	90
506 - Fog lights (only Polo Sedan)	91-98
1. Fog lights (only Polo Sedan)	91
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	92
3. Light switch, Front and rear fog light switch, Onboard power supply control unit, Light switch light bulb	93
4. X contact relief relay, Onboard power supply control unit, Fog light bulb, left, Fog light bulb, right	94
5. Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, Rear fog light warning lamp, Fog light warning lamp, Dash panel insert light bulb	95
6. Ignition/starter switch, Onboard power supply control unit	96
7. Onboard power supply control unit, Terminal 30a wiring junction	97
8. Onboard power supply control unit, Data bus diagnostic interface, Tail light and rear fog light bulb, left	98
507 - Highline System (Polo Limousine - Europe)	99-121
1. Highline System (Polo Limousine - Europe)	99
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	100
3. Ignition/starter switch, Onboard power supply control unit	101
4. Central locking lock unit, driver side, Convenience system central control unit, Onboard power supply control unit, Door warning lamp, left	102
5. Central locking lock unit, front passenger side, Convenience system central control unit, Onboard power supply control unit	103
6. Central locking lock unit, rear left, Central locking lock unit, rear right, Convenience system central control unit, Onboard power supply control unit	104
7. Anti-theft alarm ultra-sonic sensor, Ultra-sonic sensor control unit, Convenience system central control unit, Onboard power supply control unit, Tank filler flap locking motor	105
8. Interior locking switch, driver side, Alarm horn, Convenience system central control unit, Onboard power supply control unit, Interior lock switch illumination	106
9. Convenience system central control unit, Onboard power supply control unit	107
10. Brake light switch, Convenience system central control unit, Onboard power supply control unit, Convenience system central control unit	108
11. Front left window regulator switch, Front right window regulator switch, driver, Door control unit, driver side, Onboard power supply control unit, Window regulator switch light bulb, Window regulator motor, driver side	109
12. Rear left window regulator switch, driver, Door control unit, driver side, Onboard power supply control unit, Window regulator switch light bulb, Mirror adjustment motor, driver side, Mirror adjustment motor, driver side	110
13. Rear window regulator isolation switch, Mirror adjustment switch, Mirror adjustment change-over switch, Door control unit, driver side, Mirror adjustment switch illumination, Rear window regulator isolation switch illumination bulb	111
14. Window regulator switch, in front passenger door, Door control unit, front passenger side, Onboard power supply control unit, Window regulator switch light bulb	112
15. Rear left window regulator switch, in door, Door control unit, front passenger side, Door control unit, rear left, Window regulator switch light bulb, Mirror adjustment motor, front passenger side, Mirror adjustment motor, front passenger side	113
16. Door control unit, rear left, Onboard power supply control unit	114
17. Rear right window regulator switch, in door, Door control unit, rear right, Onboard power supply control unit, Window regulator switch light bulb, Window regulator motor, rear right	115

18. Vanity mirror contact switch, driver side, Vanity mirror contact switch, front passenger side, Onboard power supply control unit	Interior light, front	116
19. Interior monitor switch, Heated rear window button, Onboard power supply control unit, Interior monitoring off warning lamp, Button illumination, Deactivation of interior monitoring system switch illumination		117
20. Onboard power supply control unit, Tail light bulb, right, Tail light bulb, left, Turn signal bulb, rear left, Turn signal bulb, rear right, Brake light bulb, left, Brake light bulb, right		118
21. Rear lid handle release button, Luggage compartment light switch, Contact switch in lock cylinder for rear lid anti-theft alarm system/central locking system, Rear lid central locking switch, Side turn signal bulb, left, Side turn signal bulb, right		119
22. Anti-theft alarm/vermin repellent system contact switch, Onboard power supply control unit, Rear lid release motor		120
23. Sliding sunroof lift/lower switch, Sliding sunroof adjustment regulator, Sliding sunroof adjustment control unit, Onboard power supply control unit, Dash panel insert		121
508 - Light Switch (Polo Limousine)		122-132
1. Light Switch (Polo Limousine)		122
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit		123
3. Ignition/starter switch, Onboard power supply control unit		124
4. Onboard power supply control unit, Push-in bridge, Tail light bulb, right		125
5. Light switch, Front and rear fog light switch, Onboard power supply control unit, Fog light warning lamp, Light switch light bulb		126
6. Turn signal switch, Headlight dipper/flasher switch, Parking light switch, Onboard power supply control unit		127
7. Switches and instruments light regulator, Onboard power supply control unit, Switches and instruments regulator illumination bulb, Headlight range control adjuster		128
8. Onboard power supply control unit, Tail light bulb, right, Side light bulb, right, Dipped beam bulb, right, Main beam bulb, right, Number plate light		129
9. Onboard power supply control unit, Side light bulb, left, Dipped beam bulb, left, Main beam bulb, left		130
10. Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, Main beam warning lamp, Dash panel insert light bulb		131
11. Onboard power supply control unit, Data bus diagnostic interface		132
509 - Automatic gearbox (Polo Limousine)		133-140
1. Automatic gearbox (Polo Limousine)		133
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit		134
3. Ignition/starter switch, Onboard power supply control unit		135
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction		136
5. Multi-function switch, Automatic gearbox control unit, Onboard power supply control unit		137
6. Vehicle speed sender (inductive sender, 2 connections), Gearbox oil temperature sender, Automatic gearbox control unit, Onboard power supply control unit		138
7. Gearbox speed sender, Automatic gearbox control unit, Onboard power supply control unit		139
8. Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, Selector lever position indicator		140
510 - Radio (Polo Limousine)		141-147
1. Radio (Polo Limousine)		141
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit		142
3. Ignition/starter switch, Onboard power supply control unit		143
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction		144
5. Onboard power supply control unit, Radio, Treble loudspeaker, rear left, Bass loudspeaker, rear left, Treble loudspeaker, rear right, Bass loudspeaker, rear right		145
6. Onboard power supply control unit, Radio, Treble loudspeaker, front left, Bass loudspeaker, front left, Treble loudspeaker, front right, Bass loudspeaker, front right		146
7. Onboard power supply control unit, Radio, Aerial, Aerial amplifier		147
511 - Airbag - driver and passenger, side airbag - driver and passenger		148-156
1. Airbag - driver and passenger, side airbag - driver and passenger		148
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit		149
3. Ignition/starter switch, Onboard power supply control unit		150
4. Onboard power supply control unit, Terminal 30a wiring junction		151
5. Airbag coil connector/return spring with slip ring, Airbag control unit, Onboard power supply control unit, Airbag igniter, driver side, Side airbag igniter, driver side, Side airbag igniter, front passenger side		152
6. Airbag disabling key switch, front passenger side, Airbag control unit, Onboard power supply control unit, Airbag igniter 1, front passenger side		153
7. Side airbag crash sensor, driver side, Side airbag crash sensor, front passenger side, Oil pressure, coolant warning and rev. counter control unit, Belt tensioner igniter -1-, driver side, Belt tensioner igniter -2-, front passenger side		154

8. Airbag control unit, Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, Airbag warning lamp, Airbag disabled warning lamp, front passenger side	155
9. Onboard power supply control unit, Data bus diagnostic interface	156
512 - Headlight Washer System (only for Polo Limousine - Europe)	157-161
1. Headlight Washer System (only for Polo Limousine - Europe)	157
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	158
3. Ignition/starter switch, Onboard power supply control unit	159
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction	160
5. Headlight washer system relay, Onboard power supply control unit, Headlight washer system pump	161
513 - Cruise control system - Polo Limousine	162-166
1. Cruise control system - Polo Limousine	162
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	163
3. Ignition/starter switch, Onboard power supply control unit	164
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction	165
5. Cruise control system switch, Cruise control system (CCS) button (Set), Diode, in wiring harness, Onboard power supply control unit	166
514 - Anti-lock Brake System (ABS) (Polo Limousine)	167-176
1. Anti-lock Brake System (ABS) (Polo Limousine)	167
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	168
3. Ignition/starter switch	169
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction	170
5. ABS with EDL control unit, Onboard power supply control unit, Brake light bulb, left, ABS inlet valve, front right, ABS outlet valve, front right, ABS inlet valve, front left, ABS outlet valve, front left	171
6. ABS with EDL control unit, ABS return flow pump relay, Onboard power supply control unit	172
7. Front right speed sensor, Front left speed sensor , ABS with EDL control unit, ABS solenoid valve relay, Onboard power supply control unit, ABS inlet valve, rear right, ABS inlet valve, rear left, ABS outlet valve, rear right, ABS outlet valve, rear left	173
8. Rear right speed sensor, Rear left speed sensor, ABS with EDL control unit, Onboard power supply control unit	174
9. Brake light switch, Cruise control system brake pedal switch (diesel direct injection system), Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, ABS warning lamp, Dash panel insert light bulb	175
10. Brake lining/pad wear sender, front left, Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, Brake pad/lining warning lamp	176
515 - ABS system - Polo Limousine	177-186
1. ABS system - Polo Limousine	177
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	178
3. Ignition/starter switch , Onboard power supply control unit	179
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction	180
5. Front right speed sensor, Front left speed sensor , ABS with EDL control unit, ABS inlet valve, front right, ABS outlet valve, front right, ABS inlet valve, front left, ABS outlet valve, front left	181
6. Rear right speed sensor, Rear left speed sensor, ABS with EDL control unit, ABS return flow pump relay, Onboard power supply control unit, ABS return flow pump	182
7. ABS with EDL control unit, ABS solenoid valve relay, Onboard power supply control unit, ABS inlet valve, rear right , ABS inlet valve, rear left, ABS outlet valve, rear right , ABS outlet valve, rear left	183
8. Steering angle sender, Lateral acceleration sender, Yaw rate sender, Vehicle stabilising program switch valve -1- , Vehicle stabilising program switch valve -2-	184
9. Light switch, TCS/ESP button, ABS with EDL control unit, Traction control switch illumination	185
10. Control unit with display in dash panel insert, Onboard power supply control unit, Dash panel insert, ABS warning lamp, Immobilizer warning lamp, Light switch light bulb	186
516 - 1,4 ltr. - 4MV/74 kW, engine code BBZ (Polo Limousine)	187-205
1. 1,4 ltr. - 4MV/74 kW, engine code BBZ (Polo Limousine)	187
2. Battery, Starter, Alternator, Voltage regulator, Onboard power supply control unit	188
3. Ignition/starter switch, Onboard power supply control unit	189
4. Onboard power supply control unit, Data bus diagnostic interface, Terminal 30a wiring junction	190
5. Engine speed sender, Hall sender, Intake air temperature sender, Intake manifold pressure sender, Exhaust gas recirculation potentiometer, Onboard power supply control unit, 4MV (injection system) control unit, Exhaust gas recirculation valve	191
6. Knock sensor I, Throttle valve drive (electric power control), Throttle valve drive angle sender -1- (electric power control), Throttle valve drive angle sender -2- (electric power control), 4MV (injection system) control unit	192
7. Accelerator pedal position sender, Accelerator pedal position sender -2-, Onboard power supply control unit. 4MV (injection system) control unit	193

8. Speedometer sender (Hall sender on gearbox), Onboard power supply control unit, 4MV (injection system) control unit	194
9. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Onboard power supply control unit, 4MV (injection system) control unit	195
10. Lambda probe after catalytic converter, Onboard power supply control unit, 4MV (injection system) control unit, Lambda probe 1 heater, after catalytic converter	196
11. Lambda probe, Coolant temperature sender, Onboard power supply control unit, 4MV (injection system) control unit, Ignition coil 1 with output stage, Spark plug connector, Spark plug	197
12. Onboard power supply control unit, 4MV (injection system) control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plug	198-205
517 - Climatronic (Polo Limousine)	206-216
1. Climatronic (Polo Limousine)	206
2. Battery, starter, alternator, voltage regulator, Onboard power supply control unit	207
3. Ignition/starter switch, X contact relief relay	208
4. Climatronic control unit, fresh air blower, temperature sensor blower, fresh/recirculating air flap control motor	209
5. Climatronic control unit, temperature flap control motor, central flap control motor, control motor potentiometer, temperature flap	210
6. Climatronic control unit, Fresh air intake duct temperature sensor, vent temperature sender, centre and footwell, defroster, flap control motor	211
7. Climatronic control unit, Terminal 30a junction box	212
8. Climatronic control unit, compressor regulating valve, air conditioning system	213
9. Climatronic control unit, sunlight penetration photo sensor, high pressure sender, data bus diagnostic interface	214
10. Radiator fan control unit, Vehicle voltage control unit, Radiator fan	215
11. Radiator fan thermo-switch, radiator fan control unit	216
518 - Climatic (Polo Limousine)	217-226
1. Climatic (Polo Limousine)	217
2. Battery, starter, alternator, voltage regulator, Onboard power supply control unit	218
3. Ignition/starter switch, X contact relief relay	219
4. Air conditioning system control unit, fresh air blower, fresh air blower switch, dash panel temperature sensor, fresh air/air recirculating flap switch	220
5. Vent temperature sender, centre, footwell, evaporator, temperature flap control motor, potentiometer, air conditioner switch	221
6. Air conditioning system control unit, Onboard power supply control unit, terminal 30a junction box	222
7. Air conditioning system control unit, Onboard power supply control unit	223
8. Air conditioning system control unit, high pressure sender, pressure control valve, air conditioning system, data bus diagnostic interface	224
9. Radiator fan thermo-switch, Radiator fan control unit, Vehicle voltage control unit, Radiator fan	225
10. Radiator fan control unit, Onboard power supply control unit	226
519 - Power assisted steering (Polo Limousine)	227-228
1. Power assisted steering (Polo Limousine)	227
2. Power steering control unit, power steering sensor, servotronic warning lamp	228
520 - Multifunction display (MFI) (Polo Limousine)	229-230
1. Multifunction display (MFI) (Polo Limousine)	229
2. Multifunction display, function selection switch, reset button, ambient temperature sensor	230
521 - Electrically adjustable and heated exterior mirror (with manually operated windows) (Polo Limousine)	231-233
1. Electrically adjustable and heated exterior mirror (with manually operated windows) (Polo Limousine)	231
2. Mirror adjustment switch, exterior mirror heater switch, heated exterior mirror, driver door mirror adjustment motor	232
3. Heated exterior mirror relay, mirror adjustment motor, front passenger door heated exterior mirror	233
522 - Headlight washer system -HWS- (Polo Limousine)	234-235
1. Headlight washer system -HWS- (Polo Limousine)	234
2. Onboard supply control unit, headlight washer system relay, headlight washer system pump	235
523 - Day driving lights (Polo Limousine)	236-242
1. Day driving lights (Polo Limousine)	236
2. Light switch	237
3. Turn signal switch, hazard warning light button, onboard power supply control unit	238
4. Onboard supply control unit, left headlight, fuse holder, turn signals	239
5. Onboard supply control unit, right headlight, fuse holder, turn signals	240
6. Switches and instruments illumination regulator. headlight range control regulator. headlight	241

range control motor, fuses	
7. Brake light switch, reversing light switch, left tail light, right tail light	242
524 - Telephone preparation (Polo Limousine)	243-246
1. Telephone preparation (Polo Limousine)	243
2. Mobile telephone operating electronics control unit, telephone microphone, fuses	244
3. Mobile telephone operating electronics control unit, control unit with display for radio and navigation, radio, aerial, telephone bracket	245
4. Mobile telephone operating electronics control unit, telephone brackets	246
525 - 1.9l/47kW SDI, engine code ASY(Polo Limousine)	247-255
1. 1.9l/47kW SDI, engine code ASY(Polo Limousine)	247
2. Battery, starter, alternator, radiator fan	248
3. Ignition and starter switch, heater element for auxiliary air heating	249
4. Fuel pump relay, diesel direct injection system control unit, fuses	250
5. Brake light switch, clutch pedal switch, intake manifold temperature sender, accelerator pedal position sender, diesel direct injection system control unit	251
6. Fuel temperature sender, modulating piston movement sender, exhaust gas recirculation valve, commencement of injection valve, fuel shut-off valve, metering adjuster, intake manifold flap motor	252
7. Engine speed sender, needle lift sender, diesel direct injection system control unit, data bus diagnostic interface	253
8. Cruise control system switch, coolant temperature sender, diesel direct injection system control unit, engine glow plugs	254
9. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, dash panel insert	255
526 - Radio/navigation system (Polo Limousine)	256-260
1. Radio/navigation system (Polo Limousine)	256
2. Control unit with display for radio and navigation system, fuses	257
3. Mobile telephone operating electronics control unit, control unit with display for radio and navigation, aerials, front right loudspeaker	258
4. Control unit with display for radio and navigation system, rear loudspeaker	259
5. Control unit with display for radio and navigation system, CD changer	260
527 - Seat heating without lateral support heater (Polo Limousine)	261-263
1. Seat heating without lateral support heater (Polo Limousine)	261
2. Heated driver seat regulator, heated driver seat cushion	262
3. Heated front passenger seat regulator, heated front passenger seat cushion	263
528 - Seat heating with lateral support heater (Polo Limousine)	264-266
1. Seat heating with lateral support heater (Polo Limousine)	264
2. Heated driver seat regulator, heated driver seat cushion	265
3. Heated front passenger seat regulator, heated front passenger seat cushion	266
701 - -Fitting location: Fitting of used connectors at their locations (Polo Limousine) - 3	267-269
1. Fitting of used connectors at their locations (Polo Limousine)	267-269
1.1 Wiring assembly connectors - location T1, T2	267
1.2 Wiring assembly connectors - location T3, T4, T5	267
1.3 Wiring assembly connectors - location T6, T8, T9	268
1.4 Wiring assembly connectors - location T10, T11, T12, T16	269
1.5 Wiring assembly connectors - location T14, T17, T18, T21, T28, T32, T40, T41, T42, T52, T81	269
702 - -Fitting location: Fuses, Connectors, screwed connections and earth points (Polo Limousine) - 3	270-275
1. Fuses, Connectors, screwed connections and earth points (Polo Limousine)	270-275
1.1 Fuse distribution in battery fuse holder	270-273
1.1.1 Fuses	270
1.1.2 Fuses	271
1.1.3 Fuses	272
1.1.4 Fuses	273
1.2 Interior wiring harness connectors, front-left of motor compartment T12a	274
1.2.1 Connectors	274
1.3 Onboard electrical network command device connectors	275
1.3.1 Connectors	275
703 - -Fitting location: Connectors, screwed connections and earth points (Polo Limousine) - 3	276-281
1. Connectors, screwed connections and earth points (Polo Limousine)	276-281
1.1 Interior wiring harness connectors, dash panel	276
1.1.1 Connectors	276
1.2 Interior wiring harness connectors, dash panel	276
1.2.1 Connectors	276
1.3 Interior wiring harness connector, dash panel left	277
1.3.1 Connector	277
1.4 Interior wiring harness connectors. dash panel roof	277

1.4.1 Connectors	277
1.5 Interior wiring harness connectors, at Steering wheel	278
1.5.1 Connectors	278
1.6 Interior wiring harness connectors, under driver seat	278
1.6.1 Connectors	278
1.7 Interior wiring harness connector, dash panel	279
1.7.1 Connector	279
1.8 Interior wiring harness connector, dash panel	279
1.8.1 Connector	279
1.9 Interior wiring harness connectors, dash panel	280
1.9.1 Connectors	280
1.10 Interior wiring harness connectors, near Steering wheel	280
1.10.1 Connectors	280
1.11 Interior wiring harness connectors, on radio	281
1.11.1 Connectors	281
704 - -Fitting location: Connectors, screwed connections and earth points (Polo Limousine) - 3	282-284
1. Connectors, screwed connections and earth points (Polo Limousine)	282-284
1.1 Interior wiring harness connectors, rear	282
1.1.1 Connectors	282
1.2 Rear lid wiring harness connectors, rear lid	282
1.2.1 Connectors	282
1.3 Rear lid wiring harness connectors, rear lid	283
1.3.1 Connectors	283
1.4 Interior wiring harness connectors, boot lid/tailgate	283
1.4.1 Connectors	283
1.5 Interior wiring harness connectors, in luggage compartment, left	284
1.5.1 Connectors	284
705 - -Fitting location: Connectors, screwed connections and earth points (Polo Limousine) - 3	285-296
1. Connectors, screwed connections and earth points (Polo Limousine)	285-296
1.1 Engine compartment wiring harness connectors, front right	285
1.1.1 Connectors	285
1.2 Engine compartment wiring harness connectors, front left	285
1.2.1 Connectors	285
1.3 Engine compartment wiring harness connectors, front right	286
1.3.1 Connectors	286
1.4 Engine wiring harness connectors, front	286
1.4.1 Connectors	286
1.5 Engine compartment wiring harness connectors, front right	287
1.5.1 Connectors	287
1.6 Engine wiring harness connectors, front	287
1.6.1 Connectors	287
1.7 Engine compartment wiring harness connectors, front left	288
1.7.1 Connectors	288
1.8 Engine compartment wiring harness connector, front right	288
1.8.1 Connectors	288
1.9 Alternator wiring harness/ engine compartment connectors, front right	289
1.9.1 Connectors	289
1.10 Engine compartment wiring harness connector, front left	289
1.10.1 Connector	289
1.11 Engine compartment wiring harness connectors, front left	290
1.11.1 Connectors	290
1.12 Engine wiring harness/ engine compartment connectors, front left	290
1.12.1 Connectors	290
1.13 Engine wiring harness connectors, front centre	291
1.13.1 Connector	291
1.14 Engine wiring harness connectors, front centre	291
1.14.1 Connectors	291
1.15 Engine wiring harness connectors, front	292
1.15.1 Connectors	292
1.16 Engine wiring harness connector, front right	292
1.16.1 Connector	292
1.17 Engine wiring harness connectors, front	293
1.17.1 Connectors	293
1.18 Engine wiring harness/Engine pre wiring harness connectors, front right	293
1.18.1 Connector	293
1.19 Right headlight connectors	294

1.19.1 Connectors	294
1.20 Left headlight connectors	294
1.20.1 Connector	294
1.21 Passengers harness connectors, engine compartment	295
1.21.1 Connectors	295
1.22 Engine compartment wiring harness connectors, front right	295
1.22.1 Connector	295
1.23 Air conditioning harness/Engine compartment wiring harness connectors, front right	296
1.23.1 Connectors	296
1.24 Passenger harness connectors, front right	296
1.24.1 Connector	296
706 - -Fitting location: Connectors, screwed connections and earth points (Polo Limousine) - 3	297-300
1. Connectors, screwed connections and earth points (Polo Limousine)	297-300
1.1 Interior wiring harness connectors, right B-pillar	297
1.1.1 Connectors	297
1.2 Interior wiring harness connectors, left B-pillar	297
1.2.1 Connectors	297
1.3 Wiring harness connectors, rear right wing door	298
1.3.1 Connectors	298
1.4 Wiring harness connectors, rear left wing door	298
1.4.1 Connectors	298
1.5 Wiring harness connectors, passenger door	299
1.5.1 Connectors	299
1.6 Interior wiring harness connectors, right A-pillar	299
1.6.1 Connectors	299
1.7 Wiring harness connectors, driver door	300
1.7.1 Connectors	300
1.8 Interior wiring harness connectors, left A-pillar	300
1.8.1 Connectors	300
707 - -Fitting location: Connectors, screwed connections and earth points (Polo Limousine) - 3	301-302
1. Connectors, screwed connections and earth points (Polo Limousine)	301-302
1.1 Compartment wiring harness connector, front left wheel	301
1.1.1 Connector	301
1.2 Compartment wiring harness connector, front right wheel	301
1.2.1 Connector	301
1.3 Interior wiring harness connector, rear left wheel	302
1.3.1 Connector	302
1.4 Interior wiring harness connector, rear right wheel	302
1.4.1 Connector	302