

| | |
|---|-------|
| 001 - Basic equipment | 1-19 |
| 1. Basic equipment | 1 |
| 2. Battery, starter, ignition/starter switch, fuses in battery fuse holder | 2 |
| 3. Light switch, front and rear fog light switch, x-contact relief relay | 3 |
| 4. Intermittent wiper switch, rear wiper switch, intermittent wipe regulator, windscreen and rear window washer pump | 4 |
| 5. Turn signal switch, headlight dipper and flasher switch, horn plate | 5 |
| 6. Left headlight, fuse holder, exterior mirror turn signal | 6 |
| 7. Left headlight, fuse holder, exterior mirror turn signal | 7 |
| 8. Switch and instrument illumination regulator, headlight range control regulator, headlight range control motor | 8 |
| 9. Right tail light, left tail light, high-level brake light bulb | 9 |
| 10. Reversing light switch, rear right fog light bulb, left reversing light bulb, right reversing light bulb, number plate light | 10 |
| 11. Hazard warning lights button; heated rear window button | 11 |
| 12. Data bus diagnostic interface, fuses, diagnostic connection | 12 |
| 13. Heated rear window control relay, fuses, heated rear window | 13 |
| 14. Treble horn, bass horn, horn relay, fuses | 14 |
| 15. Brake light switch, blocking diode, fuses, cigarette lighter, 12 V socket | 15 |
| 16. Fresh air blower switch, fresh air blower, fresh air and air recirculation flap control motor | 16 |
| 17. Bonnet contact switch, automatic intermittent wash and wipe relay, windscreen wiper motor | 17 |
| 18. Immobiliser reader coil, driver side belt switch, control unit in dash panel insert, immobiliser control unit, warning lamps | 18 |
| 19. Handbrake warning switch, brake fluid level warning contact, coolant shortage indicator sender, windscreen washer fluid level sender, front left brake pad wear sender, warning lamps | 19 |
| 002 - Convenience electronics with LIN bus | 20-32 |
| 1. Convenience electronics with LIN bus | 20 |
| 2. Bonnet contact switch, fuses | 21 |
| 3. Fuses, Anti-theft alarm system horn, alarm horn, Convenience system central control unit | 22 |
| 4. Interior monitoring deactivation switch, anti-theft alarm ultrasonic sensor, convenience system central control unit, interior monitoring off warning lamp | 23 |
| 5. Driver side interior locking switch, driver side central locking lock unit, convenience system central control unit, central locking deadlock function warning lamp -SAFE- | 24 |
| 6. Front passenger side central locking lock unit, convenience system central control unit, tank filler flap locking motor | 25 |
| 7. Rear left central locking lock unit, rear right central locking lock unit, convenience system central control unit | 26 |
| 8. Sliding sunroof adjustment regulator, sunroof button, sliding sunroof adjustment control unit, convenience system central control unit, sliding sunroof motor | 27 |
| 9. Rear window regulator isolation switch, window regulator switch, driver door control unit, driver side window regulator motor | 28 |
| 10. Window regulator switch in front passenger door, front passenger door control unit, front passenger side window regulator motor | 29 |
| 11. Rear window regulator switch, in door, rear door control unit, rear window regulator motor | 30 |
| 12. Luggage compartment light switch, contact switch in lock cylinder for rear lid, rear lid central locking switch, luggage compartment light | 31 |
| 13. Rear lid remote release button, rear lid handle release button, button illumination bulb, rear lid release motor | 32 |
| 003 - Fuse concept | 33-48 |
| 1. Fuse concept | 33 |
| 2. Radio, fuses | 34 |
| 3. Fuses 8, 26, 33 on fuse holder B | 35 |
| 4. Fuses 27, 29 on fuse holder B | 36 |
| 5. Fuses 27, 29 on fuse holder B | 37 |
| 6. Fuses 51, 52 on fuse holder B | 38 |
| 7. Fuses 16, 17, 18 on fuse holder B | 39 |
| 8. Driver door control unit, dipped headlight control unit, mobil telephone operating electronics control unit | 40 |
| 9. Fuses 19, 20, 45 on fuse holder B | 41 |
| 10. Fuses 7, 15, 23 on fuse holder B | 42 |
| 11. Fuses 1, 11, 24, 34, 36 on fuse holder B | 43 |
| 12. Fuses 3, 4, 5 on fuse holder B | 44 |
| 13. Fuses 2, 12, 13 on fuse holder B | 45 |
| 14. Fuses 6, 10, 43, 54 on fuse holder B | 46 |
| 15. Fuses 21, 22, 44 on fuse holder B | 47 |
| 16. Fuses 9. 14. 25. 37. 40. 41. 42 on fuse holder B | 48 |

| | |
|---|-------|
| 004 - Radio/navigation system | 49-53 |
| 1. Radio/navigation system | 49 |
| 2. Control unit with display for radio and navigation, fuses | 50 |
| 3. Control unit with display for radio and navigation, GPS aerial, Front loudspeaker | 51 |
| 4. Control unit with display for radio and navigation, GPS aerial, front loudspeaker | 52 |
| 5. Control unit with display for radio and navigation | 53 |
| 005 - Radio systems RCD 200 | 54-58 |
| 1. Radio systems RCD 200 | 54 |
| 2. Radio, fuses | 55 |
| 3. Mobile telephone operating electronics control unit, radio, aerial, front loudspeaker | 56 |
| 4. Radio, rear loudspeaker | 57 |
| 5. Radio, CD changer | 58 |
| 006 - Automatic gearbox (001) | 59-63 |
| 1. Automatic gearbox (001) | 59 |
| 2. Battery, starter, Alternator, voltage regulator, starter inhibitor relay, reversing light relay, onboard supply control unit | 60 |
| 3. Multifunction switch, Automatic gearbox control unit, onboard supply control unit | 61 |
| 4. Vehicle speed sender, gearbox oil temperature sender, automatic gearbox control unit, onboard supply control unit, solenoid valves, diagnostic connection | 62 |
| 5. Gearbox speed sender, automatic gearbox control unit, Selector lever position P/N warning lamp, Selector lever display illumination bulb, Selector lever lock solenoid | 63 |
| 007 - Radio | 64-68 |
| 1. Radio | 64 |
| 2. Radio, fuses | 65 |
| 3. Mobile telephone operating electronics control unit, radio, aerial, front loudspeaker | 66 |
| 4. Radio, rear loudspeaker | 67 |
| 5. Radio, aerial, data bus diagnostic interface, diagnostic connection | 68 |
| 008 - CAN bus network (drive) | 69-71 |
| 1. CAN bus network (drive) | 69 |
| 2. Airbag control unit, control unit in dash panel insert, Onboard supply control unit, data bus diagnostic interface, diagnostic connection | 70 |
| 3. Steering angle sender, engine control unit, ABS control unit, automatic gearbox control unit, power steering control unit, Connection (high/low bus), in engine compartment wiring harness | 71 |
| 009 - CAN bus network (convenience) | 72-74 |
| 1. CAN bus network (convenience) | 72 |
| 2. Climatronic control unit, control unit in dash panel insert, air conditioning system control unit, data bus diagnostic interface, diagnostic connection | 73 |
| 3. Driver door control unit, front passenger door control unit, convenience system central control unit, control unit with display for radio and navigation, radio, connection 1 (LIN bus) | 74 |
| 010 - Cruise control system | 75-76 |
| 1. Cruise control system | 75 |
| 2. Cruise control system switch, cruise control system (CCS) SET button, onboard supply control unit | 76 |
| 011 - Telephone preparation | 77-80 |
| 1. Telephone preparation | 77 |
| 2. Mobile telephone operating electronics control unit, fuses | 78 |
| 3. Mobile telephone operating electronics control unit, control unit with display for radio and navigation, radio, aerial, telephone bracket | 79 |
| 4. Mobile telephone operating electronics control unit, telephone bracket | 80 |
| 012 - Trailer operation | 81-84 |
| 1. Trailer operation | 81 |
| 2. Onboard supply control unit, trailer socket | 82 |
| 3. Trailer socket, rear fog light cut-out contact switch | 83 |
| 4. Control unit in dash panel insert, rear fog light warning lamp, trailer operation warning lamp | 84 |
| 013 - Anti-lock brake system (ABS) | 85-91 |
| 1. Anti-lock brake system (ABS) | 85 |
| 2. Brake light switch, brake pedal switch, fuses | 86 |
| 3. ABS control unit, fuses | 87 |
| 4. Speed sensors, ABS control unit, ABS outlet valves, ABS inlet valves | 88 |
| 5. Lateral acceleration sender, yaw rate sender, ABS control unit, valves, ABS return flow pump | 89 |
| 6. Traction control system switch, TCS and ESP button, tyre pressure monitor display button, ABS control unit | 90 |
| 7. Steering angle sender, ABS control unit, control unit in dash panel insert | 91 |
| 014 - Automatic gearbox (09G) | 92-99 |
| 1. Automatic gearbox (09G) | 92 |
| 2. Battery, starter, alternator, starter inhibitor relay, reversing light relay | 93 |
| 3. Automatic gearbox control unit. fuses | 94 |

| | |
|---|---------|
| 4. Automatic gearbox control unit, multifunction switch | 95 |
| 5. Automatic gearbox control unit, solenoid valves | 96 |
| 6. Automatic gearbox control unit, gearbox oil temperature sender, gearbox input speed sender, gearbox output speed sender | 97 |
| 7. Tiptronic switch, selector lever lock solenoid, automatic gearbox control unit | 98 |
| 8. Automatic gearbox control unit, control unit in dash panel insert, data bus diagnostic interface | 99 |
| 015 - Coming Home | 100-102 |
| 1. Coming Home | 100 |
| 2. Dipped headlight control unit, on/off (Coming home system) | 101 |
| 3. Onboard supply control unit | 102 |
| 016 - Airbags | 103-106 |
| 1. Airbags | 103 |
| 2. Airbag control unit, driver side airbag igniter, side airbag igniter on driver side, driver side curtain airbag igniter | 104 |
| 3. Airbag control unit, key operated switch to deactivate front passenger side airbag, front passenger side airbag igniter 1, front passenger side curtain airbag igniter | 105 |
| 4. Airbag control unit, crash sensors, driver seat belt tensioner igniter 1, front passenger seat belt tensioner igniter 1 | 106 |
| 017 - Airbags | 107-110 |
| 1. Airbags | 107 |
| 2. Airbag control unit, Driver side airbag igniter, side airbag igniter on driver side, driver side curtain airbag igniter | 108 |
| 3. Airbag control unit, front passenger side airbag igniter 1, side airbag igniter on front passenger side, front passenger side curtain airbag igniter | 109 |
| 4. Airbag control unit, crash sensors, driver seat belt tensioner igniter 1, front passenger seat belt tensioner igniter 1 | 110 |
| 018 - Front seat heating without cushion lateral support heater | 111-113 |
| 1. Front seat heating without cushion lateral support heater | 111 |
| 2. Heated driver seat regulator, heated seat cushion for driver seat | 112 |
| 3. Heated front passenger seat regulator, heated seat cushion for front passenger seat | 113 |
| 019 - Headlight washer system (HWS) | 114-115 |
| 1. Headlight washer system (HWS) | 114 |
| 2. Headlight washer system relay, headlight washer system pump | 115 |
| 020 - Power assisted steering | 116-118 |
| 1. Power assisted steering | 116 |
| 2. Power steering sensor, power steering control unit, steering hydraulics pump | 117 |
| 3. Control unit in dash panel insert, servotronic warning lamp | 118 |
| 021 - Front seat heating with cushion lateral support heater | 119-121 |
| 1. Front seat heating with cushion lateral support heater | 119 |
| 2. Heated driver seat regulator, heated seat cushion for driver seat | 120 |
| 3. Heated front passenger seat regulator, heated seat cushion for front passenger seat | 121 |
| 022 - Front fog lights | 122-123 |
| 1. Front fog lights | 122 |
| 2. Left fog light bulb, right fog light bulb | 123 |
| 023 - Climatic | 124-127 |
| 1. Climatic | 124 |
| 2. Fresh air blower switch, fresh air blower series resistor with overheating fuse, fresh air and air recirculation flap control motor, fresh air blower | 125 |
| 3. Air conditioning system switch, temperature sender, potentiometer for temperature selection rotary knob, temperature flap control motor | 126 |
| 4. High-pressure sender, air conditioner compressor regulating valve | 127 |
| 024 - Climatronic | 128-132 |
| 1. Climatronic | 128 |
| 2. Sunlight penetration photosensor, fresh air blower control unit, air flow flap control motor | 129 |
| 3. Centre flap control motor, defroster flap control motor | 130 |
| 4. Temperature sender, temperature flap control motor | 131 |
| 5. High-pressure sender, air conditioner compressor regulating valve | 132 |
| 025 - Electrically adjustable and heated exterior mirror | 133-137 |
| 1. Electrically adjustable and heated exterior mirror | 133 |
| 2. Fuses | 134 |
| 3. Mirror adjustment switch, driver side mirror adjustment motor, driver side exterior mirror turn signal bulb, heated exterior mirror on driver side | 135 |
| 4. Fold-in mirror contact switch, folding exterior mirror control unit, fold-in mirror motor | 136 |
| 5. Front passenger side exterior mirror turn signal bulb, front passenger side mirror adjustment motor, heated exterior mirror on front passenger side | 137 |
| 026 - Automatic anti-dazzle interior mirror. rain sensor | 138-139 |

| | |
|--|---------|
| 1. Automatic anti-dazzle interior mirror, rain sensor | 138 |
| 2. Regensensor, automatisch abblendbarer Innenspiegel | 139 |
| 027 - Heated washer jet | 140-141 |
| 1. Heated washer jet | 140 |
| 2. Left washer jet heater element, right washer jet heater element | 141 |
| 028 - Interior lights | 142-146 |
| 1. Interior lights | 142 |
| 2. Front interior light, rear interior light, front passenger side illuminated vanity mirror, driver side illuminated vanity mirror | 143 |
| 3. Driver door contact switch | 144 |
| 4. Front passenger door contact switch | 145 |
| 5. Luggage compartment light switch, luggage compartment light | 146 |
| 029 - Multifunction display (MFI) | 147-148 |
| 1. Multifunction display (MFI) | 147 |
| 2. Function selection switch, ambient temperature sensor, multifunction indicator | 148 |
| 030 - Airbags | 149-150 |
| 1. Airbags | 149 |
| 2. Airbag control unit, driver side airbag igniter, front passenger side airbag igniter 1 | 150 |
| 031 - Airbags | 151-153 |
| 1. Airbags | 151 |
| 2. Key operated switch to deactivate front passenger side airbag, driver side airbag igniter, front passenger side airbag igniter 1 | 152 |
| 3. Airbag warning lamp | 153 |
| 032 - 1.4 l/59 kW Turbo diesel engine with unit injectors, engine code BNV | 154-164 |
| 1. 1.4 l/59 kW Turbo diesel engine with unit injectors, engine code BNV | 154 |
| 2. Battery, starter, alternator | 155 |
| 3. Ignition/starter switch, low heat output relay, high heat output relay, auxiliary air heater element | 156 |
| 4. Engine control unit, fuel pump relay, terminal 30 voltage supply relay | 157 |
| 5. Engine control unit, brake light switch, clutch pedal switch, accelerator position sender | 158 |
| 6. Engine control unit, coolant temperature sender, fuel temperature sender, intake manifold temperature sender, charge air pressure sender | 159 |
| 7. Engine control unit, hall sender, exhaust gas recirculation valve, charge pressure control solenoid valve, intake manifold flap motor | 160 |
| 8. Engine control unit, engine speed sender, data bus diagnostic interface | 161 |
| 9. Engine control unit, air mass meter | 162 |
| 10. Engine control unit, glow plug relay, engine glow plug, unit injector valve, No. 1, 2, 3 cyl. | 163 |
| 11. Oil pressure switch, fuel gauge sender, fuel gauge, speedometer sender, oil level and oil temperature sender, control unit in dash panel insert | 164 |
| 033 - 1.9 l/74 kW Turbo diesel engine with unit injectors, engine code AXR, ATD | 165-176 |
| 1. 1.9 l/74 kW Turbo diesel engine with unit injectors, engine code AXR, ATD | 165 |
| 2. Battery, starter, alternator | 166 |
| 3. Ignition/starter switch | 167 |
| 4. Low heat output relay, high heat output relay, auxiliary air heater element | 168 |
| 5. Engine control unit, fuel pump relay, terminal 30 voltage supply relay | 169 |
| 6. Engine control unit, brake pedal switch, clutch pedal switch, accelerator position sender | 170 |
| 7. Engine control unit, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, fuel temperature sender | 171 |
| 8. Engine control unit, valves, hall sender, heater element for crankcase breather | 172 |
| 9. Engine control unit, engine speed sender, intake manifold flap motor | 173 |
| 10. Engine control unit, cruise control system switch, air mass meter | 174 |
| 11. Engine control unit, glow plug relay, engine glow plug, unit injector valve, No. 1, 2, 3, 4 cyl. | 175 |
| 12. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, control unit in dash panel insert | 176 |
| 034 - 1.4 l Motronic/61 kW, engine code BLM | 177-185 |
| 1. 1.4 l Motronic/61 kW, engine code BLM | 177 |
| 2. Battery, starter, alternator, ignition/starter switch | 178 |
| 3. Fuel pump relay, fuel supply relay, fuses | 179 |
| 4. Engine control unit, fuses | 180 |
| 5. Engine control unit, engine speed sender, hall sender, intake air temperature sender, coolant temperature sender, intake manifold pressure sender | 181 |
| 6. Engine control unit, brake pedal switch, clutch pedal switch, accelerator position sender, throttle valve module | 182 |
| 7. Engine control unit, ignition transformer, lambda probe, activated charcoal filter solenoid valve 1 | 183 |
| 8. Engine control unit, knock sensor 1, injectors cylinder | 184 |

| | |
|--|---------|
| 9. Oil pressure switch, fuel gauge sender, fuel system pressurisation pump, speedometer sender, control unit in dash panel insert | 185 |
| 035 - 2.0 l Motronic/85 kW, engine code BBX | 186-195 |
| 1. 2.0 l Motronic/85 kW, engine code BBX | 186 |
| 2. Battery, starter, alternator | 187 |
| 3. Ignition/starter switch, fuel pump relay, fuel supply relay, fuses | 188 |
| 4. Engine control unit, terminal 30 voltage supply relay, fuses | 189 |
| 5. Engine control unit, knock sensor 1, knock sensor 2, engine speed sender, coolant temperature sender | 190 |
| 6. Engine control unit, hall sender, intake air temperature sender, intake manifold pressure sender | 191 |
| 7. Engine control unit, brake pedal switch, clutch pedal switch, accelerator position sender, throttle valve module | 192 |
| 8. Engine control unit, ignition transformer, lambda probe, activated charcoal filter solenoid valve | 193 |
| 9. Engine control unit, injectors cylinder | 194 |
| 10. Oil pressure switch, fuel gauge sender, fuel system pressurisation pump, speedometer sender, control unit in dash panel insert | 195 |
| 036 - 1.4 l/59 kW Turbo diesel engine with unit injectors, engine code BMS | 196-207 |
| 1. 1.4 l/59 kW Turbo diesel engine with unit injectors, engine code BMS | 196 |
| 2. Battery, starter, alternator | 197 |
| 3. Ignition/starter switch, low heat output relay, high heat output relay, auxiliary air heater element | 198 |
| 4. Engine control unit, fuel pump relay, terminal 30 voltage supply relay, fuses | 199 |
| 5. Engine control unit, brake light switch, clutch pedal switch, accelerator position sender | 200 |
| 6. Engine control unit, coolant temperature sender, fuel temperature sender, temperature sender after particulate filter, hall sender | 201 |
| 7. Engine control unit, engine speed sender, exhaust gas recirculation valve, intake manifold flap motor | 202 |
| 8. Engine control unit, data bus diagnostic interface, charge pressure control solenoid valve, heater element for crankcase breather | 203 |
| 9. Engine control unit, air mass meter, intake manifold pressure sender, intake manifold temperature sender | 204 |
| 10. Engine control unit, lambda probe, exhaust gas pressure sensor 1, exhaust temperature sender 1, exhaust temperature sender 2 | 205 |
| 11. Engine control unit, automatic glow period control unit, unit injector valve, No. 1, 2, 3 cyl., engine glow plug | 206 |
| 12. Oil pressure switch, fuel gauge sender, fuel gauge, oil level and oil temperature sender, control unit in dash panel insert | 207 |
| 037 - 1.8 l Motronic/110 kW, engine code BJX | 208-219 |
| 1. 1.8 l Motronic/110 kW, engine code BJX | 208 |
| 2. Battery, starter, alternator | 209 |
| 3. Ignition/starter switch, fuel pump relay, fuel supply relay, fuses | 210 |
| 4. Engine control unit, terminal 30 voltage supply relay, coolant pump relay, continued coolant circulation pump, fuses | 211 |
| 5. Engine control unit, ignition coils with output stage, spark plugs | 212 |
| 6. Engine control unit, intake air temperature sender, coolant temperature sender, knock sensor 1, knock sensor 2 | 213 |
| 7. Engine control unit, engine speed sender, hall sender, intake manifold pressure sender | 214 |
| 8. Engine control unit, brake pedal switch, clutch pedal switch, accelerator position sender, throttle valve module | 215 |
| 9. Engine control unit, lambda probe, lambda probe after catalytic converter | 216 |
| 10. Engine control unit, secondary air pump relay, secondary air pump motor, valves | 217 |
| 11. Engine control unit, injectors, data bus diagnostic interface, air mass meter | 218 |
| 12. Oil pressure switch, fuel gauge, oil level and oil temperature sender, control unit in dash panel insert | 219 |
| 038 - 1.9 l/96 kW Turbo diesel engine with unit injectors, engine code ASZ | 220-231 |
| 1. 1.9 l/96 kW Turbo diesel engine with unit injectors, engine code ASZ | 220 |
| 2. Battery, starter, alternator | 221 |
| 3. Ignition/starter switch | 222 |
| 4. Low heat output relay, high heat output relay, auxiliary air heater element | 223 |
| 5. Engine control unit, fuel pump relay, terminal 30 voltage supply relay | 224 |
| 6. Engine control unit, brake pedal switch, clutch pedal switch, accelerator position sender | 225 |
| 7. Engine control unit, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, fuel temperature sender | 226 |
| 8. Engine control unit, valves, hall sender, heater element for crankcase breather | 227 |
| 9. Engine control unit, engine speed sender | 228 |

| | |
|---|---------|
| 10. Engine control unit, cruise control system switch, air mass meter | 229 |
| 11. Engine control unit, glow plug relay, engine glow plug, unit injector valve, No. 1, 2, 3, 4 cyl. | 230 |
| 12. Oil pressure switch, fuel gauge, oil level and oil temperature sender, control unit in dash panel insert | 231 |
| 039 - 1.9 l/96 kW Turbo diesel engine with unit injectors, engine code BLT | 232-243 |
| 1. 1.9 l/96 kW Turbo diesel engine with unit injectors, engine code BLT | 232 |
| 2. Battery, starter, alternator | 233 |
| 3. Ignition/starter switch | 234 |
| 4. Low heat output relay, high heat output relay, auxiliary air heater element | 235 |
| 5. Engine control unit, fuel pump relay, terminal 30 voltage supply relay | 236 |
| 6. Engine control unit, brake pedal switch, clutch pedal switch, accelerator position sender | 237 |
| 7. Engine control unit, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, fuel temperature sender | 238 |
| 8. Engine control unit, valves, hall sender, heater element for crankcase breather | 239 |
| 9. Engine control unit, engine speed sender, intake manifold flap motor | 240 |
| 10. Engine control unit, cruise control system switch, air mass meter | 241 |
| 11. Engine control unit, engine glow plug, unit injector valve, No. 1, 2, 3, 4 cyl., glow plug activation control unit | 242 |
| 12. Oil pressure switch, fuel gauge, oil level and oil temperature sender, control unit in dash panel insert | 243 |
| 040 - 1.6 l Motronic/77 kW, engine code BTS | 244-254 |
| 1. 1.6 l Motronic/77 kW, engine code BTS | 244 |
| 2. Battery, starter, alternator | 245 |
| 3. Ignition/starter switch, fuel pump relay, fuel supply relay, fuses | 246 |
| 4. Engine control unit, terminal 30 voltage supply relay, fuses | 247 |
| 5. Engine control unit, ignition coils with output stage, spark plugs | 248 |
| 6. Engine control unit, engine speed sender, intake air temperature sender, knock sensor 1, coolant temperature sender, intake manifold pressure sender | 249 |
| 7. Engine control unit, throttle valve module, hall sender | 250 |
| 8. Engine control unit, lambda probe, lambda probe after catalytic converter | 251 |
| 9. Engine control unit, activated charcoal filter solenoid valve 1, camshaft control valve 1, clutch pedal switch, brake pedal switch | 252 |
| 10. Engine control unit, injectors, data bus diagnostic interface | 253 |
| 11. Oil pressure switch, fuel gauge, speedometer sender, oil level and oil temperature sender, control unit in dash panel insert | 254 |