



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Types of battery	1
1.2 Warning notices and safety regulations	1
1.3 Battery terminal connection	1
2 Checking battery	2
3 Charging battery	3
4 Disconnecting and reconnecting batteries	4
4.1 Disconnecting battery	4
4.2 Connecting battery	5
5 Removing and installing battery	8
5.1 Removing battery	8
5.2 Installing battery	8
5.3 Removing and installing battery console (vehicles as of 04.05)	9
6 Specified torques: battery	13
7 Starter	14
7.1 Checking starter B	14
7.2 Removing and installing starter, manual gearbox	14
7.3 Removing and installing starter, automatic gearbox	28
8 Specified torques: starter	32
9 Alternator, vehicles up to 03.05	33
9.1 Securing battery positive wire to alternator	33
9.2 Checking poly V-belt	33
9.3 Checking alternator C	33
9.4 Alternator, 1.2 l 40 kW or 47 kW injection engine	34
9.5 Alternator, 1.4 l 55 kW or 74 kW injection engine	38
9.6 Alternator, 1.4 l 63 kW FSI engine	44
9.7 Alternator, 1.6 l 77 kW injection engine	49
9.8 Alternator, 1.4 l 51 kW or 55 kW TDI engine	54
9.9 Alternator, 1.9 l 47 kW SDI engine	59
9.10 Alternator, 1.9 l 74 kW or 96 kW TDI engine	63
9.11 Removing and installing poly V-belt pulley on alternator	68
9.12 Voltage regulator for alternator	72
10 Alternator, vehicles as of 04.05	76
10.1 Securing battery positive wire to alternator	76
10.2 Checking poly V-belt	76
10.3 Checking alternator C	76
10.4 Alternator, 1.2 l 40 kW or 47 kW injection engine	76
10.5 Alternator, 1.4 l 55 kW or 74 kW injection engine	76
10.6 Alternator, 1.4 l 63 kW FSI engine	76
10.7 Alternator, 1.6 l 77 kW injection engine	76
10.8 Alternator, 1.8 l 110 kW turbo engine	81
10.9 Alternator, 1.4 l 51 kW, 55 kW or 59 kW TDI engine	87
10.10 Alternator, 1.9 l 47 kW SDI engine	92
10.11 Alternator, 1.9 l 74 kW or 96 kW TDI engine	92
10.12 Removing and installing poly V-belt pulley on alternator	98
10.13 Voltage regulator for alternator	98
11 Alternator, vehicles as of 06.06	99
11.1 Securing battery positive wire to alternator	99
11.2 Checking poly V-belt	99
11.3 Checking alternator C	99



11.4	Alternator, 1.2 l 40 kW or 47 kW injection engine	99
11.5	Alternator, 1.4 l 55 kW or 74 kW injection engine	99
11.6	Alternator, 1.4 l 59 kW injection engine with air conditioning system	99
11.7	Alternator, 1.4 l 59 kW injection engine with air no conditioning system	104
11.8	Alternator, 1.6 l 77 kW injection engine	109
11.9	Alternator, 1.8 l 110 kW turbo engine	109
11.10	Alternator, 1.4 l 51 kW or 59 kW TDI engine	109
11.11	Alternator, 1.9 l 74 kW or 96 kW TDI engine	109
11.12	Removing and installing poly V-belt pulley on alternator	109
11.13	Voltage regulator for alternator	109
12	Alternator, vehicles with diesel particulate filter	111
12.1	Securing battery positive wire to alternator	111
12.2	Checking poly V-belt	111
12.3	Checking alternator C	111
12.4	Alternator, 1.4 l 51 kW TDI engine with air conditioning system	111
12.5	Alternator, 1.4 l 51 kW TDI engine with no air conditioning system	116
12.6	Alternator, 1.4 l 59 kW TDI engine with air conditioning system	122
12.7	Alternator, 1.4 l 59 kW TDI engine with no air conditioning system	127
12.8	Alternator, 1.9 l 74 kW TDI engine with air conditioning system	132
12.9	Alternator, 1.9 l 74 kW TDI engine with no air conditioning system	137
12.10	Removing and installing poly V-belt pulley on alternator	143
12.11	Voltage regulator for alternator	143
13	Cruise control system (CCS)	144
13.1	Activating and deactivating cruise control system (CCS)	144
90 - Gauges, instruments		145
1	Dash panel insert	145
1.1	Renewing dash panel insert	145
1.2	Removing and installing dash panel insert	146
1.3	Description of back of dash panel insert	147
1.4	Warning lamp symbols in dash panel insert	147
2	Service interval display	149
2.1	Resetting service interval display	149
92 - Windscreen wash/wipe system		150
1	Windscreen wiper system	150
1.1	Removing and installing windscreen wiper system	150
1.2	Adjusting wiper blade park position	155
1.3	Aerodynamic wiper	158
1.4	Removing and installing rain sensor G213	159
1.5	Fitting a new adhesive pad to the rain sensor (Valeo)	160
2	Windscreen washer system	165
2.1	Assembly overview - windscreen washer system	165
2.2	Removing and installing reservoir for windscreen and headlight washer system	167
2.3	Removing and installing windscreen and rear window washer pump V59	168
2.4	Removing and installing windscreen washer fluid level sender G33	169
2.5	Removing and installing windscreen washer jets	170
2.6	Cleaning spray jets for front windscreen washer system	170
2.7	Adjusting windscreen washer system washer jets	170
3	Headlight washer system	171
3.1	Assembly overview - headlight washer system	171
3.2	Removing and installing washer jet assembly	173
3.3	Removing and installing pop-up washer spray jet cylinder, vehicles up to 03.05	173
3.4	Removing and installing pop-up washer spray jet cylinder, vehicles as of 04.05	174
3.5	Removing and installing headlight washer system pump V11	175



3.6	Adjusting headlight washer system jets	175
3.7	Bleeding headlight washer system	175
4	Washer fluid line hose couplings	176
5	Hose repair	177
6	Specified torques for windscreen wash/wipe system	178
94	Lights, bulbs, switches - exterior	179
1	Headlight, vehicles up to 03.05	179
1.1	Assembly overview - headlight	179
1.2	Removing and installing headlight	180
1.3	Adjusting headlight installation position	182
1.4	Renewing headlight bulbs	183
1.5	Headlight range control motor	192
1.6	Repairing headlight retaining tabs	197
1.7	Converting headlights for use when driving on the left or right	199
1.8	Adjusting headlight	201
2	Headlight, vehicles as of 04.05	202
2.1	Assembly overview - headlight	202
2.2	Removing and installing headlight	204
2.3	Adjusting headlight installation position	205
2.4	Renewing headlight bulbs; headlight manufacturer: Hella	207
2.5	Renewing headlight bulbs; headlight manufacturer: Valeo	216
2.6	Headlight range control motor	225
2.7	Repairing headlight retaining tabs	231
2.8	Converting headlights for use when driving on the left or right	234
2.9	Adjusting headlight	236
3	Front fog light, vehicles up to 03.05	237
3.1	Fog lights (except Polo Fun)	237
3.2	Fog lights (Polo Fun only)	239
3.3	Adjusting fog light	241
4	Front fog light, vehicles as of 04.05	242
4.1	Fog lights (except Polo Cross/Dune)	242
4.2	Fog light Polo Cross (Polo Dune)	244
4.3	Adjusting fog light	245
5	Side mounted repeater turn signals, vehicles up to 03.05	246
5.1	Removing and installing side mounted repeater turn signal	246
6	Mirror turn signal bulb in exterior mirror, vehicles from 04.05	247
7	Tail lights, vehicles up to 03.05	248
7.1	Assembly overview - tail lights	248
7.2	Removing and installing tail light	249
7.3	Removing and installing bulb holder	249
8	Tail lights, vehicles as of 04.05	251
8.1	Assembly overview - tail lights	251
8.2	Removing and installing tail light	252
8.3	Removing and installing bulb holder	253
9	Additional brake light	254
9.1	Additional brake light (except Polo GTI, Polo Blue Motion)	254
9.2	Additional brake light (Polo GTI, Polo Blue Motion)	255
10	Number plate lights	257
10.1	Removing and installing number plate light X	257
11	Steering column switch	258
11.1	Removing and installing steering column switch	259
11.2	Removing and installing airbag coil connector and return ring with slip ring F138	261



11.3	Basic setting of steering angle sensor G85	262
12	Ignition/starter switch and lock cylinder	264
12.1	Removing and installing lock cylinder	264
12.2	Ignition/starter switch D	265
13	Steering lock housing	267
13.1	Removing and installing steering lock housing	267
14	Specified torques: lights, bulbs, switches - exterior	269
14.1	Specified torques: headlight	269
14.2	Specified torques: fog light	269
14.3	Specified torques: tail light	269
14.4	Specified torques: additional brake light	269
14.5	Specified torques: steering column switch	269
96	Lights, bulbs, switches - interior	270
1	Interior lights and switches	270
1.1	Removing and installing interior monitoring deactivation switch E267	270
2	Lights and switches in engine compartment	271
2.1	Removing and installing bonnet contact switch F266	271
3	Lights and switches in dash panel	272
3.1	Removing and installing light switch E1	272
3.2	Removing and installing headlight range control adjuster E102 and switches and instruments lighting control E20	273
3.3	Removing and installing switches, lights and regulators in centre of dash panel	273
3.4	Removing and installing front passenger side airbag deactivation key switch E224	275
4	Lights and switches in front doors	276
4.1	Removing and installing switch module for driver side window lift	276
4.2	Removing and installing window lift switch in passenger door E107	276
4.3	Removing and installing switch module for driver side mirror adjustment	277
4.4	Removing and installing driver side interior locking switch E150	277
4.5	Removing and installing central locking deadlock function warning lamp K133	278
4.6	Removing and installing left door warning lamp M27 and right door warning lamp M28	279
4.7	Removing and installing door contact switch	280
5	Lights and switches in rear doors	282
5.1	Removing and installing rear left window regulator switch in door E52	282
5.2	Removing and installing rear right window regulator switch in door E54	282
6	Lights and switches in luggage compartment	283
6.1	Removing and installing luggage compartment light switch F5	283
6.2	Removing and installing luggage compartment light W3	283
7	Lights and switches in roof trim	285
7.1	Front interior light W1	285
7.2	Front interior light W1 with reading lights and preparation for telephone	287
7.3	Front interior light W1 with reading lights and regulator for sunroof	291
7.4	Rear interior light W43	295
7.5	Removing and installing illuminated vanity mirror	296
8	Horn	299
8.1	Single tone horn	299
8.2	Dual tone horn	300
8.3	Horn plate H	302
9	Immobilizer	304
9.1	Immobilizer control unit J362	304
9.2	Immobilizer reader coil D2	304
9.3	Ignition key	304
10	Anti-theft alarm system (ATA)	306
10.1	Activating and deactivating anti-theft alarm system	306



10.2	Removing and installing interior monitoring deactivation switch E267	307
10.3	Anti-theft alarm ultrasonic sensor G209	307
10.4	Central locking and anti-theft alarm system aerial R47	309
10.5	Alarm horn H12	310
11	Specified torques: lights, bulbs, switches - interior	313
11.1	Specified torques: horn or dual tone horn H1	313
11.2	Specified torques: signal horn activation H	313
11.3	Specified torques: alarm horn H12	313
97 - Wiring		314
1	Vehicle diagnosis, testing and information systems	314
2	Fuse holder	315
2.1	Removing and installing fuse holder	315
2.2	Main fuse carrier, vehicles up to 03.05	315
2.3	Main fuse carrier, vehicles as of 04.05	320
3	Relay carrier	328
3.1	Removing and installing relay carrier	328
4	Potential distributor	330
4.1	Removing and installing voltage distributor	330
5	Connector points and compact connector	331
5.1	A-pillar coupling station	331
5.2	B-pillar coupling station	331
5.3	Compact connector at bulkhead	331
6	Control units	335
6.1	Onboard supply control unit J519	335
6.2	Data bus diagnostic interface J533	339
6.3	Convenience system central control unit J393	339
7	Specified torques: wires/cables	341
7.1	Specified torques: fuse holder	341
7.2	Specified torques: main fuse carrier	341
7.3	Specified torques: compact connector	341
8	Wiring harness and connector repairs	342