



## Contents

<b>68 - Interior equipment</b> .....	<b>1</b>
<b>1 Interior mirror</b> .....	<b>1</b>
1.1 Removing interior mirror .....	1
1.2 Installing interior mirror .....	1
1.3 Bonding retaining plate for interior mirror .....	1
1.4 Automatic anti-dazzle interior mirror .....	2
1.5 Removing and installing interior mirror on vehicles with a rain sensor .....	3
1.6 Bonding on interior mirror base with rain sensor .....	4
<b>2 Compartments, covers and trims</b> .....	<b>6</b>
2.1 Removing and installing upper part of centre console .....	6
2.2 Removing and installing lower part of centre console .....	8
2.3 Removing handbrake lever handle .....	9
2.4 Removing driver side compartment .....	9
2.5 Removing front passenger side compartment .....	10
2.6 Removing glove compartment .....	10
2.7 Removing sun visor .....	11
2.8 Removing middle sun visor .....	11
<b>3 Sill panel trims</b> .....	<b>12</b>
3.1 Removing and installing sill panel trim (four-door) .....	12
<b>4 Grab handles</b> .....	<b>14</b>
4.1 Removing roof grab handle .....	14
<b>69 - Passenger protection</b> .....	<b>15</b>
<b>1 Seat belts</b> .....	<b>15</b>
1.1 Safety regulations for belt tensioners .....	15
1.2 Disposal of belt tensioner units .....	15
1.3 Checking belt tensioner .....	15
1.4 Removing and installing seat belt with belt tensioner unit (four-door) .....	15
1.5 Removing and installing belt height adjustment .....	18
1.6 Removing front belt end anchor (four-door) .....	19
1.7 Removing front belt buckle .....	20
1.8 Rear, external seat belts - remove and install .....	20
1.9 Removing and installing belt buckle and belt guide of middle rear 3rd three-point seat belt .....	23
1.10 Removing and installing rear middle three-point seat belt .....	24
1.11 Removing and installing lap belt and double buckle .....	26
<b>2 Inspecting seat belts</b> .....	<b>27</b>
2.1 Points to check .....	27
<b>3 Airbag</b> .....	<b>30</b>
3.1 Overview - installation locations .....	30
3.2 Safety precautions when working on airbag .....	30
3.3 Additional safety precautions for the curtain airbag .....	31
3.4 Disposal of airbag units .....	31
3.5 Deactivating the airbag .....	31
3.6 Renewing airbag units following an accident .....	32
3.7 Removing and installing driver airbag unit .....	33
3.8 Removing and installing steering wheel .....	36
3.9 Removing and installing return spring with slip ring .....	37
3.10 Removing and installing front passenger airbag unit .....	38
3.11 Removing and installing airbag control unit (J234) .....	41
3.12 Removing and installing driver and front passenger side airbag .....	42
3.13 Removing and installing curtain airbag on driver and passenger side .....	44



3.14	Removing and installing crash sensor for side airbag for driver or front passenger	46
3.15	Removing and installing crash sensor for right curtain airbag	48
3.16	Removing and installing crash sensor for left curtain airbag	50
3.17	Adapting components	51
<b>70</b>	<b>Trim, insulation</b>	<b>52</b>
<b>1</b>	<b>Dash panel</b>	<b>52</b>
1.1	Tools	52
1.2	Removing and installing dash panel	52
1.3	Removing and installing dash panel cross member	57
<b>2</b>	<b>Door trims</b>	<b>61</b>
2.1	Tools	61
2.2	Removing and installing driver door trim	61
2.3	Removing and installing front passenger door trim	63
2.4	Rear door lining - remove and install	65
<b>3</b>	<b>Pillar and side trims</b>	<b>67</b>
3.1	Tools	67
3.2	Removing and installing upper A-pillar trim	67
3.3	Remove lower right A-pillar trim.	69
3.4	Removing lower left A-pillar trim	70
3.5	Removing and installing lower B-pillar trim (four-door)	70
3.6	Removing and installing upper B-pillar trim	72
3.7	Upper C pillar lining - remove and install	74
3.8	Lower C pillar lining - remove and install	76
<b>4</b>	<b>Luggage compartment trims</b>	<b>79</b>
4.1	Tools	79
4.2	Package holder - remove and install	79
4.3	Luggage compartment floor lining - remove and install	81
4.4	Luggage compartment left side lining - remove and install	82
4.5	Luggage compartment right side lining - remove and install	84
4.6	Rear panel covering - remove and install	86
<b>5</b>	<b>Rear lid trim</b>	<b>89</b>
5.1	Lid lining - remove and install	89
<b>6</b>	<b>Roof trims</b>	<b>91</b>
6.1	Pre-moulded roof lining - remove and install	91
6.2	Removing and installing moulded headliner (vehicles with sunroof)	95
<b>72</b>	<b>Seat frames</b>	<b>100</b>
<b>1</b>	<b>Front seats</b>	<b>100</b>
1.1	Tools	100
1.2	Removing and installing front seat	100
1.3	Removing and installing front seat trim (basic)	104
1.4	Removing and installing front seat trim (with parallel height adjustment)	106
1.5	Removing and installing drawer on driver and passenger side	107
1.6	Removing and installing front backrest	108
1.7	Removing and installing parallel height adjustment	110
1.8	Removing and installing cable and Bowden cable for locking backrest	111
1.9	Removing head restraint guides	114
<b>2</b>	<b>Rear seats</b>	<b>116</b>
2.1	Removing (divided) bench seat	116
2.2	Removing and installing (divided) backrest	116
2.3	Removing and installing (one-piece) backrest	118
<b>74</b>	<b>Seat - padding, covers</b>	<b>120</b>
<b>1</b>	<b>Front seat covers and padding</b>	<b>120</b>

---



1.1	Tools .....	120
1.2	Removing and installing front seat cover and padding .....	120
1.3	Removing and installing front backrest cover and padding .....	123
<b>2</b>	<b>Seat heater elements .....</b>	<b>126</b>
2.1	Removing seat heater element .....	126
2.2	Removing backrest heater element .....	126
<b>3</b>	<b>Rear seat covers and padding .....</b>	<b>128</b>
3.1	Tools .....	128
3.2	Removing and installing cover and padding for (one-piece) bench seat .....	128
3.3	Removing and installing cover and padding for (one-piece) backrest .....	129
3.4	Removing and installing covers and padding for (divided) backrest .....	130