



Contents

1	Engine list	1
2	Service work	6
2.1	Information about flexible or fixed service	6
2.2	Service tables up to model year ▶2020	8
2.3	Service tables as of model year 2021▶	17
3	General information	26
3.1	Raising vehicle on lifting platform	26
3.2	Entries in service schedule	28
3.3	Severe operating conditions	28
3.4	Vehicle data sticker	28
3.5	Vehicle diagnostic tester	30
3.6	Countries with hot climate	31
3.7	Country overview for petrol not compliant with EN 228	32
3.8	Country overview for diesel not compliant with EN 590/EN 15940	33
3.9	Engine code and engine number	34
3.10	Countries with high levels of dust	34
3.11	Identification plate	35
3.12	Shortened intervals for spark plug replacement	36
4	Descriptions of work	41
4.1	Removable towing bracket: checking and cleaning if necessary	43
4.2	Swivel joints and suspension link mountings: inspecting	46
4.3	Automatic headlight control and static cornering light: checking function	47
4.4	Battery (12V): checking battery terminal clamps for secure seating	49
4.5	Battery (12V): checking with battery tester (always refer to workshop manual)	50
4.6	Status of battery (12V): reading - sending diagnosis protocol via online connection	51
4.7	Front passenger front airbag: checking key switch and "ON/OFF function"	51
4.8	Tyres: checking condition, wear pattern, tyre pressure and tread depth	52
4.9	Brake and clutch system: changing brake fluid	62
4.10	Brake system and shock absorbers: inspecting for leaks and damage	69
4.11	Brake fluid level: checking	69
4.12	Checking thickness of pads/linings on front and rear brakes and condition of brake discs/ drums	71
4.13	Diesel fuel filter: draining	75
4.14	Diesel fuel filter: renewing	76
4.15	Diesel particulate filter: checking	78
4.16	Dual clutch gearbox 0D9: changing gear oil and filter	78
4.17	Dual clutch gearbox 0GC: changing gear oil	78
4.18	Electric windows: checking positioning (open and close functions)	78
4.19	Natural gas system: resetting interval display if a check in line with ECE ruling 110 has been carried out	79
4.20	Natural gas system: visually inspecting natural gas tank for corrosion and leakage	80
4.21	Natural gas system: checking wax layer between natural gas fuel tank and fuel tank shut- off valve	91
4.22	Natural gas tank: renewing	91
4.23	Natural gas filler connection and sealing cap: checking condition, if necessary cleaning and checking seal	91
4.24	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	92
4.25	Boots: inspecting	92
4.26	Interior and exterior body: inspecting for corrosion with doors and flaps open	93
4.27	Poly V-belt: renewing	93
4.28	Poly V-belt: checking condition	93
4.29	Cooling system: checking frost protection and coolant level	95
4.30	Air filter: cleaning housing and renewing filter element	97



4.31	Multi-purpose additive for diesel fuel: adding	109
4.32	Multi-purpose additive for petrol fuel: adding	111
4.33	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	112
4.34	Engine cover panel “top”: removing and installing	113
4.35	Motor compartment cover (noise insulation) “bottom”: removing and installing	114
4.36	Engine oil level: checking	114
4.37	Engine oil: Draining, renewing oil filter and filling engine oil.	116
4.38	Engine oil: capacities and specifications up to model year ▶2020	124
4.39	Engine oil: capacities and specifications as of model year 2021▶	125
4.40	Panoramic sliding sunroof	128
4.41	Road test: performing (driving behaviour, noises, air conditioner etc.)	132
4.42	Wheel securing bolts: tightening to specified torque	133
4.43	Reducing agent (AdBlue®/DEF): replenishing	134
4.44	Reducing agent (AdBlue®/DEF): changing	138
4.45	Tyre Pressure Loss Indicator: calibrating	138
4.46	Tyre repair set: checking	139
4.47	Window wash/wipe system and headlight washer system: checking function	140
4.48	Headlight adjustment: checking halogen headlights	144
4.49	Headlight adjustment: checking LED headlights (Polo)	147
4.50	Headlight adjustment: checking LED headlights (ECO) (Polo PA, Taigo)	149
4.51	Headlight adjustment: checking matrix LED headlights	151
4.52	Headlight adjustment: checking fog lights	156
4.53	Service interval display: resetting	158
4.54	Service interval display: recoding	160
4.55	Track rods: checking clearance, attachment and boots	161
4.56	Interior filter: cleaning housing and renewing filter element	162
4.57	Transportation mode: switching off	162
4.58	Transportation devices: removing blocking pieces	162
4.59	Clock and date: setting	164
4.60	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	164
4.61	Toothed belt (petrol engines): renewing	164
4.62	Camshaft drive toothed belt (diesel engines): renewing	165
4.63	Spark plugs: renewing	165
5	Exhaust emissions test	186
5.1	Exhaust emissions test for petrol engines	186
5.2	Exhaust emissions test for diesel engines	188
6	00 Periodic Technical Inspection (PTI)	191
7	Glossary	195
8	---Change history---	198