



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on a high-voltage system	1
1.4 Safety precautions when working in the vicinity of high-voltage components	2
<b>2 Identification</b>	<b>3</b>
2.1 Allocation of PR number - brakes	3
<b>3 Technical data</b>	<b>5</b>
3.1 Technical data for brakes	5
<b>4 Brake test</b>	<b>8</b>
4.1 General information	8
4.2 Checking vehicles with front-wheel drive	8
<b>45 - Anti-lock brake system</b>	<b>9</b>
<b>1 General information</b>	<b>9</b>
1.1 Repair instructions for repair work on ABS	9
<b>2 Overview of fitting locations</b>	<b>12</b>
2.1 Overview of fitting locations – ABS/ESP	12
<b>3 Control unit and hydraulic unit</b>	<b>15</b>
3.1 Assembly overview – control unit and hydraulic unit	15
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	19
3.3 Separating control unit from hydraulic unit	31
3.4 Fitting control unit to hydraulic unit	33
3.5 Connecting brake lines to hydraulic unit	35
<b>4 Sensors</b>	<b>38</b>
4.1 Assembly overview – speed sensor on front axle	38
4.2 Assembly overview – speed sensors on rear axle	39
4.3 Removing and installing speed sensors on front axle G45/G47	39
4.4 Removing and installing speed sensors on rear axle G44/G46	40
4.5 Checking ABS sensor ring	41
<b>46 - Brakes - mechanism</b>	<b>43</b>
<b>1 Front brake</b>	<b>43</b>
1.1 Assembly overview – front brake	43
1.2 Removing and installing brake pads	47
1.3 Removing and installing brake caliper	54
1.4 Removing and installing brake disc	60
1.5 Removing and installing brake splash plate	62
<b>2 Rear brake</b>	<b>65</b>
2.1 Assembly overview - rear brakes	65
2.2 Removing and installing brake pads	72
2.3 Removing and installing brake caliper	79
2.4 Removing and installing brake carrier	84
2.5 Removing and installing brake disc	85
2.6 Removing and installing brake shoes	86
2.7 Resetting drum brakes	95
2.8 Removing and installing brake splash plate	96
<b>3 Parking brake</b>	<b>98</b>
3.1 Assembly overview – parking brake	98
3.2 Removing and installing handbrake lever	100
3.3 Removing and installing handbrake warning switch F9	102



---

3.4	Adjusting parking brake . . . . .	103
3.5	Removing and installing rear brake cable . . . . .	105
<b>4</b>	<b>Brake pedal . . . . .</b>	<b>113</b>
4.1	Assembly overview – brake pedal . . . . .	113
4.2	Separating brake pedal from and joining to brake servo . . . . .	116
4.3	Removing and installing mounting bracket . . . . .	118
4.4	Removing and installing brake pedal . . . . .	121
4.5	Removing and installing mounting of brake pedal on push rod . . . . .	122
<b>47 - Brakes - hydraulics . . . . .</b>	<b>123</b>	
<b>1</b>	<b>Front brake caliper . . . . .</b>	<b>123</b>
1.1	Assembly overview – front brake caliper . . . . .	123
1.2	Removing and installing brake caliper piston . . . . .	125
<b>2</b>	<b>Rear brake caliper . . . . .</b>	<b>127</b>
2.1	Assembly overview – rear brake caliper . . . . .	127
2.2	Removing and installing brake caliper piston . . . . .	129
<b>3</b>	<b>Brake servo and brake master cylinder . . . . .</b>	<b>132</b>
3.1	Assembly overview – brake servo/brake master cylinder . . . . .	132
3.2	Removing and installing brake light switch . . . . .	137
3.3	Removing and installing brake servo . . . . .	138
3.4	Removing and installing brake master cylinder . . . . .	147
3.5	Removing and installing brake fluid reservoir . . . . .	156
<b>4</b>	<b>Vacuum system . . . . .</b>	<b>165</b>
4.1	Assembly overview – vacuum pump . . . . .	165
4.2	Checking non-return valve . . . . .	170
4.3	Removing and installing vacuum sender G608 . . . . .	171
4.4	Checking vacuum system . . . . .	172
4.5	Removing and installing electric vacuum pump . . . . .	178
<b>5</b>	<b>Hydraulic system . . . . .</b>	<b>180</b>
5.1	General notes on brake fluid . . . . .	180
5.2	Bleeding hydraulic system following standard procedure . . . . .	180
5.3	Subsequent bleeding of hydraulic system . . . . .	182
5.4	Leakage test . . . . .	183