



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair notes	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Line routing and attachment	2
98 - Assist systems	4
1 Fitting locations	4
1.1 Overview of fitting locations – senders, sensors and control units in front section of vehicle	4
1.2 Overview of fitting locations – senders, sensors and control units in centre section of vehicle	5
1.3 Overview of fitting locations – senders, sensors and control units in rear section of vehicle	6
2 Senders/sensors/control units	9
2.1 Removing and installing front parking aid senders G252/G253/G254/G255	9
2.2 Removing and installing rear parking aid senders G203/G204/G205/G206	11
2.3 Removing and installing front park assist steering sender G568/G569	13
2.4 Removing and installing rear park assist steering sender G716/G717	14
2.5 Removing and installing adaptive cruise control unit J428	15
2.6 Removing and installing front parking aid warning buzzer H22	16
2.7 Removing and installing rear parking aid warning buzzer H15	18
2.8 Removing and installing parking aid control unit J446	18
2.9 Removing and installing Blind Spot Monitor warning lamp in left exterior mirror K303/K304	20
2.10 Removing and installing Blind Spot Monitor control unit J1086/J1087	20
2.11 Removing and installing reversing camera R189	21
2.12 Removing and installing front camera for driver assist systems R242	21
3 Adaptive cruise control	24
3.1 Components of adaptive cruise control	24
3.2 Calibrating adaptive cruise control	24
4 Parking aid/park assist steering/autonomous parking system	29
4.1 Components of parking aid/park assist steering/autonomous parking system	29
5 Blind Spot Monitor	30
5.1 Assembly overview - Blind Spot Monitor	30
6 Reversing camera system	31
6.1 Overview of reversing camera system	31
6.2 Calibrating reversing camera system	31
7 Front camera for assist systems	37
7.1 Components of front camera for driver assist systems	37
7.2 Calibrating front camera for assist systems	37