



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using test and measuring equipment during a road test	1
2 Repair notes	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
3 Battery	4
3.1 Battery - general notes	4
3.2 Types of battery	4
27 - Starter, current supply, CCS	5
1 Battery	5
1.1 Assembly overview – battery	5
1.2 Removing and installing battery	8
1.3 Disconnecting and connecting battery	14
1.4 Removing and installing battery tray	17
1.5 Checking battery	22
1.6 Charging battery	22
1.7 Removing and installing earth wire with battery monitor control unit J367	22
1.8 Adapting battery monitor control unit J367	24
2 Jump-start connection point	25
2.1 Assembly overview – jump-start connection point	25
2.2 Removing and installing jump-start connection	25
3 Alternator	29
3.1 Assembly overview – alternator	29
3.2 Removing and installing alternator	31
3.3 Checking alternator	42
3.4 Removing and installing poly V-belt pulley	42
3.5 Removing and installing voltage regulator	51
4 Starter	55
4.1 Assembly overview – starter	55
4.2 Removing and installing starter	57
4.3 Checking starter	63
5 Cruise control system (CCS)	64
6 Start/stop system	65
6.1 General description - start/stop system	65
7 Adaptive cruise control	66
7.1 Overview of fitting locations - adaptive cruise control	66
7.2 Removing and installing automatic distance control unit	66
7.3 Calibrating adaptive cruise control	67
90 - Gauges, instruments	68
1 Dash panel insert	68
1.1 Assembly overview – dash panel insert	68
1.2 Removing and installing dash panel insert KX2	69
2 Horn	74
2.1 Assembly overview – horn	74
2.2 Removing and installing treble horn H2 and bass horn H7	74



92 - Windscreen wash/wipe system	76
1 Windscreen wiper system	76
1.1 Assembly overview – windscreen wiper system	76
1.2 Moving wipers to service position	78
1.3 Removing and installing wiper blade	78
1.4 Removing and installing wiper arms	79
1.5 Adjusting wiper arms	81
1.6 Removing and installing wiper motor	83
1.7 Removing and installing rain and light sensor	85
2 Windscreen washer system	89
2.1 Assembly overview – windscreen washer system	89
2.2 Removing and installing filler pipe for washer fluid reservoir	91
2.3 Removing and installing washer fluid reservoir	91
2.4 Removing and installing windscreen washer fluid level sender	94
2.5 Removing and installing windscreen washer pump	94
2.6 Removing and installing spray jets	95
2.7 Adjusting spray jets	96
3 Rear window wiper system	98
3.1 Assembly overview – rear window wiper system	98
3.2 Removing and installing wiper blade	99
3.3 Removing and installing wiper arm	99
3.4 Adjusting wiper arm	101
3.5 Removing and installing rear window wiper motor V12	102
4 Rear window washer system	104
4.1 Assembly overview – rear window washer system	104
4.2 Removing and installing washer fluid reservoir	104
4.3 Removing and installing rear window washer pump	105
4.4 Removing and installing spray jet	105
4.5 Adjusting spray jet	105
5 Washer fluid lines	107
5.1 Repairing washer fluid lines	107
94 - Lights, bulbs, switches - exterior	108
1 Headlights	108
1.1 Assembly overview – headlight	108
1.2 Removing and installing headlight	112
1.3 Adjusting headlights	115
1.4 Adjusting headlight installation position	115
1.5 Removing and installing front turn signal bulb M5/M7	116
1.6 Installing repair kit for headlight housing	117
1.7 Converting headlights from driving on right to driving on left	118
1.8 Converting headlights from driving on left to driving on right	118
1.9 Removing and installing headlight range control motor V48/V49	119
1.10 Removing and installing headlight dipped beam bulb	122
1.11 Removing and installing headlight main beam bulb M30/M32	124
1.12 Removing and installing daytime running lights	125
1.13 Removing and installing static cornering light bulb	127
1.14 Removing and installing output module 1 for LED headlight A27/A31	127
2 Fog lights	129
2.1 Assembly overview - fog lights	129
2.2 Removing and installing fog light	129
2.3 Removing and installing fog light bulb L22/L23	129
2.4 Adjusting fog lights	130
3 Tail light cluster	131



3.1	Assembly overview – tail light cluster in body	131
3.2	Removing and installing bulb carrier	133
3.3	Removing and installing tail light cluster	133
3.4	Adjusting installation position of tail light	134
3.5	Removing and installing tail light bulb M2/M4	135
3.6	Removing and installing rear fog light bulb L46/L47	136
3.7	Removing and installing brake and tail light bulb M21/M22	137
3.8	Removing and installing reversing light bulb	138
3.9	Removing and installing turn signal bulb	139
4	High-level brake light	140
4.1	Assembly overview – high-level brake light	140
4.2	Removing and installing high-level brake light	140
5	Additional exterior lights	143
5.1	Assembly overview - lights in exterior mirror	143
5.2	Removing and installing turn signal repeater	145
5.3	Removing and installing number plate light X4/X5	145
5.4	Removing and installing bulb for number plate light X4/X5	146
6	Entry and start authorisation	147
6.1	Overview of fitting locations – entry and start authorisation system	147
6.2	Overview of fitting locations – keyless entry system	148
6.3	Removing and installing entry and start authorisation control unit J518	148
6.4	Removing and installing contact sensor for front exterior door handle G605/G606	150
6.5	Removing and installing interior aerial 1 for entry and start system R138	150
6.6	Removing and installing interior aerial 2 for entry and start system R139	151
6.7	Removing and installing entry and start authorisation aerial R200/R201	151
6.8	Removing and installing rear bumper aerial for entry and start authorisation R136	152
7	Steering column switch module	153
7.1	Assembly overview – steering column switch module	153
7.2	Removing and installing lock cylinder	155
7.3	Removing and installing ignition key withdrawal lock solenoid N376	158
7.4	Removing and installing ignition/starter switch	158
7.5	Removing and installing steering column switch module	160
7.6	Removing and installing steering column electronics control unit J527	164
7.7	Removing and installing turn signal switch E2	166
7.8	Removing and installing cruise control system switch E45	170
7.9	Removing and installing intermittent wiper switch E22	170
7.10	Removing and installing base for steering column combination switch	170
7.11	Removing and installing steering lock housing	171
8	Parking aid	174
8.1	Assembly overview – parking aid	174
8.2	Removing and installing parking aid control unit J446	177
8.3	Removing and installing front parking aid warning buzzer H22	179
8.4	Removing and installing rear parking aid warning buzzer H15	180
8.5	Removing and installing front parking aid senders	181
8.6	Removing and installing rear parking aid senders	182
9	Park assist steering	183
9.1	Assembly overview - park assist steering	183
9.2	Removing and installing control unit	184
9.3	Removing and installing front senders	184
9.4	Removing and installing rear senders	184
10	Automatic headlight range control	186
10.1	Assembly overview - automatic headlight range control	186
10.2	Removing and installing headlight range control unit	187
11	Blind Spot Monitor	189



11.1	Assembly overview - Blind Spot Monitor	189
11.2	Removing and installing Blind Spot Monitor warning lamp in exterior mirror K303/K304	189
11.3	Removing and installing Blind Spot Monitor control unit J1086/J1087	190
96	Lights, bulbs, switches - interior	192
1	Lights	192
1.1	Overview of fitting locations – lights in dash panel	192
1.2	Overview of fitting locations – lights in front doors	193
1.3	Overview of fitting locations - lights in centre console	194
1.4	Overview of fitting locations – lights in luggage compartment	195
1.5	Overview of fitting locations – lights in roof trim	196
1.6	Removing and installing footwell light W9/W10	198
1.7	Removing and installing bulb for front footwell light L151/L152	199
1.8	Removing and installing Central locking SAFELock function warning lamp K133	200
1.9	Removing and installing storage compartment illumination bulb L120	201
1.10	Removing and installing door opener illumination bulb L108/L109	201
1.11	Removing and installing bulb for background lighting in front door L164/L165	202
1.12	Removing and installing light 1 for dashboard background lighting L292	203
1.13	Removing and installing light for right dash panel background lighting L230	203
1.14	Removing and installing light for centre dashboard background lighting L231	204
1.15	Removing and installing selector lever position display Y26	205
1.16	Removing and installing luggage compartment light W3	205
1.17	Removing and installing bulb for luggage compartment light W3	205
1.18	Removing and installing illuminated vanity mirror W20/W14	206
1.19	Renewing front interior light bulb W1/W13/W19	207
1.20	Renewing bulb for rear interior light W47/W48	211
1.21	Removing and installing rear reading light W11/W12	212
2	Controls	214
2.1	Overview of fitting locations – controls in dash panel	215
2.2	Overview of fitting locations – controls in front doors	217
2.3	Overview of fitting locations – controls in rear doors	217
2.4	Overview of fitting locations - controls in centre console	218
2.5	Overview of fitting locations – controls in luggage compartment	219
2.6	Overview of fitting locations – controls in roof trim	220
2.7	Removing and installing rotary light switch EX1	223
2.8	Removing and installing headlight range control regulator E102	223
2.9	Removing and installing button for TCS and electronic stabilisation program E256	225
2.10	Removing and installing parking aid button E266	225
2.11	Removing and installing park assist steering button E581	225
2.12	Removing and installing Start/Stop operation button E693	225
2.13	Removing and installing driving mode selection button E735	226
2.14	Removing and installing warning lamp for airbag deactivated on front passenger side K145	226
2.15	Removing and installing centre console switch module	227
2.16	Removing and installing hazard warning light switch EX3	228
2.17	Removing and installing buttons for seat heating E653/E654	228
2.18	Removing and installing exterior mirror adjuster EX11	228
2.19	Removing and installing operating unit for window regulator in driver door E512	229
2.20	Removing and installing window regulator switch in front passenger door EX27	230
2.21	Removing and installing driver side interior locking button for central locking system E308	231
2.22	Removing and installing door contact switch F2/F3	232
2.23	Removing and installing rear window regulator button E700/E705	232
2.24	Removing and installing rear door contact switches F10/F11	233
2.25	Removing and installing the starter button E378	233
2.26	Removing and installing rear lid contact switch	234
2.27	Removing and installing vanity mirror contact switch F147/F148	234



2.28	Removing and installing sunroof button E325	234
2.29	Removing and installing front interior light/reading light	235
2.30	Removing and installing rear interior light/reading light	238
3	Anti-theft alarm	241
3.1	Assembly overview – interior monitor	241
3.2	Removing and installing alarm horn H12	241
3.3	Removing and installing anti-theft alarm sensor G578	242
4	Immobiliser	244
4.1	Removing and installing immobiliser control unit	244
4.2	Removing and installing immobiliser reader coil	244
5	Towing bracket	246
5.1	Assembly overview – socket, trailer detector control unit	246
5.2	Removing and installing trailer socket U10	246
5.3	Removing and installing trailer detector control unit J345	247
6	Front camera for driver assist systems	248
6.1	Assembly overview - front camera for assist systems	248
6.2	Removing and installing front camera for driver assist systems R242	248
6.3	Calibrating front camera for assist systems	250
7	Cigarette lighter, socket	259
7.1	Removing and installing cigarette lighter U1	259
7.2	Removing and installing socket illumination bulb L42	259
7.3	Removing and installing bulb for illuminating cigarette lighter	259
7.4	Removing and installing 12 V socket 3 U19	259
97	- Wiring	260
1	Relay carriers, fuse holders, electronics boxes	260
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	260
1.2	Removing and installing electronics box	264
1.3	Removing and installing relay and fuse holder in electronics box	266
1.4	Removing and installing relay and fuse holder behind dash panel on driver side	268
1.5	Removing and installing fuse holder A SA	271
1.6	Removing and installing main fuse carrier	273
2	Control units	275
2.1	Overview of fitting locations - control units	275
2.2	Removing and installing onboard supply control unit J519	276
2.3	Removing and installing data bus diagnostic interface J533	277
2.4	Removing and installing bracket for onboard supply control unit J519	278
3	Connectors	279
3.1	Repairing electrical wiring harnesses and plug-in connections	279
4	Releasing and dismantling connector housings	280
5	Repairing aerial wires	281
6	Fibre optic cables	282
7	Vehicle diagnosis, testing and information systems	283