



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair instructions	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
3 Battery	4
3.1 Battery - general notes	4
3.2 Types of battery	4
27 - Starter, current supply, CCS	5
1 Battery	5
1.1 Assembly overview – battery	5
1.2 Removing and installing battery	8
1.3 Disconnecting and connecting battery	13
1.4 Removing and installing battery tray	16
1.5 Checking battery	20
1.6 Charging battery	20
1.7 Removing and installing earth wire with battery monitor control unit J367	21
1.8 Adapting battery monitor control unit J367	23
2 Jump-start connection point	24
2.1 Assembly overview – jump-start connection point	24
2.2 Removing and installing jump-start connection	24
3 Alternator	28
3.1 Assembly overview – alternator	28
3.2 Removing and installing alternator	29
3.3 Checking alternator	35
3.4 Removing and installing poly V-belt pulley	36
3.5 Removing and installing voltage regulator	43
4 Starter	46
4.1 Assembly overview – starter	46
4.2 Removing and installing starter	48
4.3 Checking starter	53
5 Start/stop system	54
5.1 General description - start/stop system	54
90 - Gauges, instruments	55
1 Dash panel insert	55
1.1 Assembly overview – dash panel insert	55
1.2 Removing and installing dash panel insert KX2	56
2 Horn	61
2.1 Assembly overview – horn	61
2.2 Removing and installing treble horn H2 and bass horn H7	61
92 - Windscreen wash/wipe system	63
1 Windscreen wiper system	63
1.1 Assembly overview – windscreen wiper system	63
1.2 Moving wipers to service position	65
1.3 Removing and installing wiper blade	65



1.4	Removing and installing wiper arms	66
1.5	Adjusting wiper arms	68
1.6	Removing and installing wiper motor V	69
1.7	Removing and installing rain and light sensor	71
2	Windscreen washer system	76
2.1	Assembly overview – windscreen washer system	76
2.2	Removing and installing filler pipe for washer fluid reservoir	78
2.3	Removing and installing washer fluid reservoir	78
2.4	Removing and installing windscreen washer fluid level sender	80
2.5	Removing and installing windscreen washer pump	81
2.6	Removing and installing spray jets	82
2.7	Adjusting spray jets	83
3	Rear window wiper system	84
3.1	Assembly overview – rear window wiper system	84
3.2	Removing and installing wiper blade	85
3.3	Removing and installing wiper arm	85
3.4	Adjusting wiper arm	86
3.5	Removing and installing rear window wiper motor V12	87
4	Rear window washer system	89
4.1	Assembly overview – rear window washer system	89
4.2	Removing and installing washer fluid reservoir	89
4.3	Removing and installing rear window washer pump	90
4.4	Removing and installing spray jet	90
4.5	Adjusting spray jet	90
5	Washer fluid lines	92
5.1	Repairing washer fluid lines	92
94	Lights, bulbs, switches - exterior	93
1	Headlights	93
1.1	Assembly overview – headlight	93
1.2	Removing and installing headlight	99
1.3	Adjusting headlights	101
1.4	Removing and installing headlight dipped beam bulb	101
1.5	Removing and installing headlight main beam bulb M30/M32	103
1.6	Removing and installing LED modules for daytime running light and side light L176/L177	105
1.7	Adjusting headlight installation position	106
1.8	Installing repair kit for headlight housing	107
1.9	Converting headlights from driving on right to driving on left	109
1.10	Converting headlights from driving on left to driving on right	109
1.11	Removing and installing headlight range control motor V48/V49	110
1.12	Removing and installing daytime running lights	113
1.13	Removing and installing output module 1 for LED headlights A27/A31	113
1.14	Removing and installing light conductor for contour lighting in radiator grille, front L362/ L363	115
2	Fog lights	116
2.1	Assembly overview - fog lights	116
2.2	Removing and installing fog light	116
2.3	Adjusting fog lights	117
3	Lights in exterior mirror	118
3.1	Assembly overview - lights in exterior mirror	118
3.2	Removing and installing turn signal	120
4	Tail lights	121
4.1	Assembly overview – tail light cluster in body	121
4.2	Assembly overview – tail light clusters in rear lid	121
4.3	Removing and installing tail light cluster	122



4.4	Removing and installing tail light in rear lid	124
4.5	Adjusting installation position of tail light	125
5	High-level brake light	126
5.1	Assembly overview – high-level brake light	126
5.2	Removing and installing high-level brake light	126
6	Number plate light	129
6.1	Removing and installing number plate light X4/X5	129
6.2	Removing and installing bulb for number plate light X4/X5	130
7	Entry and start authorisation system	131
7.1	Overview of fitting locations – entry and start authorisation system	131
7.2	Overview of fitting locations – keyless entry system	132
7.3	Removing and installing entry and start authorisation control unit J518	132
7.4	Removing and installing contact sensor for front left exterior door handle G605/G606	134
7.5	Removing and installing interior aerial 1 for entry and start authorisation R138	134
7.6	Removing and installing interior aerial 2 for entry and start system R139	135
7.7	Removing and installing entry and start authorisation aerial R200/R201	135
7.8	Removing and installing rear bumper aerial for entry and start system R136	136
8	Steering column switch module	137
8.1	Assembly overview – steering column switch module	137
8.2	Removing and installing lock cylinder	139
8.3	Removing and installing ignition key withdrawal lock solenoid N376	142
8.4	Removing and installing ignition/starter switch	142
8.5	Removing and installing steering column switch module	144
8.6	Removing and installing steering column electronics control unit J527	148
8.7	Removing and installing turn signal switch E2	150
8.8	Removing and installing cruise control system switch E45	154
8.9	Removing and installing intermittent wiper switch E22	154
8.10	Removing and installing base for steering column combination switch	154
8.11	Removing and installing steering lock housing	155
9	Automatic headlight range control	158
9.1	Assembly overview - automatic headlight range control	158
9.2	Removing and installing headlight range control unit	159
96	Lights, bulbs, switches - interior	161
1	Lights	161
1.1	Overview of fitting locations – lights in dash panel	161
1.2	Overview of fitting locations – lights in front doors	162
1.3	Overview of fitting locations - lights in centre console	163
1.4	Overview of fitting locations – lights in luggage compartment	164
1.5	Overview of fitting locations – lights in roof trim	165
1.6	Removing and installing footwell light W9/W10	167
1.7	Removing and installing Central locking SAFELOCK function warning lamp K133	168
1.8	Removing and installing storage compartment illumination bulb L120	169
1.9	Removing and installing interior door handle illumination bulb L146/L147	169
1.10	Removing and installing bulb for background lighting in front door L164/L165	170
1.11	Removing and installing light for left dash panel background lighting L229	171
1.12	Removing and installing light for right dash panel background lighting L230	171
1.13	Removing and installing light for centre dashboard background lighting L231	172
1.14	Removing and installing selector lever position display Y26	173
1.15	Removing and installing luggage compartment light W3	173
1.16	Removing and installing illuminated vanity mirror W20/W14	173
1.17	Renewing front interior light bulb W1/W13/W19	174
1.18	Renewing bulb for rear interior light W43	178
1.19	Removing and installing bulb for rear reading light W11/W12	179
2	Controls	181



2.1	Overview of fitting locations – controls in dash panel	182
2.2	Overview of fitting locations – controls in front doors	184
2.3	Overview of fitting locations – controls in rear doors	184
2.4	Overview of fitting locations - controls in centre console	185
2.5	Overview of fitting locations – controls in luggage compartment	186
2.6	Overview of fitting locations – controls in roof trim	187
2.7	Removing and installing rotary light switch EX1	190
2.8	Removing and installing headlight range control regulator E102	190
2.9	Removing and installing TCS and ESP button E256	192
2.10	Removing and installing parking aid button E266	192
2.11	Removing and installing park assist steering button E581	192
2.12	Removing and installing Start/Stop operation button E693	192
2.13	Removing and installing driving mode selection button E735	192
2.14	Removing and installing front passenger side airbag deactivated warning lamp K145	193
2.15	Removing and installing centre console switch module	194
2.16	Removing and installing hazard warning light switch EX3	194
2.17	Removing and installing buttons for seat heating E653/E654	195
2.18	Removing and installing exterior mirror adjuster EX11	195
2.19	Removing and installing operating unit for window regulator in driver door E512	196
2.20	Removing and installing window regulator switch in front passenger door EX27	197
2.21	Removing and installing driver side interior locking button for central locking system E308	198
2.22	Removing and installing door contact switch F2/F3	199
2.23	Removing and installing rear window regulator switch in door E52/E54	199
2.24	Removing and installing rear door contact switches F10/F11	200
2.25	Removing and installing the starter button E378	200
2.26	Removing and installing rear lid contact switch	201
2.27	Removing and installing vanity mirror contact switch F147/F148	201
2.28	Removing and installing sunroof button E325	201
2.29	Removing and installing front interior light/reading light	202
2.30	Removing and installing rear interior light/reading light	205
3	Anti-theft alarm	208
3.1	Assembly overview – interior monitor	208
3.2	Removing and installing alarm horn H12	208
3.3	Removing and installing anti-theft alarm sensor G578	209
4	Immobiliser	211
4.1	Removing and installing immobiliser control unit	211
4.2	Removing and installing immobiliser reader coil	211
5	Towing bracket	213
5.1	Assembly overview - socket, trailer detector control unit	213
5.2	Trailer socket	213
5.3	Removing and installing trailer detector control unit J345	214
6	Cigarette lighter, socket	215
6.1	Removing and installing cigarette lighter U1	215
6.2	Removing and installing socket illumination bulb L42	215
6.3	Removing and installing rear cigarette lighter illumination bulb L32	215
6.4	Removing and installing electric socket U	215
97 - Wiring		216
1	Relay carriers, fuse holders, electronics boxes	216
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	216
1.2	Removing and installing electronics box	220
1.3	Removing and installing relay and fuse holder in electronics box	222
1.4	Removing and installing relay and fuse holder behind dash panel on driver side	224
1.5	Removing and installing fuse holder A SA	227
1.6	Removing and installing main fuse carrier	229



2	Control units	231
2.1	Overview of fitting locations - control units	231
2.2	Removing and installing onboard supply control unit J519	232
2.3	Removing and installing data bus diagnostic interface J533	233
2.4	Removing and installing bracket for onboard supply control unit J519	234
2.5	Removing and installing parking aid control unit J446/park assist steering control unit J791	234
3	Connectors	236
3.1	Repairing electrical wiring harnesses and plug-in connections	236
4	Releasing and dismantling connector housings	237
5	Repairing aerial wires	238
6	Fibre optic cables	239
7	Vehicle diagnosis, testing and information systems	240