



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Repair notes</b>	<b>1</b>
1.1 General information	1
<b>91 - Communication</b>	<b>2</b>
<b>1 Infotainment system</b>	<b>2</b>
1.1 Overview of infotainment system	2
1.2 Overview of fitting locations – Infotainment system	4
1.3 Removing and installing infotainment system display	6
1.4 Removing and installing control unit 1 for information electronics J794	7
1.5 Removing and installing DVD/CD changer or CD changer	8
1.6 Renewing rotary knobs for infotainment display	9
<b>2 Sound system</b>	<b>11</b>
2.1 Overview of fitting locations – sound system	11
2.2 Removing and installing digital sound package control unit	12
2.3 Removing and installing front treble loudspeakers R20/R22	14
2.4 Removing and installing rear loudspeaker R4/R5	14
2.5 Removing and installing front bass loudspeakers R21/R23	16
2.6 Removing and installing subwoofer R211	18
<b>3 Aerial systems</b>	<b>23</b>
3.1 Components of aerial systems	23
3.2 Overview of fitting locations – aerial systems	23
3.3 Removing and installing aerial module	24
3.4 Removing and installing roof aerial	26
3.5 Removing and installing rear bumper aerial for entry and start system R136	27
<b>4 Radio</b>	<b>29</b>
4.1 Overview of radio	29
4.2 Removing and installing radio	29
<b>5 Telephone system</b>	<b>32</b>
5.1 Preparation for mobile telephone	32
5.2 Overview of fitting locations – telephone system	33
5.3 Removing and installing telephone microphone R38	35
5.4 Removing and installing two-way signal amplifier for mobile telephone/data services J984	36
5.5 Removing and installing storage compartment with interface for mobile telephone R265	37
<b>6 Navigation system</b>	<b>39</b>
6.1 Overview of navigation system	39
6.2 Overview of fitting locations – navigation system	39
6.3 Removing and installing control unit for navigation system	40
<b>7 Reversing camera system</b>	<b>41</b>
7.1 Overview of reversing camera system	41
7.2 Overview of fitting locations – reversing camera system	41
7.3 Removing and installing reversing camera R189	42
<b>8 Multifunction steering wheel</b>	<b>43</b>
8.1 Overview of multifunction steering wheel	43
8.2 Assembly overview – multifunction steering wheel	43
8.3 Removing and installing multifunction buttons in steering wheel E441/E440	44
8.4 Removing and installing Tiptronic switch in steering wheel E439/E438	48
<b>9 Connection for external multimedia devices</b>	<b>50</b>
9.1 Removing and installing connection for external multimedia devices	50
9.2 Removing and installing USB hub R293	51
<b>10 Online services</b>	<b>53</b>



10.1	Overview of fitting locations – mobile online services .....	53
10.2	Removing and installing emergency call module control unit and communication unit J949 ..	54
10.3	Removing and installing Telematics button module E734 .....	55
10.4	Removing and installing loudspeaker for emergency call module R335 .....	56
10.5	Renewing battery in emergency call module control unit and communication unit J949 ..	57
10.6	Renewing control unit for emergency call module and communication unit J949 .....	59