



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Repair notes</b>	<b>1</b>
1.1 General repair instructions	1
1.2 Line routing and attachment	1
1.3 Notes on repair of CAN bus wiring	1
1.4 General information	1
<b>91 - Communication</b>	<b>3</b>
<b>1 Fitting locations</b>	<b>3</b>
1.1 Overview of fitting locations – components/control units in middle section of vehicle	3
1.2 Overview of fitting locations – components/control units in rear section of vehicle	5
<b>2 Components/control units</b>	<b>7</b>
2.1 Removing and installing infotainment system display	7
2.2 Removing and installing control unit 1 for information electronics J794	9
2.3 Removing and installing DVD/CD changer or CD changer	10
2.4 Renewing rotary knobs for infotainment display	10
2.5 Removing and installing digital sound package control unit	11
2.6 Removing and installing rear treble loudspeakers R14/R16	13
2.7 Removing and installing front treble loudspeakers R20/R22	13
2.8 Removing and installing rear bass loudspeakers R15/R17	13
2.9 Removing and installing front bass loudspeakers R21/R23	14
2.10 Removing and installing subwoofer R211	15
2.11 Removing and installing subwoofer R211	16
2.12 Removing and installing frequency modulation (FM) frequency filter R178/R179	20
2.13 Removing and installing aerial module	21
2.14 Removing and installing roof aerial	22
2.15 Removing and installing LTE aerials [R297/R306]	22
2.16 Removing and installing telephone microphone R38	23
2.17 Removing and installing transmission and reception stabilisation control unit R308	25
2.18 Removing and installing telephone bracket R126	26
2.19 Removing and installing multifunction buttons in steering wheel E441/E440	27
2.20 Removing and installing Tiptronic switch in steering wheel E439/E438	30
2.21 Removing and installing USB connection 1 U41	31
2.22 Removing and installing USB hub R293	32
2.23 Removing and installing USB charging socket 1 U37	33
2.24 Removing and installing emergency call module control unit and communication unit J949	34
2.25 Removing and installing operating unit for preparation for mobile telephone E508	35
2.26 Removing and installing loudspeaker for emergency call module R335	36
2.27 Removing and installing battery for control unit for emergency call module	36
<b>3 Multifunction steering wheel</b>	<b>38</b>
3.1 Assembly overview – multifunction steering wheel	38