



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Repair information	1
50 - Body - front	4
1 Lock carrier	4
1.1 Assembly overview – lock carrier	4
1.2 Removing and installing lock carrier	8
1.3 Moving to and back from service position	13
2 Wing	17
2.1 Assembly overview – wing	17
2.2 Removing and installing wing	17
3 Bulkhead	22
3.1 Assembly overview – bulkhead	22
3.2 Assembly overview – plenum chamber cover	22
3.3 Removing and installing bulkhead	23
3.4 Removing and installing plenum chamber cover	24
55 - Bonnet, rear lid	28
1 Bonnet	28
1.1 Assembly overview – bonnet	28
1.2 Assembly overview – Bowden cable	29
1.3 Removing and installing bonnet	30
1.4 Adjusting bonnet	33
1.5 Removing and installing bonnet lock	40
1.6 Removing and installing bonnet lock release lever	45
1.7 Removing and installing striker pin	48
1.8 Removing and installing hinges	49
1.9 Removing and installing insulation	53
1.10 Removing and installing bonnet stay	54
1.11 Removing and installing Bowden cable	56
2 Rear lid	64
2.1 Assembly overview – rear lid	64
2.2 Removing and installing rear lid	66
2.3 Adjusting rear lid	72
2.4 Removing and installing bonnet lock	78
2.5 Removing and installing operating mechanism	80
2.6 Removing and installing hinges	85
2.7 Removing and installing striker pin	88
2.8 Removing and installing rear lid seal	89
2.9 Removing and installing gas strut	91
2.10 Releasing gas from gas strut	93
3 Tank flap unit	94
3.1 Assembly overview – tank flap unit	94
3.2 Removing and installing tank flap unit	94
3.3 Removing and installing fuel tank flap	97
57 - Front doors, door components, central locking	99
1 Door	99
1.1 Assembly overview – door	99
1.2 Removing and installing inner door seal	102



1.3	Removing and installing outer door seal	104
1.4	Removing and installing door	106
1.5	Adjusting door	109
1.6	Adjusting striker pin	111
1.7	Removing and installing door arrester	113
2	Door components	116
2.1	Assembly overview – door components	116
2.2	Assembly overview – window regulator	118
2.3	Assembly overview – door handle and door lock	118
2.4	Removing and installing window regulator motor	119
2.5	Removing and installing window regulator	122
2.6	Removing and installing inner door cover	125
2.7	Removing and installing striker pin	127
2.8	Removing and installing cap on door handle	129
2.9	Removing and installing lock cylinder	135
2.10	Removing and installing door handle	138
2.11	Removing and installing mounting bracket	140
2.12	Removing and installing door lock	142
2.13	Removing and installing window channel	147
2.14	Removing and installing outer window slot seal	150
2.15	Removing and installing window slot inner seal	152
3	Central locking	153
3.1	Overview of fitting locations – central locking system	153
3.2	Removing and installing ignition key battery	155
3.3	Removing and installing cap on ignition key	157
3.4	Removing and installing tank filler flap locking motor V155	158
58	Rear doors, door components	160
1	Door	160
1.1	Assembly overview – door	160
1.2	Removing and installing door	163
1.3	Adjusting door	166
1.4	Adjusting striker pin	168
1.5	Removing and installing door arrester	170
1.6	Removing and installing inner door seal	172
1.7	Removing and installing outer door seal	174
2	Door components	176
2.1	Assembly overview – door components	176
2.2	Assembly overview – window regulator	178
2.3	Assembly overview – door handle and door lock	178
2.4	Removing and installing window regulator motor	179
2.5	Removing and installing window regulator	182
2.6	Removing and installing window crank	185
2.7	Removing and installing inner door cover	188
2.8	Removing and installing striker pin	190
2.9	Removing and installing cap on door handle	192
2.10	Removing and installing door handle	196
2.11	Removing and installing mounting bracket	198
2.12	Removing and installing door lock	201
2.13	Removing and installing window channel	205
2.14	Removing and installing outer window slot seal	208
2.15	Removing and installing window slot inner seal	209
60	Sunroof	211
1	Sliding sunroof	211



1.1	Assembly overview – sliding sunroof	211
1.2	Assembly overview - sunroof seals	213
1.3	Assembly overview – sunroof roller blind	213
1.4	Removing and installing glass panel	214
1.5	Adjusting sunroof panel	217
1.6	Removing and installing front trim for sliding sunroof	219
1.7	Removing and installing wind deflector	220
1.8	Removing and installing sunroof roller blind	223
1.9	Removing and installing sliding sunroof frame	230
1.10	Removing and installing J245sliding sunroof adjustment control unit	239
1.11	Removing and installing sunroof motor V1	241
1.12	Manual operation	244
1.13	Removing and installing slotted guide	245
1.14	Removing and installing sliding sunroof seals	249
1.15	Programming sliding sunroof adjustment control unit J245	256
63	- Bumpers	257
1	Bumper, front	257
1.1	Assembly overview – bumper cover	257
1.2	Assembly overview – bumper carrier	264
1.3	Removing and installing bumper cover	267
1.4	Installing holder for parking aid sender	273
1.5	Installing retainer for parking aid sender	278
2	Bumper, rear	282
2.1	Assembly overview – bumper cover	282
2.2	Assembly overview – bumper carrier	286
2.3	Removing and installing bumper cover	287
2.4	Removing and installing bumper carrier	290
2.5	Installing holder for parking aid sender	292
2.6	Installing retainer for parking aid sender	297
2.7	Removing and installing forced ventilation for passenger compartment	300
2.8	Checking forced ventilation for passenger compartment	302
64	- Glazing	303
1	Repair notes	303
1.1	Minimum drying times for bonded windows	303
1.2	Window repair	303
1.3	Installation instructions for bonded windows	304
1.4	Preparing old undamaged windows for installing	306
1.5	Preparing new windows for installing	307
1.6	Preparing body flange for installing	309
1.7	Cleaning off excess adhesive	310
2	Windscreen	311
2.1	Assembly overview – windscreen	311
2.2	Removing and installing windscreen	312
3	Rear windscreen	320
3.1	Assembly overview – rear window	320
3.2	Removing and installing rear window	321
4	Side windows	326
4.1	Assembly overview - rear side windows	326
4.2	Removing and installing rear side window	327
5	Door windows	331
5.1	Assembly overview - front door window	331
5.2	Assembly overview - rear door window	331
5.3	Removing and installing front door window	332



5.4	Removing and installing rear door window	336
66	- Exterior equipment	340
1	Radiator grille and front trim	340
1.1	Assembly overview – radiator grille	340
1.2	Removing and installing radiator grille	341
2	Spoiler	346
2.1	Assembly overview – spoiler	346
2.2	Removing and installing spoiler, GTI, R-Line	346
3	Mouldings, trims, extensions	354
3.1	Assembly overview - side member trim	354
3.2	Removing and installing A-pillar trim	355
3.3	Removing and installing B-pillar trim on door	356
3.4	Removing and installing C-pillar trim on door	359
3.5	Removing and installing step moulding	361
3.6	Removing and installing side member trim	363
4	Noise insulation	368
4.1	Assembly overview - noise insulation	368
5	Underbody cladding	372
5.1	Overview of fitting locations - underbody cladding	372
5.2	Removing and installing underbody cladding	374
5.3	Removing and installing centre underbody panels	376
5.4	Removing and installing rear underbody cladding	378
6	Exterior mirror	380
6.1	Assembly overview – exterior mirror	380
6.2	Removing and installing exterior mirror	382
6.3	Removing and installing mirror glass	387
6.4	Removing and installing mirror adjustment unit	389
6.5	Removing and installing mirror cover	391
6.6	Removing and installing mirror frame	392
7	Wheel housing liner	394
7.1	Assembly overview – front wheel housing liner	394
7.2	Assembly overview – rear wheel housing liner	395
7.3	Removing and installing front wheel housing liner	395
7.4	Removing and installing rear wheel housing liner	397
8	Trim film and protective film	399
8.1	Renewing decorative film	399
9	Lettering and badges	403
9.1	Dimensions - lettering and badges on rear	403
9.2	Dimensions – lettering and badges on sides	411
9.3	Renewing lettering and badges on sides, GTI, R-Line	414
9.4	Removing and installing lettering and badges for radiator grille	416
9.5	Renewing lettering and badges at rear	419
10	Special add-on parts	420
10.1	Assembly overview - special add-on parts, GTI, R-Line	420
11	Towing bracket	421
11.1	Assembly overview – towing bracket	421
11.2	Removing and installing towing bracket	423
12	Heat shields	426
12.1	Overview of fitting locations – heat shields	426
12.2	Removing and installing underbody heat shield	426
12.3	Removing and installing heat shield for centre exhaust system	427
12.4	Removing and installing heat shield for rear silencer	428