



Contents

00 - Technical data	1
1 Basic instructions	1
1.1 Original joint	1
1.2 Used joining techniques	1
2 Vehicle identification data	3
2.1 Vehicle identification number	3
2.2 Identification plate	4
2.3 Vehicle data sticker	5
3 Safety information	7
4 Gas vehicles	8
5 Moulded foam inserts	9
6 Galvanized body parts, high- and higher-strength and hot-formed body panels	11
7 Laser welding	14
8 Gaps	15
8.1 Body – front	15
8.2 Body, centre	16
8.3 Body - rear	19
9 Body dimensions	22
9.1 Body – front	22
9.2 Body, centre	24
9.3 Body - rear	28
9.4 Body dimension for floor panel	30
10 Straightening bracket set	34
10.1 Setup overview of complete body	34
11 Portal gauge	36
11.1 Setup overview of complete body	36
50 - Body - front	38
1 Overview of parts	38
2 Renewing right bracket	39
2.1 Tools	40
2.2 Removing	40
2.3 Installing	41
3 Repairing threads for securing subframe	45
3.1 Contents of thread repair kit	46
3.2 Repairing threads	47
4 Renewing mounting bracket for subframe	51
4.1 Tools	52
4.2 Removing	52
4.3 Installing	53
5 Renewing front longitudinal member cross panel	57
5.1 Tools	58
5.2 Removing	58
5.3 Installing	59
6 Renewing upper wheel housing longitudinal member	62
6.1 Tools	63
6.2 Removing	63
6.3 Installing	65
7 Renewing upper wheel housing longitudinal member - part section	69
7.1 Tools	70



7.2	Removing	70
7.3	Installing	72
8	Renewing hinge reinforcement for bonnet	76
8.1	Tools	77
8.2	Removing	77
8.3	Installing	78
9	Renewing upper inner wheel housing longitudinal member	81
9.1	Tools	82
9.2	Removing	82
9.3	Installing	84
10	Renewing upper inner wheel housing longitudinal member - part section	88
10.1	Tools	89
10.2	Removing	89
10.3	Installing	91
11	Renewing front wheel housing	95
11.1	Tools	96
11.2	Removing	96
11.3	Installing	98
12	Renewing front wheel housing (part section)	104
12.1	Tools	105
12.2	Removing	105
12.3	Installing	106
13	Renewing front longitudinal member	109
13.1	Tools	110
13.2	Removing	110
13.3	Installing	113
14	Renewing front longitudinal member (left part section)	119
14.1	Tools	120
14.2	Removing	120
14.3	Installing	121
15	Renewing front longitudinal member (right part section)	125
15.1	Tools	126
15.2	Removing	126
15.3	Installing	127
16	Renewing studs	131
51 - Body - centre		133
1	Overview of parts	133
2	Renewing roof - vehicles without tilting sunroof	134
2.1	Tools	135
2.2	Removing	135
2.3	Installing	140
3	Renewing roof - vehicles with tilting sunroof	152
3.1	Tools	153
3.2	Removing	153
3.3	Installing	157
4	Renewing front cross member for roof	168
4.1	Tools	169
4.2	Removing	169
4.3	Installing	170
5	Renewing rear roof cross member	173
5.1	Tools	174
5.2	Removing	174



5.3	Installing	175
6	Renewing roof side member	179
6.1	Tools	180
6.2	Removing	181
6.3	Installing	184
7	Renewing A-pillar	190
7.1	Tools	191
7.2	Moulded foam inserts	192
7.3	Removing	192
7.4	Installing	193
8	Renewing upper A-pillar reinforcement (part section repair)	198
8.1	Tools	199
8.2	Moulded foam inserts	199
8.3	Removing	199
8.4	Installing	202
9	Renewing A-pillar reinforcement	211
9.1	Tools	212
9.2	Moulded foam inserts	212
9.3	Removing	212
9.4	Installing	213
10	Renewing B-pillar	218
10.1	Tools	220
10.2	Identification plate	220
10.3	Moulded foam inserts	221
10.4	Removing	221
10.5	Installing	223
11	Renewing B-pillar reinforcement	228
11.1	Tools	229
11.2	Identification plate	229
11.3	Moulded foam inserts	230
11.4	Removing	230
11.5	Installing	232
12	Renewing outer side member	237
12.1	Tools	238
12.2	Identification plate	238
12.3	Moulded foam inserts	239
12.4	Removing	239
12.5	Installing	241
13	Renewing side member reinforcement	246
13.1	Tools	247
13.2	Moulded foam inserts	247
13.3	Removing	247
13.4	Installing	249
14	Renewing inner mounting for seat inner cross member	254
14.1	Tools	255
14.2	Removing	255
14.3	Installing	256
15	Renewing seat cross member	259
15.1	Tools	260
15.2	Removing	260
15.3	Installing	261
16	Renewing outer mounting for seat outer cross member	264
16.1	Tools	265
16.2	Removing	265



16.3	Installing	267
53	- Body - rear	273
1	Overview of parts	273
2	Renewing rear cross panel	274
2.1	Tools	275
2.2	Removing	275
2.3	Installing	277
3	Renewing rear cross member	281
3.1	Tools	282
3.2	Removing	282
3.3	Installing	283
4	Renewing tail light mounting	288
4.1	Tools	289
4.2	Removing	289
4.3	Installing	290
5	Renewing luggage compartment floor	293
5.1	Tools	294
5.2	Moulded foam inserts	294
5.3	Removing	294
5.4	Installing	295
6	Renewing luggage compartment floor (natural gas vehicles)	300
6.1	Tools	301
6.2	Moulded foam inserts	301
6.3	Removing	301
6.4	Installing	302
7	Renewing left floor panel	306
7.1	Tools	307
7.2	Removing	307
7.3	Installing	308
8	Renewing rear longitudinal member cross panel	311
8.1	Tools	312
8.2	Removing	312
8.3	Installing	313
9	Renewing rear longitudinal member (part section)	316
9.1	Tools	317
9.2	Removing	317
9.3	Installing	318
10	Renewing rear longitudinal member (part section – second parting cut)	321
10.1	Tools	322
10.2	Moulded foam inserts	322
10.3	Removing	322
10.4	Installing	324
11	Permitted parting cuts on side panel	334
12	Renewing side panel (part section)	335
12.1	Tools	336
12.2	Moulded foam inserts	337
12.3	Removing	337
12.4	Installing	339
13	Renewing outer wheel housing liner	344
13.1	Tools	345
13.2	Moulded foam inserts	345
13.3	Removing	345
13.4	Installing	346



14	Renewing lock reinforcement	351
14.1	Tools	352
14.2	Removing	352
14.3	Installing	354