



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on air conditioning systems	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when handling refrigerants	2
1.6 Safety precautions when working on SCR system	3
2 General information	5
2.1 Type plates	5
3 Repair instructions	8
3.1 General repair instructions	8
3.2 Fitting radiator and condensers	8
3.3 Working on refrigerant circuit	8
3.4 Refrigerant circuit seals	9
4 Technical data	11
4.1 Refrigerant capacity	11
4.2 Refrigerant oil capacities	11
4.3 Oil distribution	12
80 - Heating	13
1 Heater	13
1.1 Removing and installing fresh air blower series resistor with overheating fuse N24	13
2 Operating and display unit	14
2.1 Overview of operating and display unit	14
2.2 Removing and installing operating and display unit	14
87 - Air conditioning system	16
1 Overview of fitting locations - air conditioning system	16
1.1 Overview of fitting locations - components not located in passenger compartment	16
1.2 Overview of fitting locations - components located in front section of passenger compartment	18
2 Refrigerant circuit	21
2.1 System overview - refrigerant circuit	21
2.2 Assembly overview – condenser	23
2.3 Removing and installing refrigerant circuit pressure sender G805	25
2.4 Removing and installing expansion valve	26
2.5 Removing and installing condenser	30
2.6 Removing and installing desiccant bag or cartridge	34
2.7 Removing and installing evacuating and charging valves on low and high-pressure side	47
2.8 Commissioning air conditioning system after filling refrigerant circuit	49
2.9 Removing and installing refrigerant line from condenser to air conditioner compressor	50
2.10 Removing and installing refrigerant line from air conditioner compressor to evaporator	52
2.11 Removing and installing refrigerant line from air conditioner compressor to evaporator	56
3 Air conditioner compressor	60
3.1 Assembly overview – drive unit of air conditioner compressor	60
3.2 Assembly overview - pulley	64
3.3 Removing air conditioning compressor from and installing on bracket	68
3.4 Removing and installing air conditioner compressor	70
3.5 Checking high-pressure safety valve on air conditioner compressor	75
3.6 Removing and installing pulley	76
4 Control motors	82



4.1	Overview of fitting locations – control motors at front	82
4.2	Removing and installing defroster flap VX47	87
4.3	Removing and installing front left temperature flap VX34	89
4.4	Removing and installing front right temperature flap VX35	92
4.5	Removing and installing fresh air and air recirculation flap VX96	94
4.6	Removing and installing air distribution flap VX33	97
4.7	Removing and installing fresh air and air recirculation flap control motor V154	98
4.8	Removing and installing air distribution flap adjustment unit	100
4.9	Removing and installing temperature flap actuator	101
5	Front heater and air conditioning unit	104
5.1	Assembly overview – heater and air conditioning unit	104
5.2	Assembly overview – evaporator housing	106
5.3	Removing and installing evaporator	108
5.4	Checking auxiliary air heater element Z35	109
5.5	Removing and installing auxiliary air heater element Z35	110
5.6	Removing and installing heater and air conditioning unit	111
5.7	Removing and installing holder for heater and air conditioning unit	117
5.8	Dismantling and assembling heater and air conditioning unit	117
5.9	Removing and installing air distribution housing	118
5.10	Removing and installing dust and pollen filter	119
5.11	Removing and installing fresh air blower V2	121
5.12	Removing and installing fresh air blower control unit J126	121
5.13	Removing and installing heat exchanger	122
5.14	Removing and installing coolant pipes on heat exchanger	132
5.15	Removing and installing evaporator temperature sensor G308	135
5.16	Removing and installing flexible shafts	136
5.17	Removing and installing condensation drain	139
5.18	Checking condensation drain	141
5.19	Removing and installing fresh air blower series resistor with overheating fuse N24	142
6	Air duct	143
6.1	Assembly overview – air duct and air distribution in passenger compartment	143
6.2	Removing and installing driver side footwell vents	147
6.3	Removing and installing front passenger side footwell vents	149
6.4	Removing and installing rear footwell vent	150
6.5	Removing and installing fresh air intake	151
6.6	Removing and installing cover for fresh air intake	152
6.7	Removing and installing air intake duct	152
6.8	Removing and installing air duct for defroster vent	153
6.9	Removing and installing air duct for centre vent	154
7	Operating and display unit	155
7.1	Overview of operating and display unit	155
7.2	Removing and installing operating and display unit	160
8	Other controlling and regulating components	162
8.1	Removing and installing sunlight penetration photosensor G107	162
8.2	Removing and installing ambient temperature sensor G17	162
8.3	Removing and installing humidity sender for air conditioning system G260	163
8.4	Removing and installing left vent temperature sender G150	163
8.5	Removing and installing right vent temperature sender G151	165
8.6	Removing and installing footwell vent temperature sender G192	167