



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Repair instructions	3
3.1 General repair instructions	3
4 Technical data	6
4.1 Allocation gearbox - engine	6
4.2 Capacities	6
5 Overview - power transmission	7
6 Electrical components	9
6.1 Overview of fitting locations - electrical components	9
30 - Clutch	11
1 Clutch mechanism	11
1.1 Overview of fitting locations – clutch mechanism	11
1.2 Assembly overview - pedal cluster	12
1.3 Assembly overview - clutch hydraulics	14
1.4 Removing and installing bearing bush	16
1.5 Removing and installing clutch position sender G476	17
1.6 Removing and installing over-centre spring	19
1.7 Removing and installing clutch pedal	21
1.8 Removing and installing mounting bracket	24
1.9 Checking clutch master cylinder and clutch slave cylinder	27
1.10 Removing and installing master cylinder	28
1.11 Removing and installing clutch slave cylinder	29
1.12 Removing and installing lines for clutch mechanism	32
1.13 Bleeding clutch mechanism	35
2 Clutch	37
34 - Controls, housing	38
1 Selector mechanism	38
1.1 Installation position - selector mechanism	38
1.2 Assembly overview – gear knob and cover	39
1.3 Assembly overview - selector mechanism	40
1.4 Removing and installing gear knob	42
1.5 Removing and installing selector mechanism	44
1.6 Repairing selector mechanism	47
1.7 Adjusting selector mechanism	52
1.8 Checking selector mechanism	55
2 Removing and installing gearbox	57
2.1 Removing gearbox	57
2.2 Installing gearbox	66
2.3 Specified torques for gearbox	69
3 Assembly mountings	71
3.1 Assembly overview - assembly mountings	71
4 Transporting gearbox	74
5 Gear oil	75
5.1 Checking gear oil level	75
5.2 Draining and filling gear oil	76



6	Dismantling and assembling gearbox	78
6.1	Assembly overview - selector unit	78
6.2	Removing and installing selector unit with gearbox installed	79
6.3	Repairing selector unit	84
6.4	Renewing selector shaft seal	85
7	Gearbox housing, clutch housing	87
35 - Gears, shafts		88
1	Input shaft	88
2	Output shaft	89
39 - Final drive - differential		90
1	Oil seals	90
1.1	Overview of fitting locations - oil seals	90
1.2	Renewing left seal	90
1.3	Renewing right seal	93
2	Differential	97