



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
<b>2 Identification</b>	<b>2</b>
<b>3 Technical data</b>	<b>3</b>
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
<b>4 Overview - power transmission</b>	<b>4</b>
<b>5 Electrical components</b>	<b>6</b>
<b>6 Repair instructions</b>	<b>7</b>
6.1 General repair instructions	7
<b>30 - Clutch</b>	<b>11</b>
<b>1 Clutch mechanism</b>	<b>11</b>
1.1 Assembly overview - clutch release mechanism	11
1.2 Repairing clutch release mechanism	13
<b>2 Clutch</b>	<b>15</b>
2.1 Assembly overview - clutch	15
2.2 Removing and installing clutch	17
<b>34 - Controls, housing</b>	<b>33</b>
<b>1 Selector mechanism</b>	<b>33</b>
<b>2 Removing and installing gearbox</b>	<b>34</b>
<b>3 Transporting gearbox</b>	<b>35</b>
<b>4 Gear oil</b>	<b>36</b>
<b>5 Securing to engine and gearbox support</b>	<b>37</b>
<b>6 Dismantling and assembling gearbox</b>	<b>39</b>
6.1 Schematic overview - gearbox	39
6.2 Assembly overview - gearbox	39
6.3 Assembly overview - gearbox housing cover	40
6.4 Assembly overview - clutch housing	42
6.5 Assembly overview - shafts, differential, selector mechanism	42
6.6 Assembly overview - selector forks	44
6.7 Repairing selector forks	45
6.8 Dismantling and assembling gearbox	50
<b>7 Gearbox housing, clutch housing</b>	<b>63</b>
7.1 Assembly overview - gearbox housing and clutch housing	63
7.2 Repairing gearbox housing	65
7.3 Repairing clutch housing	66
<b>35 - Gears, shafts</b>	<b>69</b>
<b>1 Input shaft</b>	<b>69</b>
1.1 Assembly overview - input shaft	69
1.2 Dismantling and assembling input shaft	71
1.3 Renewing input shaft seal	85
<b>2 Output shaft</b>	<b>88</b>
2.1 Assembly overview - output shaft	88
2.2 Dismantling and assembling output shaft	91
<b>39 - Final drive - differential</b>	<b>99</b>
<b>1 Oil seals</b>	<b>99</b>
1.1 Overview of fitting locations - oil seals	99



<b>2</b>	<b>Differential</b> .....	<b>100</b>
2.1	Assembly overview - differential .....	100
2.2	Dismantling and assembling differential .....	102
2.3	Adjusting differential .....	112