



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Technical data	3
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
4 Overview - power transmission	4
5 Electrical components	6
5.1 Overview of fitting locations - electrical components	6
6 Repair instructions	7
6.1 General repair instructions	7
30 - Clutch	9
1 Clutch mechanism	9
1.1 Overview of fitting locations – clutch mechanism	9
1.2 Assembly overview - pedal cluster	11
1.3 Assembly overview - clutch hydraulics	12
1.4 Removing and installing bearing bush	14
1.5 Checking clutch master cylinder and clutch slave cylinder	15
1.6 Removing and installing clutch position sender G476	16
1.7 Removing and installing over-centre spring	17
1.8 Removing and installing clutch pedal	19
1.9 Removing and installing mounting bracket	21
1.10 Removing and installing master cylinder	23
1.11 Removing and installing clutch slave cylinder	24
1.12 Removing and installing lines for clutch mechanism	26
1.13 Bleeding clutch mechanism	28
2 Clutch	30
34 - Controls, housing	31
1 Selector mechanism	31
1.1 Installation position - selector mechanism	31
1.2 Assembly overview – gear knob and cover	32
1.3 Assembly overview - selector mechanism	33
1.4 Removing and installing gear knob	34
1.5 Removing and installing selector mechanism	36
1.6 Repairing selector mechanism	43
1.7 Adjusting selector mechanism	45
1.8 Checking selector mechanism	48
2 Removing and installing gearbox	49
2.1 Removing gearbox	49
2.2 Installing gearbox	56
2.3 Specified torques for gearbox	59
3 Assembly mountings	60
3.1 Assembly overview - assembly mountings	60
4 Gear oil	62
4.1 Checking gear oil level	62
4.2 Draining and filling gear oil	62
5 Dismantling and assembling gearbox	65



5.1	Assembly overview - selector unit	65
5.2	Removing and installing selector unit with gearbox installed	66
5.3	Repairing selector unit	68
5.4	Renewing selector shaft seal	69
6	Gearbox housing, clutch housing	71
35	- Gears, shafts	72
1	Input shaft	72
2	Output shaft	73
3	Reverse shaft	74
39	- Final drive - differential	75
1	Oil seals	75
1.1	Overview of fitting locations - seals	75
1.2	Renewing left seal	76
1.3	Renewing right oil seal	78
2	Differential	82