



Contents

00 - Technical data	1
1 Safety information	1
2 Identification	2
3 Technical data	3
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
4 Overview - power transmission	4
5 Electrical components	6
6 Repair instructions	7
6.1 General repair instructions	7
30 - Clutch	10
1 Clutch operation	10
1.1 Assembly overview - clutch release mechanism	10
1.2 Repairing clutch release mechanism	11
2 Clutch	13
2.1 Assembly overview - clutch	13
2.2 Removing and installing clutch	16
34 - Controls, housing	28
1 Selector mechanism	28
2 Removing and installing gearbox	29
3 Transporting gearbox	30
4 Gear oil	31
5 Securing to engine and gearbox support	32
6 Dismantling and assembling gearbox	33
6.1 Schematic overview - gearbox	33
6.2 Assembly overview - gearbox	35
6.3 Assembly overview - cover for gearbox housing and 5th gear	36
6.4 Assembly overview - gearbox housing and selector mechanism	38
6.5 Assembly overview - selector unit	39
6.6 Assembly overview - shafts, differential, selector mechanism	39
6.7 Assembly overview - selector forks	40
6.8 Repairing selector forks	41
6.9 Removing cover for gearbox housing and 5th gear	44
6.10 Dismantling and assembling gearbox	50
6.11 Installing cover for gearbox housing and 5th gear	62
7 Gearbox housing, clutch housing	66
7.1 Assembly overview - gearbox housing and clutch housing	66
7.2 Repairing gearbox housing	68
7.3 Repairing clutch housing	73
35 - Gears, shafts	75
1 Input shaft	75
1.1 Assembly overview - input shaft	75
1.2 Dismantling and assembling input shaft	77
1.3 Adjusting input shaft	83
1.4 Renewing input shaft seal	87
2 Output shaft	89
2.1 Assembly overview - output shaft	89
2.2 Dismantling and assembling output shaft	92



2.3	Adjusting output shaft	102
3	Reverse shaft	107
3.1	Assembly overview - reverse shaft	107
3.2	Dismantling and assembling reverse shaft	108
39	Final drive - differential	111
1	Oil seals	111
1.1	Overview of fitting locations - seals	111
2	Differential	112
2.1	Assembly overview - differential	112
2.2	Dismantling and assembling differential	113
2.3	Adjusting differential	119
3	Adjustment overview	123