



## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b>  | <b>1</b>  |
| <b>1 Safety information</b>   | <b>1</b>  |
| 1.1 Safety measures when working on vehicles with a start/stop system | 1         |
| <b>2 Identification</b>   | <b>2</b>  |
| 2.1 Gearbox identification  | 2         |
| <b>3 Technical data</b>   | <b>3</b>  |
| 3.1 Allocation gearbox - engine                                       | 3         |
| 3.2 Capacities  | 3         |
| <b>4 Overview - power transmission</b>                                | <b>4</b>  |
| <b>5 Electrical components</b>  | <b>6</b>  |
| 5.1 Overview of fitting locations - electrical components             | 6         |
| <b>6 Repair instructions</b>  | <b>8</b>  |
| 6.1 General repair instructions                                       | 8         |
| <b>30 - Clutch</b>  | <b>11</b> |
| <b>1 Clutch mechanism</b>   | <b>11</b> |
| 1.1 Overview of fitting locations – clutch mechanism                  | 11        |
| 1.2 Assembly overview - pedal cluster                                 | 12        |
| 1.3 Assembly overview - clutch hydraulics                             | 14        |
| 1.4 Removing and installing bearing bush                              | 16        |
| 1.5 Checking clutch master cylinder and clutch slave cylinder         | 17        |
| 1.6 Removing and installing clutch position sender G476               | 18        |
| 1.7 Removing and installing over-centre spring                        | 20        |
| 1.8 Removing and installing clutch pedal                              | 22        |
| 1.9 Removing and installing mounting bracket                          | 25        |
| 1.10 Removing and installing master cylinder                          | 28        |
| 1.11 Removing and installing clutch slave cylinder                    | 29        |
| 1.12 Removing and installing lines for clutch mechanism               | 32        |
| 1.13 Bleeding clutch mechanism  | 34        |
| <b>2 Clutch</b>   | <b>37</b> |
| <b>34 - Controls, housing</b>   | <b>38</b> |
| <b>1 Selector mechanism</b>   | <b>38</b> |
| 1.1 Installation position - selector mechanism                        | 38        |
| 1.2 Assembly overview – gear knob and cover                           | 39        |
| 1.3 Assembly overview - selector mechanism                            | 40        |
| 1.4 Removing and installing gear knob                                 | 42        |
| 1.5 Removing and installing selector mechanism                        | 44        |
| 1.6 Repairing selector mechanism                                      | 52        |
| 1.7 Adjusting selector mechanism                                      | 56        |
| 1.8 Checking selector mechanism                                       | 60        |
| <b>2 Removing and installing gearbox</b>                              | <b>61</b> |
| 2.1 Specified torques for gearbox                                     | 61        |
| 2.2 Removing gearbox  | 61        |
| 2.3 Installing gearbox  | 70        |
| <b>3 Assembly mountings</b>   | <b>77</b> |
| 3.1 Assembly overview – assembly mountings                            | 77        |
| <b>4 Gear oil</b>   | <b>80</b> |
| 4.1 Checking gear oil level   | 80        |
| <b>5 Dismantling and assembling gearbox</b>                           | <b>82</b> |
| 5.1 Assembly overview - selector unit                                 | 82        |



|  |  |           |
|--|--|-----------|
| 5.2  | Removing and installing selector unit with gearbox installed ..... | 83        |
| 5.3  | Repairing selector unit .....                                      | 88        |
| 5.4  | Renewing selector shaft seal .....                                 | 89        |
| <b>6</b>                                     | <b>Gearbox housing, clutch housing .....</b>                       | <b>90</b> |
| <b>35 - Gears, shafts .....</b>              |  | <b>91</b> |
| 1  | Input shaft .....  | 91        |
| 2  | Output shaft .....   | 92        |
| <b>39 - Final drive - differential .....</b> |  | <b>93</b> |
| 1  | Oil seals .....  | 93        |
| 1.1  | Overview of fitting locations - oil seals .....                    | 93        |
| 1.2  | Renewing left seal .....   | 93        |
| 1.3  | Renewing right seal .....  | 96        |
| 2  | Differential .....   | 101       |