



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
<b>2 Technical data</b>	<b>2</b>
2.1 Capacities	2
<b>3 Overview - power transmission</b>	<b>3</b>
<b>4 Electrical components</b>	<b>5</b>
4.1 Overview of fitting locations - electrical components	5
<b>5 Repair notes</b>	<b>6</b>
5.1 General repair instructions	6
<b>30 - Clutch</b>	<b>10</b>
<b>1 Clutch mechanism</b>	<b>10</b>
1.1 Assembly overview - clutch release mechanism	10
1.2 Repairing clutch release mechanism	11
<b>2 Clutch</b>	<b>14</b>
2.1 Assembly overview - clutch	14
2.2 Removing and installing clutch	14
<b>34 - Controls, housing</b>	<b>21</b>
<b>1 Selector mechanism</b>	<b>21</b>
<b>2 Removing and installing gearbox</b>	<b>22</b>
<b>3 Transporting gearbox</b>	<b>23</b>
<b>4 Gear oil</b>	<b>24</b>
<b>5 Securing to engine and gearbox support</b>	<b>25</b>
<b>6 Dismantling and assembling gearbox</b>	<b>26</b>
6.1 Schematic overview - gearbox	26
6.2 Assembly overview - gearbox	26
6.3 Assembly overview - cover for gearbox housing and 5th/6th gear	27
6.4 Assembly overview - clutch housing	29
6.5 Assembly overview - shafts, differential, selector mechanism	29
6.6 Assembly overview - selector unit	31
6.7 Assembly overview - selector forks	31
6.8 Repairing selector forks	32
6.9 Dismantling and assembling gearbox	37
<b>7 Gearbox housing, clutch housing</b>	<b>58</b>
7.1 Assembly overview - gearbox housing and clutch housing	58
7.2 Assembly overview - gearbox housing cover	60
7.3 Repairing gearbox housing	61
7.4 Repairing gearbox housing cover	62
7.5 Repairing clutch housing	65
<b>35 - Gears, shafts</b>	<b>68</b>
<b>1 Input shaft</b>	<b>68</b>
1.1 Assembly overview - input shaft	68
1.2 Dismantling and assembling input shaft	71
1.3 Renewing input shaft seal	83
<b>2 Output shaft</b>	<b>85</b>
2.1 Assembly overview - output shaft	85
2.2 Dismantling and assembling output shaft	88
<b>39 - Final drive - differential</b>	<b>96</b>



<b>1</b>	<b>Oil seals</b> .....	<b>96</b>
1.1	Overview of fitting locations - oil seals .....	96
<b>2</b>	<b>Differential</b> .....	<b>97</b>
2.1	Assembly overview - differential .....	97
2.2	Dismantling and assembling differential .....	98
2.3	Adjusting differential .....	107