



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety precautions when using testers and measuring instruments during a road test .....	1
1.2 Safety precautions when working on vehicles with a start/stop system .....	2
1.3 All-wheel drive - notes on performance test .....	2
<b>2 Identification</b> .....	<b>3</b>
<b>3 Technical data</b> .....	<b>4</b>
3.1 Allocation gearbox - engine .....	4
3.2 Capacities .....	4
<b>4 Overview - power transmission</b> .....	<b>5</b>
<b>5 Electrical components</b> .....	<b>7</b>
5.1 Overview of fitting locations – electrical components, manual gearbox .....	7
5.2 Overview of fitting locations – electrical components, clutch mechanism .....	7
<b>6 Repair instructions</b> .....	<b>8</b>
6.1 General repair instructions .....	8
<b>30 - Clutch</b> .....	<b>10</b>
<b>1 Clutch operation</b> .....	<b>10</b>
1.1 Overview of fitting locations – clutch mechanism .....	10
1.2 Assembly overview - pedal cluster .....	12
1.3 Assembly overview - clutch hydraulics .....	13
1.4 Removing and installing bearing bush .....	15
1.5 Checking clutch master cylinder and clutch slave cylinder .....	16
1.6 Removing and installing clutch position sender G476 .....	16
1.7 Removing and installing over-centre spring .....	17
1.8 Removing and installing clutch pedal .....	19
1.9 Removing and installing mounting bracket .....	21
1.10 Removing and installing clutch master cylinder .....	23
1.11 Removing and installing bleeder .....	24
1.12 Removing and installing lines for clutch mechanism .....	26
1.13 Bleeding clutch mechanism .....	28
<b>2 Clutch</b> .....	<b>30</b>
2.1 Determining make of clutch .....	30
<b>34 - Controls, housing</b> .....	<b>32</b>
<b>1 Selector mechanism</b> .....	<b>32</b>
1.1 Installation position - selector mechanism .....	32
1.2 Assembly overview - gear knob and cover .....	33
1.3 Assembly overview - selector mechanism .....	34
1.4 Removing and installing gear knob .....	35
1.5 Removing and installing selector mechanism .....	37
1.6 Repairing selector mechanism .....	42
1.7 Adjusting selector mechanism .....	45
1.8 Checking selector mechanism .....	48
<b>2 Removing and installing gearbox</b> .....	<b>49</b>
2.1 Removing gearbox .....	49
2.2 Installing gearbox .....	59
2.3 Specified torques for gearbox .....	62
<b>3 Assembly mountings</b> .....	<b>63</b>
3.1 Assembly overview - assembly mountings .....	63
<b>4 Transporting gearbox</b> .....	<b>65</b>



<b>5</b>	<b>Gear oil</b> .....	<b>66</b>
5.1	Distinguishing between different manual gearbox types when filling oil .....	66
5.2	Checking gear oil level .....	66
<b>6</b>	<b>Dismantling and assembling gearbox</b> .....	<b>70</b>
6.1	Assembly overview - selector unit .....	70
6.2	Removing and installing selector unit with gearbox installed .....	70
6.3	Renewing selector shaft seal .....	74
<b>7</b>	<b>Gearbox housing, clutch housing</b> .....	<b>77</b>
<b>35 - Gears, shafts</b> .....		<b>78</b>
<b>1</b>	<b>Input shaft</b> .....	<b>78</b>
<b>2</b>	<b>Output shaft</b> .....	<b>79</b>
<b>39 - Final drive - differential</b> .....		<b>80</b>
<b>1</b>	<b>Seals</b> .....	<b>80</b>
1.1	Overview of fitting locations - seals .....	80
1.2	Renewing left seal .....	81
1.3	Renewing right oil seal .....	84
<b>2</b>	<b>Differential</b> .....	<b>87</b>