



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when tow-starting or towing	2
<b>2 Identification</b>	<b>3</b>
2.1 Gearbox identification	3
<b>3 Repair notes</b>	<b>4</b>
3.1 General information	4
3.2 General repair instructions	5
3.3 Gaskets and seals	6
3.4 Nuts and bolts	6
<b>4 Technical data</b>	<b>8</b>
4.1 Allocation gearbox - engine	8
4.2 Capacities	11
<b>5 Overview - power transmission</b>	<b>14</b>
5.1 Overview - power transmission - front-wheel drive	14
<b>30 - Clutch</b>	<b>15</b>
<b>1 Clutch mechanism</b>	<b>15</b>
1.1 Assembly overview - clutch engagement	15
1.2 Removing and installing clutch engagement	17
1.3 Adjusting clutch engagement	21
<b>2 Clutch</b>	<b>38</b>
2.1 Assembly overview - dual clutch	38
2.2 Removing dual clutch	40
2.3 Installing dual clutch	46
2.4 Renewing input shaft seal	51
2.5 Renewing oil seal for inner input shaft	54
<b>34 - Controls, housing</b>	<b>57</b>
<b>1 Mechatronic unit</b>	<b>57</b>
1.1 Assembly overview - mechatronic unit	57
1.2 Removing and installing mechatronic unit for dual clutch gearbox J743	60
1.3 Moving mechatronic unit for dual clutch gearbox J743 into removal position by hand	78
1.4 Renewing clutch actuator	80
1.5 Renewing control unit for mechatronic unit for dual clutch gearbox J743	87
<b>2 Selector mechanism</b>	<b>93</b>
2.1 Assembly overview - selector mechanism	93
2.2 Manual release from position P	97
2.3 Removing and installing selector lever handle	104
2.4 Moving push-button in the handle to installation position	124
2.5 Removing and installing selector mechanism	127
2.6 Adjusting selector mechanism	136
2.7 Removing and installing gear selector cable	142
2.8 Checking selector mechanism	148
2.9 Checking and adjusting selector lever cable	149
2.10 Renewing selector shaft seal	151
<b>3 Removing and installing gearbox</b>	<b>152</b>
3.1 Removing gearbox	152
3.2 Installing gearbox	308



3.3	Specified torques for gearbox .....	313
<b>4</b>	<b>Assembly mountings .....</b>	<b>315</b>
4.1	Assembly overview - assembly mountings .....	315
<b>5</b>	<b>Transporting gearbox .....</b>	<b>319</b>
<b>6</b>	<b>Securing to engine and gearbox support .....</b>	<b>321</b>
<b>7</b>	<b>Gear oil .....</b>	<b>324</b>
7.1	Draining and filling gear oil .....	324
7.2	Draining and filling hydraulic fluid for mechatronic unit .....	327
<b>35 - Gears, shafts .....</b>		<b>331</b>
<b>1</b>	<b>Parking lock .....</b>	<b>331</b>
1.1	Removing and installing cover for parking lock .....	331
1.2	Removing and installing parking lock .....	332
<b>39 - Final drive - differential .....</b>		<b>334</b>
<b>1</b>	<b>Oil seals .....</b>	<b>334</b>
1.1	Overview of fitting locations - oil seals .....	334
1.2	Renewing left seal .....	334
1.3	Renewing right seal .....	338