



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
1.5 Safety precautions when working on cooling system	3
2 Identification	4
2.1 Gearbox identification	4
3 Repair instructions	5
3.1 General notes	5
3.2 Rules for cleanliness	5
3.3 General repair instructions	5
3.4 Gaskets and seals	6
3.5 Nuts and bolts	7
4 Technical data	8
4.1 Capacities	8
5 Electrical components	9
5.1 Overview of fitting locations - electrical components	9
30 - Clutch	10
1 Clutch	10
1.1 Assembly overview - dual clutch	10
1.2 Removing and installing clutch end cover	10
1.3 Removing dual clutch	15
1.4 Installing dual clutch	19
34 - Controls, housing	28
1 Mechatronic unit	28
1.1 Assembly overview - mechatronic unit	28
1.2 Removing and installing sump	29
1.3 Removing and installing mechatronic unit	32
2 Selector mechanism	36
2.1 Assembly overview - selector mechanism	36
2.2 Manual release from position P	38
2.3 Removing and installing selector lever handle	39
2.4 Moving push-button in the handle to installation position	42
2.5 Removing and installing selector mechanism	44
2.6 Checking selector mechanism	46
2.7 Checking and adjusting selector lever cable	47
2.8 Renewing selector shaft seal	48
3 Removing and installing gearbox	52
3.1 Specified torques for gearbox	52
3.2 Removing gearbox	52
3.3 Installing gearbox	60
4 Assembly mountings	64
4.1 Assembly overview - assembly mountings	64
5 Transporting gearbox	66
6 Securing to engine and gearbox support	68
7 Gear oil circuit	70
7.1 Assembly overview - gear oil circuit	70



7.2	Removing and installing gear oil cooler	70
7.3	Removing and installing gear oil filter	73
7.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475	75
8	Gear oil	77
8.1	Overview of oil drain and inspection plugs	77
8.2	Tools for gear oil change	77
8.3	Checking gear oil level	79
8.4	Draining and filling gear oil	83
35	- Gears, shafts	86
1	Currently, no repairs can be made to gears and shafts	86
39	- Final drive - differential	87
1	Oil seals	87
1.1	Overview of fitting locations - oil seals	87
1.2	Renewing left seal	87
1.3	Renewing right seal	90