



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General information	5
3.3 General repair instructions	5
3.4 Foreign objects in engine	6
3.5 Contact corrosion	6
3.6 Routing and attachment of lines	6
3.7 Fitting radiator and condensers	6
3.8 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Removing and installing engine</b>	<b>8</b>
1.1 Removing motor	8
1.2 Separating engine and gearbox	30
1.3 Securing engine on engine and gearbox support	31
1.4 Installing engine	34
<b>2 Assembly mountings</b>	<b>38</b>
2.1 Assembly overview - assembly mountings	38
2.2 Removing and installing engine mounting	44
2.3 Removing and installing gearbox mountings	46
2.4 Removing and installing pendulum support	50
2.5 Supporting engine in installation position	51
2.6 Adjusting assembly mountings	60
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	62
<b>13 - Crankshaft group</b>	<b>64</b>
<b>1 Cylinder block (pulley end)</b>	<b>64</b>
1.1 Assembly overview - poly V-belt drive	64
1.2 Removing and installing poly-V belt	68
1.3 Removing and installing tensioner for poly V-belt	72
1.4 Removing and installing vibration damper	73
1.5 Removing and installing engine support	77
1.6 Renewing crankshaft oil seal - belt pulley end	79
1.7 Removing and installing sealing flange on pulley end	82
<b>2 Cylinder block, gearbox end</b>	<b>86</b>
2.1 Assembly overview - cylinder block, gearbox end	86
2.2 Removing and installing flywheel	87
2.3 Removing and installing sealing flange on gearbox side	89
<b>3 Crankshaft</b>	<b>100</b>
3.1 Crankshaft dimensions	100
<b>4 Pistons and conrods</b>	<b>101</b>
4.1 Assembly overview - pistons and conrods	101
4.2 Checking pistons and cylinder bores	103



4.3	Separating new conrod	106
4.4	Removing and installing oil spray jets	106
4.5	Setting piston to TDC position	108
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>111</b>
<b>1</b>	<b>Cylinder head</b>	<b>111</b>
1.1	Assembly overview - cylinder head	111
1.2	Removing and installing cylinder head	114
1.3	Removing and installing camshaft housing	120
1.4	Checking compression	125
<b>2</b>	<b>Toothed belt drive</b>	<b>128</b>
2.1	Assembly overview - toothed belt cover	128
2.2	Assembly overview - toothed belt	129
2.3	Removing and installing toothed belt guard	132
2.4	Removing and installing toothed belt	133
2.5	Preassembling and installing valve timing tool	143
2.6	Checking valve timing	151
2.7	Adjusting valve timing	154
2.8	Removing toothed belt from camshaft	165
<b>3</b>	<b>Valve gear</b>	<b>173</b>
3.1	Assembly overview - valve gear	173
3.2	Removing and installing camshaft oil seal	176
3.3	Removing and installing camshaft adjuster	187
3.4	Removing and installing camshaft control valve 1 N727	197
3.5	Removing and installing exhaust camshaft control valve 1 N318	198
3.6	Removing and installing valve stem seals	198
3.7	Removing and installing holder for oil seal	208
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>212</b>
4.1	Checking valve guides	212
<b>17</b>	<b>- Lubrication</b>	<b>214</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>214</b>
1.1	Assembly overview - sump/oil pump	214
1.2	Engine oil:	220
1.3	Removing and installing oil sump	221
1.4	Removing and installing oil pump	225
1.5	Removing and installing oil level and oil temperature sender G266	229
<b>2</b>	<b>Crankcase ventilation</b>	<b>230</b>
2.1	Assembly overview - crankcase breather system	230
2.2	Removing and installing oil separator	231
<b>3</b>	<b>Oil filter, oil pressure switch</b>	<b>232</b>
3.1	Assembly overview - oil pressure switches/oil pressure control	232
3.2	Removing and installing oil pressure sender G10	233
3.3	Checking oil pressure and oil pressure switch	234
3.4	Removing and installing oil filter housing	234
3.5	Removing and installing oil pressure regulating valve N428	235
<b>19</b>	<b>- Cooling</b>	<b>237</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>237</b>
1.1	Connection diagram - coolant hoses	237
1.2	Checking cooling system for leaks	237
1.3	Draining and adding coolant	241
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>259</b>
2.1	Assembly overview - coolant pump, thermostat	259
2.2	Assembly overview - coolant temperature sender	261



2.3	Removing and installing coolant pump .....	261
2.4	Removing and installing toothed belt pulley for coolant pump .....	266
2.5	Removing and installing coolant temperature sender G62 .....	268
2.6	Removing and installing engine outlet coolant temperature sender G82 .....	271
2.7	Removing and installing engine temperature regulation module GX33 .....	273
2.8	Checking coolant pump .....	276
<b>3</b>	<b>Coolant pipes .....</b>	<b>282</b>
3.1	Assembly overview - coolant pipes .....	282
3.2	Removing and installing coolant pipes .....	283
<b>4</b>	<b>Radiator, radiator fan .....</b>	<b>284</b>
4.1	Assembly overview - radiator/radiator fan .....	284
4.2	Assembly overview - radiator cowl and radiator fan .....	287
4.3	Removing and installing radiator .....	288
4.4	Removing and installing radiator cowl with radiator fan .....	299
4.5	Removing and installing radiator fan VX57 .....	303
<b>24</b>	<b>Mixture preparation - injection .....</b>	<b>304</b>
<b>1</b>	<b>Injection system .....</b>	<b>304</b>
1.1	Overview of fitting locations - injection system .....	304
<b>2</b>	<b>Injectors .....</b>	<b>308</b>
2.1	Assembly overview - fuel rail with injectors .....	308
2.2	Removing and installing injectors .....	309
2.3	Checking injectors .....	313
<b>3</b>	<b>Air filter .....</b>	<b>319</b>
3.1	Assembly overview - air filter housing .....	319
3.2	Removing and installing air filter housing .....	322
3.3	Removing and installing resonator for intake air .....	324
3.4	Removing air duct on lock carrier .....	324
<b>4</b>	<b>Intake manifold .....</b>	<b>325</b>
4.1	Assembly overview - intake manifold .....	325
4.2	Removing and installing intake manifold .....	327
4.3	Removing and installing throttle valve module GX3 .....	330
4.4	Cleaning throttle valve module GX3 .....	332
<b>5</b>	<b>Senders and sensors .....</b>	<b>334</b>
5.1	Removing and installing intake manifold sender GX9 .....	334
5.2	Removing and installing fuel pressure sender for low-pressure G410 .....	335
<b>6</b>	<b>Engine control unit .....</b>	<b>336</b>
6.1	Assembly overview - engine control unit .....	336
6.2	Removing and installing engine control unit J623 .....	337
6.3	Removing and installing engine (motor) control unit J623 with protective housing .....	339
<b>7</b>	<b>Lambda probe .....</b>	<b>344</b>
7.1	Assembly overview - Lambda probe .....	344
7.2	Removing and installing Lambda probe .....	345
<b>26</b>	<b>Exhaust system .....</b>	<b>350</b>
<b>1</b>	<b>Exhaust pipes and silencers .....</b>	<b>350</b>
1.1	Assembly overview - silencers .....	350
1.2	Separating exhaust pipes from silencers .....	352
1.3	Removing and installing silencer .....	354
1.4	Aligning exhaust system free of stress .....	359
1.5	Checking exhaust system for leaks .....	359
1.6	Installation position of clamp .....	360
<b>2</b>	<b>Emission control .....</b>	<b>364</b>
2.1	Assembly overview - emission control .....	364



2.2	Removing and installing catalytic converter .....	367
<b>28</b>	<b>- Ignition system .....</b>	<b>371</b>
<b>1</b>	<b>Ignition system .....</b>	<b>371</b>
1.1	Assembly overview - ignition system .....	371
1.2	Removing and installing ignition coils with output stage .....	373
1.3	Removing and installing knock sensor 1 G61 .....	376
1.4	Removing and installing engine speed sender G28 .....	376
1.5	Removing and installing inlet camshaft position sender G1002 .....	381
1.6	Removing and installing exhaust camshaft position sender G1003 .....	382