



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
1.6 Safety precautions when working on exhaust system	3
<b>2 Identification</b>	<b>4</b>
2.1 Engine number/engine data	4
<b>3 Repair notes</b>	<b>7</b>
3.1 Rules for cleanliness	7
3.2 General information	7
3.3 General repair instructions	8
3.4 Foreign objects in engine	8
3.5 Contact corrosion	8
3.6 Pipe/wire routing and attachment	9
3.7 Installing radiators and condensers	9
3.8 Checking vacuum system	9
<b>10 - Removing and installing engine</b>	<b>10</b>
<b>1 Removing and installing motor</b>	<b>10</b>
1.1 Removing motor	10
1.2 Separating engine and gearbox	23
1.3 Securing engine on engine and gearbox support	27
1.4 Installing engine	30
<b>2 Assembly mountings</b>	<b>34</b>
2.1 Assembly overview – assembly mountings	34
2.2 Removing and installing engine mounting	40
2.3 Removing and installing gearbox mounting	43
2.4 Removing and installing pendulum support	47
2.5 Supporting engine in installation position	48
2.6 Adjusting assembly mountings	58
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	61
<b>13 - Crankshaft group</b>	<b>62</b>
<b>1 Cylinder block (pulley end)</b>	<b>62</b>
1.1 Assembly overview - poly V-belt drive	62
1.2 Removing and installing poly-V belt	66
1.3 Removing and installing tensioner for poly V-belt	69
1.4 Removing and installing vibration damper	70
1.5 Removing and installing engine support	73
1.6 Renewing crankshaft oil seal - belt pulley end	76
1.7 Removing and installing sealing flange on pulley end	79
<b>2 Cylinder block, gearbox end</b>	<b>83</b>
2.1 Assembly overview - cylinder block, gearbox end	83
2.2 Removing and installing flywheel	85
2.3 Removing and installing sealing flange on gearbox side	87
<b>3 Crankshaft</b>	<b>98</b>
3.1 Crankshaft dimensions	98
3.2 Renewing needle bearing in crankshaft	98
3.3 Measuring axial clearance of crankshaft	101



<b>4</b>	<b>Pistons and conrods</b>	<b>103</b>
4.1	Assembly overview - pistons and conrods	103
4.2	Removing and installing pistons	106
4.3	Checking pistons and cylinder bores	107
4.4	Separating new conrod	109
4.5	Checking radial clearance of conrods	110
4.6	Removing and installing oil spray jets	110
4.7	Setting piston to TDC position	111
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>115</b>
<b>1</b>	<b>Cylinder head</b>	<b>115</b>
1.1	Assembly overview - cylinder head	115
1.2	Assembly overview - camshaft housing	117
1.3	Removing and installing cylinder head	120
1.4	Removing and installing camshaft housing	124
1.5	Checking compression	128
<b>2</b>	<b>Toothed belt drive</b>	<b>131</b>
2.1	Assembly overview - toothed belt cover	131
2.2	Assembly overview - toothed belt	131
2.3	Removing and installing toothed belt guard	134
2.4	Removing and installing toothed belt	135
2.5	Preassembling and installing test tool VAS 611 007	138
2.6	Checking valve timing	146
2.7	Adjusting valve timing	148
2.8	Removing toothed belt from camshaft	159
<b>3</b>	<b>Valve gear</b>	<b>166</b>
3.1	Assembly overview - valve gear	166
3.2	Removing and installing camshaft oil seal	169
3.3	Removing and installing camshaft adjuster	181
3.4	Removing and installing inlet camshaft control valve 1 N727	191
3.5	Removing and installing exhaust camshaft control valve 1 N318	192
3.6	Removing and installing valve stem seals	193
3.7	Removing and installing holder for oil seal	207
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>210</b>
4.1	Checking valve guides	210
4.2	Checking valves	211
4.3	Valve dimensions	211
<b>17</b>	<b>Lubrication</b>	<b>212</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>212</b>
1.1	Assembly overview - sump/oil pump	212
1.2	Engine oil:	216
1.3	Removing and installing sump	216
1.4	Removing and installing oil pump	221
1.5	Removing and installing oil level and oil temperature sender G266	222
<b>2</b>	<b>Engine oil cooler</b>	<b>224</b>
2.1	Assembly overview - engine oil cooler	224
2.2	Removing and installing engine oil cooler	225
<b>3</b>	<b>Crankcase ventilation</b>	<b>226</b>
3.1	Assembly overview - crankcase breather system	226
3.2	Removing and installing oil separator	227
<b>4</b>	<b>Oil filter, oil pressure switch</b>	<b>230</b>
4.1	Assembly overview - oil filter/oil pressure switch	230
4.2	Removing and installing oil pressure sender G10	231
4.3	Checking oil pressure and oil pressure switch	232



4.4	Removing and installing oil filter housing	232
4.5	Removing and installing oil pressure regulating valve N428	233
4.6	Removing and installing piston cooling jet control valve N522	234
<b>19</b>	<b>Cooling</b>	<b>236</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>236</b>
1.1	Connection diagram - coolant hoses	236
1.2	Checking cooling system for leaks	237
1.3	Draining and adding coolant	240
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>250</b>
2.1	Assembly overview - coolant pump, thermostat	250
2.2	Assembly overview - electric coolant pump	252
2.3	Assembly overview - coolant temperature sender	252
2.4	Removing and installing electric coolant pump	253
2.5	Removing and installing coolant pump	255
2.6	Removing and installing toothed belt pulley for coolant pump	261
2.7	Removing and installing coolant temperature sender G62	263
2.8	Removing and installing radiator outlet coolant temperature sender G83	265
2.9	Removing and installing engine outlet coolant temperature sender G82	266
2.10	Removing and installing engine temperature regulation module GX33	269
2.11	Checking coolant pump	271
<b>3</b>	<b>Coolant pipes</b>	<b>277</b>
3.1	Assembly overview - coolant pipes	277
3.2	Removing and installing coolant pipes	278
<b>4</b>	<b>Radiator, radiator fan</b>	<b>281</b>
4.1	Assembly overview - radiator	281
4.2	Assembly overview - radiator cowl and radiator fan	286
4.3	Assembly overview - radiator blind	286
4.4	Removing and installing radiator	289
4.5	Removing and installing radiator cowl	306
4.6	Removing and installing radiator fan V7	307
4.7	Removing and installing radiator blind	308
4.8	Removing and installing radiator blind control motor V544	310
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>316</b>
<b>1</b>	<b>Turbocharger</b>	<b>316</b>
1.1	Assembly overview - turbocharger	316
1.2	Removing and installing turbocharger	319
1.3	Removing and installing charge pressure control module GX34	325
1.4	Removing and installing connection for turbocharger	326
<b>2</b>	<b>Charge air system</b>	<b>328</b>
2.1	Assembly overview - charge air system	328
2.2	Removing and installing charge air cooler	330
2.3	Removing and installing charge pressure sender GX26	331
2.4	Checking charge air system for leaks	332
2.5	Removing and installing air pipe	336
<b>24</b>	<b>Mixture preparation - injection</b>	<b>339</b>
<b>1</b>	<b>Injection system</b>	<b>339</b>
1.1	Overview of fitting locations - injection system	339
<b>2</b>	<b>Injectors</b>	<b>346</b>
2.1	Assembly overview - fuel rail with injectors	346
2.2	Removing and installing fuel rail	348
2.3	Removing and installing injectors	349
<b>3</b>	<b>Air filter</b>	<b>357</b>



3.1	Assembly overview - air filter housing	357
3.2	Removing and installing air filter housing	359
3.3	Removing air duct on lock carrier	362
<b>4</b>	<b>Intake manifold</b>	<b>365</b>
4.1	Assembly overview - intake manifold	365
4.2	Removing and installing intake manifold	367
4.3	Removing and installing throttle valve module GX3	369
4.4	Cleaning throttle valve module GX3	370
<b>5</b>	<b>Senders and sensors</b>	<b>372</b>
5.1	Removing and installing fuel pressure sender G247	372
5.2	Checking fuel pressure sender G247	373
5.3	Removing and installing intake manifold sender GX9	375
5.4	Removing and installing exhaust gas pressure sensor 1 G450	375
<b>6</b>	<b>Engine control unit</b>	<b>377</b>
6.1	Assembly overview - engine control unit	377
6.2	Removing and installing engine control unit J623	377
<b>7</b>	<b>High-pressure pump</b>	<b>383</b>
7.1	Assembly overview - high-pressure pump	383
7.2	Removing and installing high-pressure pump	384
7.3	Removing and installing high-pressure pipe	386
<b>8</b>	<b>Lambda probe</b>	<b>388</b>
8.1	Assembly overview - Lambda probe	388
8.2	Removing and installing Lambda probe	389
<b>26</b>	<b>- Exhaust system</b>	<b>391</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>391</b>
1.1	Assembly overview – silencers	391
1.2	Separating exhaust pipes from silencers	395
1.3	Removing and installing silencer	396
1.4	Aligning exhaust system free of stress	401
1.5	Checking exhaust system for leaks	401
1.6	Installation position of clamp	402
<b>2</b>	<b>Emission control</b>	<b>404</b>
2.1	Assembly overview - emission control	404
2.2	Removing and installing catalytic converter	407
2.3	Removing and installing particulate filter	410
<b>28</b>	<b>- Ignition system</b>	<b>411</b>
<b>1</b>	<b>Ignition system</b>	<b>411</b>
1.1	Assembly overview - ignition system	411
1.2	Removing and installing ignition coils with output stage	413
1.3	Removing and installing knock sensor 1 G61	416
1.4	Removing and installing engine speed sender G28	417
1.5	Removing and installing inlet camshaft position sender G1002	419
1.6	Removing and installing exhaust camshaft position sender G1003	420