



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when working on vehicles with a gas system	1
1.3 Safety measures when working on vehicles with start/stop system	3
1.4 Safety precautions when using testing and measuring instruments during a road test	3
1.5 Safety precautions when working on the cooling system	4
1.6 Safety precautions when working on ignition system	4
2 Identification	5
2.1 Engine number/engine data	5
3 Repair notes	7
3.1 Rules for cleanliness	7
3.2 General information	7
3.3 General repair instructions	7
3.4 Foreign objects in engine	9
3.5 Contact corrosion	9
3.6 Routing and attachment of lines	9
3.7 Fitting radiators and condensers	9
3.8 Checking vacuum system	9
10 - Removing and installing engine	11
1 Removing and installing engine	11
1.1 Removing engine	11
1.2 Separating engine and gearbox	22
1.3 Securing engine on engine and gearbox support	24
1.4 Installing engine	25
2 Assembly mountings	31
2.1 Assembly overview - assembly mountings	31
2.2 Removing and installing engine mounting	34
2.3 Removing and installing gearbox mounting	36
2.4 Removing and installing pendulum support	38
2.5 Checking adjustment of assembly mountings	39
2.6 Adjusting assembly mountings	40
2.7 Supporting engine in installation position	43
13 - Crankshaft group	45
1 Cylinder block (pulley end)	45
1.1 Assembly overview - poly V-belt drive	45
1.2 Removing and installing poly-V belt	49
1.3 Removing and installing tensioner for poly V-belt	53
1.4 Removing and installing vibration damper	54
1.5 Removing and installing engine support	57
1.6 Renewing crankshaft oil seal - belt pulley end	61
2 Cylinder block, gearbox end	64
2.1 Assembly overview - cylinder block, gearbox end	64
2.2 Removing and installing flywheel	65
2.3 Removing and installing sealing flange on gearbox side	66
3 Crankshaft	78
3.1 Crankshaft dimensions	78
3.2 Measuring axial clearance of crankshaft	78
4 Pistons and conrods	80
4.1 Assembly overview - pistons and conrods	80



4.2	Removing and installing pistons	83
4.3	Checking pistons and cylinder bores	84
4.4	Separating new conrod	86
4.5	Checking radial clearance of conrods	87
4.6	Removing and installing oil spray jets	87
4.7	Setting piston to TDC position	88
15	Cylinder head, valve gear	92
1	Cylinder head	92
1.1	Assembly overview - cylinder head	92
1.2	Assembly overview - camshaft housing	94
1.3	Removing and installing cylinder head	96
1.4	Removing and installing camshaft housing	102
1.5	Checking compression	106
2	Toothed belt drive	109
2.1	Assembly overview - toothed belt cover	109
2.2	Assembly overview - toothed belt	109
2.3	Removing and installing toothed belt guard	111
2.4	Preassembling and installing test tool VAS 611 007	113
2.5	Checking valve timing	121
2.6	Adjusting valve timing	124
2.7	Removing toothed belt from camshaft	134
2.8	Removing and installing toothed belt	141
3	Valve gear	152
3.1	Assembly overview - valve gear	152
3.2	Removing and installing camshaft adjuster	154
3.3	Measuring axial play of camshaft	162
3.4	Removing and installing camshaft oil seal	163
3.5	Removing and installing camshaft control valve 1 N205	171
3.6	Removing and installing exhaust camshaft control valve 1 N318	173
3.7	Removing and installing valve stem seals	174
4	Inlet and exhaust valves	186
4.1	Checking valve guides	186
4.2	Checking valves	187
4.3	Valve dimensions	187
17	Lubrication	188
1	Sump, oil pump	188
1.1	Assembly overview - sump/oil pump	188
1.2	Engine oil	192
1.3	Removing and installing sump	192
1.4	Removing and installing oil level and oil temperature sender G266	198
1.5	Removing and installing oil pump	199
2	Engine oil cooler	202
2.1	Assembly overview - engine oil cooler	202
2.2	Removing and installing engine oil cooler	202
3	Crankcase ventilation	204
3.1	Assembly overview - crankcase breather system	204
3.2	Removing and installing oil separator	205
4	Oil filter, oil pressure switch	209
4.1	Assembly overview - oil filter/oil pressure switch	209
4.2	Removing and installing oil filter housing	210
4.3	Removing and installing oil pressure sender G10	211
4.4	Removing and installing oil pressure regulating valve N428	212
4.5	Checking oil pressure	214



19 - Cooling	215
1 Cooling system/coolant	215
1.1 Connection diagram - coolant hoses	215
1.2 Draining and adding coolant	216
1.3 Checking cooling system for leaks	224
2 Coolant pump, regulation of cooling system	229
2.1 Assembly overview - coolant pump, thermostat	229
2.2 Assembly overview - electric coolant pump	232
2.3 Assembly overview - coolant temperature sender	233
2.4 Removing and installing coolant pump	234
2.5 Removing and installing toothed belt pulley for coolant pump	239
2.6 Removing and installing thermostat	241
2.7 Removing and installing electric coolant pump	245
2.8 Removing and installing coolant temperature sender G62	247
2.9 Removing and installing radiator outlet coolant temperature sender G83	249
3 Coolant pipes	251
3.1 Assembly overview - coolant pipes	251
3.2 Removing and installing coolant pipes	251
4 Radiator, radiator fan	254
4.1 Assembly overview - radiator/radiator fan	254
4.2 Assembly overview - radiator cowl and radiator fan	255
4.3 Removing and installing radiator	256
4.4 Removing and installing radiator cowl	261
4.5 Removing and installing radiator fan V7	263
21 - Turbocharging/supercharging	264
1 Turbocharger	264
1.1 Assembly overview - turbocharger	264
1.2 Removing and installing turbocharger	267
1.3 Removing and installing charge pressure positioner V465	272
1.4 Removing and installing connection for turbocharger	274
2 Charge air system	277
2.1 Assembly overview - charge air system	277
2.2 Removing and installing air pipe	279
2.3 Removing and installing charge pressure sender GX26	280
2.4 Removing and installing charge air cooler	281
2.5 Checking charge air system for leaks	283
24 - Mixture preparation - injection	286
1 Injection system	286
1.1 Overview of fitting locations - injection system	286
2 Air filter	293
2.1 Assembly overview - air filter housing	293
2.2 Removing and installing air filter housing	295
3 Intake manifold	297
3.1 Assembly overview - intake manifold	297
3.2 Removing and installing intake manifold	299
3.3 Removing and installing throttle valve module GX3	305
3.4 Cleaning throttle valve module GX3	307
4 Checking natural gas supply system for leaks	309
4.1 Distinguishing between pressure sections of natural gas supply system	309
4.2 Determining pressure in gas system	313
4.3 Determining operating mode of natural gas vehicles	313
4.4 Activating and deactivating natural gas mode	313



4.5	Checking gas system for leaks	315
5	Gas pressure regulator	320
5.1	Assembly overview - gas pressure regulator	320
5.2	Removing and installing gas pressure regulator	322
5.3	Removing and installing tank pressure sensor G400	328
6	Gas injectors	331
6.1	Assembly overview - gas rail	331
6.2	Removing and installing gas rail with gas injector N366/N367/N368	333
6.3	Removing and installing gas rail temperature and pressure sensor GX21	336
7	Injectors	339
7.1	Assembly overview - fuel rail with injectors	339
7.2	Removing and installing fuel rail	341
7.3	Removing and installing injectors	342
7.4	Cleaning injectors	354
8	Senders and sensors	356
8.1	Removing and installing intake manifold sender GX9	356
8.2	Removing and installing fuel pressure sender G247	357
8.3	Checking fuel pressure sender G247	358
9	High-pressure pump	361
9.1	Assembly overview - high-pressure pump	361
9.2	Removing and installing high-pressure pump	362
9.3	Removing and installing high-pressure pipe	364
10	Lambda probe	366
10.1	Assembly overview - Lambda probe	366
10.2	Removing and installing Lambda probe	367
11	Engine control unit	369
11.1	Removing and installing engine control unit J623	369
26 - Exhaust system		373
1	Exhaust pipes and silencers	373
1.1	Assembly overview – silencers	373
1.2	Removing and installing silencer	374
1.3	Aligning exhaust system free of stress	375
1.4	Checking exhaust system for leaks	376
2	Emission control	377
2.1	Assembly overview – emission control	377
2.2	Removing and installing catalytic converter	380
28 - Ignition system		384
1	Ignition system	384
1.1	Assembly overview - ignition system	384
1.2	Removing and installing ignition coils with output stage	386
1.3	Removing and installing knock sensor 1 G61	389
1.4	Removing and installing Hall sender G40	390
1.5	Removing and installing engine speed sender G28	391