



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
2 Identification	3
2.1 Engine number/engine data	3
3 General information	4
3.1 Rules for cleanliness when working on auxiliary heater and fuel system	4
4 Repair instructions	5
4.1 Rules for cleanliness	5
4.2 Foreign bodies in engine	5
4.3 Contact corrosion	5
4.4 Routing and attachment of lines	6
4.5 Fitting radiators and condensers	6
20 - Fuel supply system	7
1 Procedure in event of misfuelling	7
1.1 Procedure in event of misfuelling	7
2 Fuel	15
2.1 Assembly overview - fuel tank	15
2.2 Emptying fuel tank	17
2.3 Removing and installing fuel tank	24
2.4 Removing and installing misfuelling prevention device	31
2.5 Deactivating misfuelling prevention device	36
3 Fuel delivery unit, fuel gauge sender	37
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	37
3.2 Removing and installing fuel delivery unit, fuel gauge sender	40
3.3 Removing and installing fuel gauge sender G	44
3.4 Removing and installing assembly opening cover	45
4 Plug-in connectors	47
4.1 Separating plug-in connectors	47
5 Fuel filter	53
5.1 Assembly overview – fuel filter	53
5.2 Removing and installing fuel filter	57
6 Accelerator pedal	61
6.1 Assembly overview - accelerator module	61
6.2 Removing and installing accelerator pedal module GX2	61
7 Fuel pump	63
7.1 Checking fuel system pressurisation pump G6	63
7.2 Removing and installing fuel pump control unit J538	78
8 Senders and sensors	80
8.1 Removing and installing water separator sender G63	80
9 Fuel lines	81
9.1 Removing and installing fuel line for auxiliary/supplementary heater	81
9.2 Removing and installing fuel lines	83
9.3 Fuel hoses in the engine compartment	89