

001 - 1.0l petrol engine , CHYB,CHYC	1-16
1. 1.0l petrol engine , CHYB,CHYC	1
2. Battery, Battery monitor control unit, Fuse holder A, Fuse holder B	2
3. Starter, Fuse holder B	3
4. Fuse holder B	4
5. Fuse holder B	5
6. Switch module 1 in centre console, Onboard supply control unit, Fuse holder C	6
7. Alternator with voltage regulator, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	7
8. Engine/motor control unit	8
9. Ignition/starter switch, Clutch position sender, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	9
10. Brake light switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	10
11. Accelerator pedal module, Throttle valve module, Engine/motor control unit	11
12. Intake manifold sender, Engine speed sender, Hall sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	12
13. Gearbox neutral position sender, Engine/motor control unit	13
14. Oil pressure switch, Oil level and oil temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	14
15. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Ignition coil 2 with output stage, Camshaft control valve 1, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	15
16. Fuel delivery unit, Dash panel insert	16
002 - 1.0l petrol engine , CHZB,CHZJ,CHZL	17-33
1. 1.0l petrol engine , CHZB,CHZJ,CHZL	17
2. Battery, Battery monitor control unit, Fuse holder A, Fuse holder B	18
3. Starter, Fuse holder B	19
4. Fuse holder B	20
5. Switch module 1 in centre console, Onboard supply control unit, Fuse holder C	21
6. Alternator with voltage regulator, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	22
7. Steering column electronics control unit, Engine/motor control unit	23
8. Ignition/starter switch, Brake light switch, Clutch position sender, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	24
9. Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	25
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	26
11. Accelerator pedal module, Oil level and oil temperature sender, Brake servo pressure sensor, Engine/motor control unit, Radiator fan, Vacuum pump for brakes	27
12. Throttle valve module, Oil pressure sender, Engine/motor control unit	28
13. Intake manifold sender, Charge pressure sender, Engine speed sender, Fuel pressure sender, Engine/motor control unit	29
14. Hall sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	30
15. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Fuel pressure regulating valve, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Charge air cooling pump	31
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	32
17. Fuel delivery unit, Knock sensor 1, Fuel pump control unit, Engine/motor control unit, Dash panel insert	33
003 - 1.0l natural gas engine EcoFuel , DBYA	34-53
1. 1.0l natural gas engine EcoFuel , DBYA	34
2. Battery, Battery monitor control unit, Fuse holder A, Fuse holder B	35
3. Starter, Fuse holder B	36
4. Fuse holder B, Fuse holder C	37
5. Switch module 1 in centre console, Onboard supply control unit, Fuse holder C	38
6. Alternator with voltage regulator, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	39
7. Engine/motor control unit, Radiator fan	40
8. Ignition/starter switch, Brake light switch, Clutch position sender, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	41
9. Radiator outlet coolant temperature sender. Tank pressure sensor. Gearbox neutral position sender.	42

Engine/motor control unit, High-pressure valve for gas mode	43
10. Accelerator pedal module, Oil level and oil temperature sender, Engine/motor control unit, Vacuum pump for brakes	44
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	45
12. Engine/motor control unit, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3	46
13. Throttle valve module, Gas rail temperature and pressure sensor, Engine/motor control unit	47
14. Intake manifold sender, Engine speed sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	48
15. Charge pressure sender, Hall sender, Engine/motor control unit, Charge pressure positioner	49
16. Oil pressure sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Charge air cooling pump	50
17. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Ignition coil 2 with output stage, Fuel pressure regulating valve, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	51
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	52
19. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Fuel tank shut-off valve 1	53
20. Fuel tank shut-off valve 2, Fuel tank shut-off valve 3	54-81
004 - Fuse assignment	54
1. Fuse assignment	55
2. Battery, Starter, Alternator with voltage regulator, Power steering control unit, Fuse holder A	56
3. Radiator fan thermal switch, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	57
4. Fuel delivery unit, Engine/motor control unit, Fuse holder B, Radiator fan	58
5. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Fuel pump control unit, Engine/motor control unit, High-pressure valve for gas mode, Fuse holder B	59
6. Brake light switch, Battery monitor control unit, Engine/motor control unit, Fuse holder B, Vacuum pump for brakes	60
7. Clutch position sender, Pressure sender for refrigerant circuit, Engine/motor control unit, Fuse holder B	61
8. Engine/motor control unit, Fuse holder B	62
9. Coupling point in engine compartment, left, Coupling point 1 for engine prewiring harness	63
10. Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	64
11. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Fuel pressure regulating valve, Ignition coil 3 with output stage, Charge air cooling pump	65
12. Onboard supply control unit, Data bus diagnostic interface, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3	66
13. Onboard supply control unit, Fuse holder C	67
14. Fuse holder C	68
15. Sliding sunroof adjustment control unit, Digital sound package control unit, Fuse holder C	69
16. Fresh air blower control unit, Front left seat belt, Front right seat belt, Fuse holder C	70
17. Rotary light switch, Rain and light sensor, Steering column electronics control unit, Fuse holder C, Diagnostic connection	71
18. Steering column electronics control unit, Control unit 1 for information electronics, Rear driver side door control unit, Rear passenger side door control unit, Dash panel insert, Fuse holder C	72
19. Rear lid handle, Chip card reader control unit, Display unit for front information display and operating unit control unit, TV tuner, CD player, Telephone bracket, USB hub, Transmission and reception stabilisation control unit, Fuse holder C	73
20. Heater and air conditioning controls, Anti-theft alarm sensor, Anti-theft alarm system horn, Electronically controlled damping control unit, Data bus diagnostic interface, Fuse holder C	74
21. Seat heating control unit, Rear driver side door control unit, Rear passenger side door control unit, Fuse holder C	75
22. Adaptive cruise control unit, Parking aid control unit, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Fuse holder C	76
23. Interior mirror, Switch module 1 in centre console, Headlight range control regulator, Reversing light switch, Front left headlight, Front right headlight, Fuse holder C	77
24. Exterior mirror adjuster, Driver door control unit, Front passenger door control unit, Fuse holder C	78
25. Airbag control unit, Control unit for electronic steering column lock, Interface for entry and start system. Warning lamp for airbag deactivated on front passenger side. Fuse holder C. Rear	

window wiper motor	
26. Selector mechanism, Ignition key withdrawal lock solenoid, Fuse holder C, Cigarette lighter	79
27. Trailer detector control unit, Fuse holder C, Washer pump	80
28. Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Fuse holder C	81
005 - Earthing concept	82-105
1. Earthing concept	82
2. Battery, ABS control unit, Battery monitor control unit, Adaptive cruise control unit, Left daytime running light bulb, Air conditioner compressor regulating valve, Coupling point in engine compartment, left	83
3. Brake light switch, Bonnet contact switch 2, Clutch position sender, Treble horn, Mechatronic unit for dual clutch gearbox, Left fog light bulb, Front left headlight	84
4. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Coupling point in engine compartment, left	85
5. Ignition coil 3 with output stage, Ignition coil 4 with output stage, Charge air cooling pump, Auxiliary pump for heating, Auxiliary air heater element	86
6. Oil pressure switch, Oil pressure switch for reduced oil pressure, Control unit for NOx sender, Control unit 2 for NOx sender, Fuel pressure regulating valve, Fuse holder B	87
7. Rear lid handle, Digital sound package control unit, Chip card reader control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, CD player, Telephone bracket, USB hub, Transmission and reception stabilisation control unit	88
8. Bonnet contact switch, Air mass measurement module, Oil level and oil temperature sender, Gearbox neutral position sender, Pressure sender for refrigerant circuit, Engine/motor control unit, Radiator fan, Vacuum pump for brakes	89
9. Rotary light switch, Hazard warning light switch, Heater and air conditioning controls, Starter button, Bass horn, Dash panel insert, Right fog light bulb, Right daytime running light bulb, Front right headlight	90
10. Selector mechanism, Switch module 1 in centre console, Parking brake pressure switch, Power steering control unit, Storage compartment illumination bulb, Light for left dash panel background lighting, Light for right dash panel background lighting, Light for centre dash panel background lighting, Cigarette lighter	91
11. Fresh air blower control unit, Sliding sunroof adjustment control unit, Onboard supply control unit, Data bus diagnostic interface, Fresh air blower	92
12. Interior mirror, Rain and light sensor, Headlight range control unit, Onboard supply control unit, Diagnostic connection, Rear left illuminated vanity mirror	93
13. Headlight range control regulator, Anti-theft alarm system horn, Wiper motor control unit, Rear right illuminated vanity mirror	94
14. Driver side interior locking button for central locking system, Driver door control unit, Rear driver side door control unit, Rear passenger side door control unit, Central locking SAFELOCK function warning lamp, Rear right door lock unit	95
15. Exterior mirror adjuster, Contact sensor for front left exterior door handle, Driver side interior door handle illumination bulb, Driver door background lighting bulb, Driver side exterior mirror, Driver door lock unit	96
16. Contact sensor for front right exterior door handle, Front passenger door control unit, Front passenger side interior door handle illumination bulb, Front passenger door background lighting bulb, Passenger side exterior mirror, Front passenger door lock unit	97
17. Parking aid control unit, Steering column electronics control unit, Data bus diagnostic interface, Front right footwell light	98
18. Terminal 15 voltage supply relay, Washer pump relay, Terminal 75x voltage supply relay, Seat heating control unit, Interface for entry and start system, TV tuner, Fuse holder C, Left washer jet heater element, Right washer jet heater element, Heated seat cushion for front right seat, Heated backrest for front right seat	99
19. Rear driver side door control unit, Rear passenger side door control unit, Front left footwell light, Rear left door lock unit, Heated seat cushion for front left seat, Heated backrest for front left seat	100
20. Anti-theft alarm sensor	101
21. Electronically controlled damping control unit, Left tail light cluster, Front interior light, Left number plate light, Right number plate light	102
22. Rear lid handle, Trailer detector control unit, High-level brake light bulb, Front left seat belt, Frequency modulation (FM) frequency filter in negative wire, Trailer socket, Rear window wiper motor, Rear lid lock unit, Rear window	103
23. Fuel delivery unit, Delivery unit for reducing agent metering system, Fuel pump control unit, Front right seat belt, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Heater for reducing agent line (heater circuit 2)	104
24. Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Right tail light cluster, Rear interior light	105

006 - Data bus network	106-118
1. Data bus network	106
2. Fuse holder C, Diagnostic connection	107
3. Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit	108
4. Electronically controlled damping control unit, Onboard supply control unit, Data bus diagnostic interface	109
5. ABS control unit, Parking aid control unit, Onboard supply control unit, Data bus diagnostic interface, Control unit for structure-borne sound	110
6. Selector mechanism, Power steering control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	111
7. Airbag control unit, Adaptive cruise control unit, Onboard supply control unit, Data bus diagnostic interface, Front left seat belt, Front right seat belt	112
8. Headlight range control unit, Onboard supply control unit, Data bus diagnostic interface, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Front left headlight, Front right headlight, Front camera for driver assist systems	113
9. Onboard supply control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, TV tuner	114
10. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Fresh air blower control unit, Onboard supply control unit, Digital sound package control unit, Data bus diagnostic interface	115
11. Sliding sunroof adjustment control unit, Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Emergency call module control unit and communication unit, Interface for entry and start system, Dash panel insert, Coupling point for roof	116
12. Alternator with voltage regulator, Rain and light sensor, Anti-theft alarm sensor, Anti-theft alarm system horn, Battery monitor control unit, Onboard supply control unit, Data bus diagnostic interface, Seat heating control unit	117
13. Driver door control unit, Front passenger door control unit, Onboard supply control unit, Rear driver side door control unit, Rear passenger side door control unit	118
007 - Basic equipment	119-142
1. Basic equipment	119
2. Fuse holder B, Fuse holder C	120
3. Fuse holder C	121
4. Onboard supply control unit, Engine/motor control unit	122
5. Onboard supply control unit, Data bus diagnostic interface, Cigarette lighter	123
6. Rotary light switch, Light switch, Onboard supply control unit, Light for left dash panel background lighting, Light for right dash panel background lighting, Light for centre dash panel background lighting	124
7. Brake light switch, Treble horn, Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Left static cornering light	125
8. Bass horn, Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Right static cornering light	126
9. Onboard supply control unit	127
10. Onboard supply control unit	128
11. Rear left vanity mirror contact switch, Rear right vanity mirror contact switch, Onboard supply control unit, Luggage compartment light, Rear left illuminated vanity mirror, Rear right illuminated vanity mirror	129
12. Front interior light button, Rear interior light button, Rear left reading light button, Rear right reading light button, Front interior light (door contact) button, Front left reading light button, Front right reading light button, Onboard supply control unit, Front interior light, Rear interior light, Centre interior light, Rear left reading light, Rear right reading light, Front left reading light, Front right reading light	130
13. Hazard warning light switch, Headlight range control regulator, Hazard warning lights button, Onboard supply control unit, Indicator lamp for hazard warning light, Button illumination bulb, Storage compartment illumination bulb	131
14. Onboard supply control unit, Front left headlight, Front right headlight, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Left headlight range control motor, Right headlight range control motor	132
15. Interior mirror, Reversing light switch, Onboard supply control unit, Rear left fog light bulb, Left tail light cluster, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	133
16. Tank flap release, Fuel tank filler flap central locking actuator, Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Right tail light cluster, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb	134

17. Onboard supply control unit, Left number plate light, Right number plate light	135
18. Onboard supply control unit, High-level brake light bulb, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window, Rear window	136
19. Ignition/starter switch, Rear lid handle, Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Onboard supply control unit, Steering column electronics control unit, Rear lid lock unit, Rear lid central locking motor	137
20. Intermittent wiper switch, Multifunction display call-up button, Onboard supply control unit, Steering column electronics control unit	138
21. Turn signal switch, Headlight dipper and flasher switch, Cruise control system switch, Cruise control system (CCS) SET button, Horn plate, Onboard supply control unit, Steering column electronics control unit	139
22. Brake fluid level warning contact, Airbag coil connector and return ring with slip ring, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Steering column electronics control unit	140
23. Immobiliser reader coil, Parking brake pressure switch, Data bus diagnostic interface, Dash panel insert	141
24. Fresh air blower switch, Heater and air conditioning controls, Fresh air blower series resistor with overheating fuse, Fresh air blower	142
008 - Convenience system , (L0L)	143-161
1. Convenience system , (L0L)	143
2. Fuse holder C	144
3. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Driver side interior locking button for central locking system, Doors closed warning lamp, Button illumination bulb, Mirror adjustment switch illumination bulb	145
4. Exterior mirror adjuster, Exterior mirror heater button, Fold-in mirror switch, Driver side exterior mirror turn signal bulb, Coupling point for front left door, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	146
5. Coupling point for front left door	147
6. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Coupling point for front left door, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	148
7. Central locking SAFELOCK function warning lamp, Coupling point for front left door	149
8. Operating unit for window regulator in driver door, Childproof lock button, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, Window regulator lock warning lamp, Button illumination bulb, Driver side interior door handle illumination bulb, Driver door background lighting bulb, Driver side window regulator motor	150
9. Coupling point for front right door	151
10. Front passenger door contact switch, Front passenger side central locking lock unit, Front passenger door central locking actuator for SAFELOCK function, Coupling point for front right door, Front passenger door lock unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	152
11. Window regulator switch in front passenger door, Front passenger side window regulator button, Front passenger door control unit, Button illumination bulb, Front passenger side exterior mirror turn signal bulb, Front passenger side interior door handle illumination bulb, Front passenger door background lighting bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side window regulator motor, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	153
12. Operating unit for window regulator in rear left door, Rear driver side window regulator button, Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Rear driver side door control unit, Button illumination bulb, Passenger side exterior mirror, Rear driver side window regulator motor	154
13. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear driver side door control unit, Rear left door lock unit, Rear left door central locking motor, lock	155
14. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear passenger side door control unit, Rear right door lock unit, Rear right door central locking motor, lock, Rear passenger side window regulator motor	156
15. Operating unit for window regulator in rear right door, Rear passenger side window regulator button. Onboard supply control unit. Rear passenger side door control unit. Button illumination bulb	157

16. Onboard supply control unit	158
17. Interior mirror, Sunlight penetration photosensor, Rain and light sensor, Onboard supply control unit	159
18. Onboard supply control unit, Data bus diagnostic interface	160
19. Rear lid handle, Rear lid handle release button, Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Onboard supply control unit, Front left footwell light, Front right footwell light, Rear lid lock unit, Rear lid central locking motor	161
009 - Convenience system , (LOR)	162-180
1. Convenience system , (LOR)	162
2. Fuse holder C	163
3. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Driver side interior locking button for central locking system, Doors closed warning lamp, Button illumination bulb, Mirror adjustment switch illumination bulb	164
4. Exterior mirror adjuster, Exterior mirror heater button, Fold-in mirror switch, Driver side central locking lock unit, Driver side exterior mirror turn signal bulb, Coupling point for front right door, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	165
5. Coupling point for front right door	166
6. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Coupling point for front right door, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	167
7. Central locking SAFELOCK function warning lamp, Coupling point for front right door	168
8. Operating unit for window regulator in driver door, Childproof lock button, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, Window regulator lock warning lamp, Button illumination bulb, Driver side interior door handle illumination bulb, Driver door background lighting bulb, Driver side window regulator motor	169
9. Coupling point for front left door	170
10. Front passenger door contact switch, Front passenger side central locking lock unit, Front passenger door central locking actuator for SAFELOCK function, Coupling point for front left door, Front passenger door lock unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	171
11. Window regulator switch in front passenger door, Front passenger side window regulator button, Front passenger door control unit, Button illumination bulb, Front passenger side exterior mirror turn signal bulb, Front passenger side interior door handle illumination bulb, Front passenger door background lighting bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side window regulator motor, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	172
12. Operating unit for window regulator in rear left door, Rear passenger side window regulator button, Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Rear passenger side door control unit, Button illumination bulb, Passenger side exterior mirror, Rear passenger side window regulator motor	173
13. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear passenger side door control unit, Rear left door lock unit, Rear left door central locking motor, lock	174
14. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear driver side door control unit, Rear right door lock unit, Rear right door central locking motor, lock, Rear driver side window regulator motor	175
15. Operating unit for window regulator in rear right door, Rear driver side window regulator button, Onboard supply control unit, Rear driver side door control unit, Button illumination bulb	176
16. Onboard supply control unit	177
17. Interior mirror, Sunlight penetration photosensor, Rain and light sensor, Onboard supply control unit, Automatic anti-dazzle interior mirror	178
18. Onboard supply control unit, Data bus diagnostic interface	179
19. Rear lid handle, Rear lid handle release button, Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Onboard supply control unit, Front left footwell light, Front right footwell light, Rear lid lock unit, Rear lid central locking motor	180
010 - Anti-lock brake system (ABS)	181-186
1. Anti-lock brake system (ABS)	181
2. Vacuum sender, ABS control unit	182
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor. ABS control unit. Engine/motor control unit	183

4. Switch module 1 in centre console, ABS control unit, Onboard supply control unit, Button illumination bulb	184
5. ABS control unit, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, ABS warning lamp, Parking brake warning lamp, Warning lamp for electronic stabilisation program and TCS, Warning lamp 2 for electronic stabilisation program and TCS	185
6. ABS control unit	186
011 - Fuse assignment	187-225
1. Fuse assignment	187
2. Battery, Starter, Alternator with voltage regulator, Power steering control unit, Fuse holder A	188
3. Radiator fan thermal switch, ABS control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Radiator fan	189
4. Fuel delivery unit, Fuel pump relay, Main relay, Terminal 30 voltage supply relay, Engine component power supply relay, Fuse holder B, Auxiliary hydraulic pump 1 for gearbox oil	190
5. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Fuel pump control unit, Fuse holder B	191
6. Oil level and oil temperature sender, Charge pressure control solenoid valve, Heater element for crankcase breather, High-pressure valve for gas mode, Fuse holder B	192
7. Brake light switch, Fuse holder B, Vacuum pump for brakes	193
8. Radiator fan relay, Radiator fan 2nd speed relay, Low heat output relay, High heat output relay, Battery monitor control unit, Fuse holder B	194
9. Clutch position sender, Control unit for structure-borne sound, Starter relay 1, Fuse holder B, Auxiliary air heater element	195
10. Pressure sender for refrigerant circuit, Magnetic clutch relay, Engine/motor control unit, Starter relay 2, Fuse holder B	196
11. Magnetic clutch for supercharger, Coupling point in engine compartment, left, Coupling point 1 for engine prewiring harness	197
12. Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	198
13. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3, Charge air cooling pump	199
14. Onboard supply control unit, Data bus diagnostic interface, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	200
15. Onboard supply control unit, Fuse holder C	201
16. Fuse holder C	202
17. Fresh air blower control unit, Digital sound package control unit, Fuse holder C	203
18. Sliding sunroof adjustment control unit, Fuse holder C	204
19. Rain and light sensor, Front left seat belt, Front right seat belt, Fuse holder C, Diagnostic connection	205
20. Rotary light switch, Steering column electronics control unit, Emergency call module control unit and communication unit, Dash panel insert, Fuse holder C	206
21. Control unit 1 for information electronics, Control unit for reducing agent heater, Rear driver side door control unit, Rear passenger side door control unit, Fuse holder C	207
22. Rear lid handle, Fuse holder C	208
23. Data bus diagnostic interface, Chip card reader control unit, Display unit for front information display and operating unit control unit, TV tuner, CD player, Telephone bracket, USB hub, Transmission and reception stabilisation control unit, Fuse holder C	209
24. Heater and air conditioning controls, Anti-theft alarm sensor, Anti-theft alarm system horn, Electronically controlled damping control unit, Fuse holder C	210
25. Seat heating control unit, Rear driver side door control unit, Rear passenger side door control unit, Fuse holder C	211
26. Adaptive cruise control unit, Parking aid control unit, Front camera for driver assist systems, Fuse holder C	212
27. Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Front left headlight, Fuse holder C	213
28. Interior mirror, Switch module 1 in centre console, Headlight range control regulator, Reversing light switch, Front right headlight, Fuse holder C	214
29. Exterior mirror adjuster, Driver door control unit, Front passenger door control unit, Fuse holder C	215
30. Warning lamp for airbag deactivated on front passenger side, Fuse holder C, Rear window wiper motor, Left washer jet heater element, Right washer jet heater element	216
31. Selector mechanism, Control unit for electronic steering column lock, Interface for entry and start system, Ignition key withdrawal lock solenoid, Fuse holder C, USB charging socket 1	217
32. Fuse holder C, Cigarette lighter	218
33. Trailer detector control unit. Fuse holder C. Washer pump	219

34. Delivery unit for reducing agent metering system, Relay for gas shut-off valves, Relay for reducing agent metering system, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Fuel tank shut-off valve 3, Fuse holder C	220
35. Washer pump relay, Fuse holder C, Coupling point in engine compartment, left, Coolant circulation pump	221
36. Activated charcoal filter solenoid valve 1, Coolant shut-off valve, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Coolant valve for gearbox, Piston cooling jet control valve, Auxiliary pump for heating	222
37. Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4, Inlet cam actuator B for cylinder 4, Coupling point on engine, top centre	223
38. Ignition/starter switch, Fuel metering valve, Coolant valve for cylinder head, Charge air cooling pump	224
39. Suppression filter, Airbag control unit, Battery monitor control unit, Fuse holder D, Jump start connection	225
012 - Airbag systems , (L0L)	226-233
1. Airbag systems , (L0L)	226
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Diagnostic connection	227
3. Key-operated switch to deactivate airbag on front passenger side, Twin belt buckle, Belt switch for seat row 2, passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Fuse holder D	228
4. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	229
5. Driver side belt switch, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Rear side airbag crash sensor on driver side, Airbag control unit	230
6. Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter on driver side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	231
7. Airbag control unit, Emergency call module control unit and communication unit, Front left seat belt, Front right seat belt	232
8. Airbag control unit, Onboard supply control unit, Data bus diagnostic interface	233
013 - Airbag systems , (L0R)	234-244
1. Airbag systems , (L0R)	234
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side	235
3. Key-operated switch to deactivate airbag on front passenger side, Twin belt buckle, Airbag control unit, Airbag igniter 1 on front passenger side, Diagnostic connection	236
4. Front passenger side belt switch, Belt switch for seat row 2, driver side, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	237
5. Driver side belt switch, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Rear side airbag crash sensor on driver side, Airbag control unit	238
6. Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter on driver side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	239
7. Airbag control unit, Emergency call module control unit and communication unit, Front left seat belt, Front right seat belt	240
8. Front pressure hose sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit	241
9. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit, Onboard supply control unit, Data bus diagnostic interface	242
10. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection	243
11. Coupling point on front left bumper	244
014 - Radio navigation system	245-262
1. Radio navigation system	245
2. Control unit 1 for information electronics	246
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	247
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	248

5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, USB hub, USB connection 2	249
6. Control unit 1 for information electronics, USB hub, USB connection 1	250
7. Control unit 1 for information electronics, USB hub, USB charging socket 1	251
8. Control unit 1 for information electronics, Interface for external audio sources	252
9. Control unit 1 for information electronics, Interface for external audio sources	253
10. Control unit 1 for information electronics, CD player	254
11. Chip card reader control unit, Control unit 1 for information electronics, CD player, Traffic data aerial	255
12. Toll collection sender, Chip card reader control unit, Control unit 1 for information electronics, Rear left bass loudspeaker, Rear right bass loudspeaker	256
13. Rear lid handle, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	257
14. Control unit 1 for information electronics, Roof aerial	258
15. Control unit 1 for information electronics, Dash panel insert, Telephone microphone, Telephone bracket	259
16. Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics, TV tuner	260
17. TV tuner	261
18. Left aerial module, Right aerial module, Rear window	262
015 - Electromechanical steering , (1N1),(QZ7)	263-265
1. Electromechanical steering , (1N1),(QZ7)	263
2. Power steering control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder A	264
3. Onboard supply control unit, Dash panel insert	265
016 - Dual clutch gearbox 0CW , (0EG)	266-270
1. Dual clutch gearbox 0CW , (0EG)	266
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	267
3. Selector mechanism, Selector lever, Mechatronic unit for dual clutch gearbox	268
4. Selector mechanism, Onboard supply control unit, Data bus diagnostic interface	269
5. Ignition key withdrawal lock solenoid	270
017 - Adaptive chassis control DCC , (2H4)	271-274
1. Adaptive chassis control DCC , (2H4)	271
2. Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	272
3. Electronically controlled damping control unit, Onboard supply control unit, Data bus diagnostic interface	273
4. Switch module 1 in centre console, Onboard supply control unit	274
018 - Radiator fan , CHZB,CHZJ,CHZL,CWVB,CZPC,DADA,DBYA,DFNA,DFNB,DGTC,DGTD,DKJA,DKLA,DKRA,DKRF,DKZC,DLAA,DLAC,DNND,DPCA,DSGB,DSGD,DWYB,DXTA,DXUA	275-276
1. Radiator fan , CHZB,CHZJ,CHZL,CWVB,CZPC,DADA,DBYA,DFNA,DFNB,DGTC,DGTD,DKJA,DKLA,DKRA,DKRF,DKZC,DLAA,DLAC,DNND,DPCA,DSGB,DSGD,DWYB,DXTA,DXUA	275
2. Engine/motor control unit, Fuse holder B, Radiator fan	276
019 - Entry and start authorisation , (4F2),(4I3)	277-283
1. Entry and start authorisation , (4F2),(4I3)	277
2. Starter button, Engine/motor control unit, Interface for entry and start system, Fuse holder C	278
3. Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	279
4. Contact sensor for front left exterior door handle, Interface for entry and start system	280
5. Interface for entry and start system, Rear bumper aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	281
6. Interface for entry and start system	282
7. Contact sensor for front right exterior door handle	283
020 - Radiator fan , CHYB,CHYC,DFNA,DFNB	284-285
1. Radiator fan , CHYB,CHYC,DFNA,DFNB	284
2. Radiator fan thermal switch, Engine/motor control unit, Fuse holder B, Radiator fan	285
021 - Air conditioning system , (9AB)	286-291
1. Air conditioning system , (9AB)	286
2. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioning system control unit, Fuse holder C	287
3. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface	288
4. Heater and air conditioning controls, Evaporator temperature sensor, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	289
5. Heater and air conditioning controls, Air conditioner compressor regulating valve, Magnetic clutch for supercharger	290

6. Magnetic clutch relay	291
022 - Climatronic , (9AK)	292-299
1. Climatronic , (9AK)	292
2. Heater and air conditioning controls, Fuse holder C	293
3. Heater and air conditioning controls, Evaporator temperature sensor, Front right temperature flap, Air recirculation flap	294
4. Heater and air conditioning controls, Footwell vent temperature sender, Air distribution flap, Front left temperature flap	295
5. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Defroster flap	296
6. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Fresh air blower control unit, Fresh air blower	297
7. Heater and air conditioning controls, Data bus diagnostic interface, Air conditioner compressor regulating valve, Magnetic clutch for supercharger	298
8. Heater and air conditioning controls, Magnetic clutch relay	299
023 - LED headlights , (8IT),(8Q3)	300-302
1. LED headlights , (8IT),(8Q3)	300
2. Rear right vehicle level sender, Headlight range control unit, Onboard supply control unit	301
3. Front left headlight, Front right headlight	302
024 - Multifunction steering wheel , (1XX),(2FB),(2FS),(2FW),(2PK),(2PU),(2ZH),(2ZA)	303-305
1. Multifunction steering wheel , (1XX),(2FB),(2FS),(2FW),(2PK),(2PU),(2ZH),(2ZA)	303
2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	304
3. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	305
025 - Parking aid (PDC) , (7X2),(7X5)	306-314
1. Parking aid (PDC) , (7X2),(7X5)	306
2. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit, Fuse holder C	307
3. Front left parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Parking aid control unit	308
4. Front centre right parking aid sender, Front centre left parking aid sender, Parking aid control unit	309
5. Front right parking aid sender, Front left sender for park assist steering on left side of vehicle, Parking aid control unit	310
6. Front right sender for park assist steering on right side of vehicle, Parking aid control unit	311
7. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit	312
8. Parking aid control unit, Data bus diagnostic interface	313
9. Switch module 1 in centre console, Parking aid control unit	314
026 - Seat heating , (4A3)	315-318
1. Seat heating , (4A3)	315
2. Seat heating control unit, Fuse holder C, Heated seat cushion for front left seat, Heated backrest for front left seat	316
3. Onboard supply control unit, Seat heating control unit, Heated seat cushion for front right seat, Heated backrest for front right seat	317
4. Heater and air conditioning controls	318
027 - Trailer coupling , (1D2)	319-322
1. Trailer coupling , (1D2)	319
2. Trailer detector control unit	320
3. Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface	321
4. Trailer detector control unit, Trailer socket	322
028 - Sound system , (9VG),(I8C),(I8F),(I8I)	323-327
1. Sound system , (9VG),(I8C),(I8F),(I8I)	323
2. Digital sound package control unit, Control unit 1 for information electronics, Fuse holder C	324
3. Onboard supply control unit, Digital sound package control unit, Data bus diagnostic interface	325
4. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Subwoofer	326
5. Digital sound package control unit, Rear left bass loudspeaker, Rear right bass loudspeaker, Front right bass loudspeaker	327
029 - Sliding/tilting sunroof , (3FB)	328-330
1. Sliding/tilting sunroof , (3FB)	328
2. Sliding sunroof adjustment control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	329
3. Sunroof button, Sliding sunroof adjustment control unit, Sliding sunroof motor	330
030 - Window wash/wipe system	331-334
1. Window wash/wipe system	331

2. Washer pump relay, Washer pump	332
3. Windscreen wiper limit switch, Windscreen washer fluid level sender, Wiper motor control unit, Onboard supply control unit, Steering column electronics control unit	333
4. Rear window wiper motor	334
031 - Lane change assist , (7Y8),(7Y9)	335-337
1. Lane change assist , (7Y8),(7Y9)	335
2. Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Fuse holder C	336
3. Onboard supply control unit, Data bus diagnostic interface, Blind Spot Monitor control unit, Driver side exterior mirror, Passenger side exterior mirror	337
032 - Anti-theft alarm system , (7AS),(7AL)	338-340
1. Anti-theft alarm system , (7AS),(7AL)	338
2. Anti-theft alarm sensor, Anti-theft alarm system horn, Onboard supply control unit, Fuse holder C	339
3. Bonnet contact switch, Bonnet contact switch 2	340
033 - Adaptive cruise control , (6K2),(6K3),(6K4),(8T7),(8T8)	341-342
1. Adaptive cruise control , (6K2),(6K3),(6K4),(8T7),(8T8)	341
2. Adaptive cruise control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	342
034 - Convenience system , (L0L)	343-361
1. Convenience system , (L0L)	343
2. Fuse holder C	344
3. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Driver side interior locking button for central locking system, Doors closed warning lamp, Button illumination bulb, Mirror adjustment switch illumination bulb	345
4. Exterior mirror adjuster, Exterior mirror heater button, Fold-in mirror switch, Driver side exterior mirror turn signal bulb, Coupling point for front left door, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	346
5. Coupling point for front left door	347
6. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Coupling point for front left door, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	348
7. Central locking SAFELOCK function warning lamp, Coupling point for front left door	349
8. Operating unit for window regulator in driver door, Childproof lock button, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, Window regulator lock warning lamp, Button illumination bulb, Driver side interior door handle illumination bulb, Driver door background lighting bulb, Driver side window regulator motor	350
9. Coupling point for front right door	351
10. Front passenger door contact switch, Front passenger side central locking lock unit, Front passenger door central locking actuator for SAFELOCK function, Coupling point for front right door, Front passenger door lock unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	352
11. Window regulator switch in front passenger door, Front passenger side window regulator button, Front passenger door control unit, Button illumination bulb, Front passenger side exterior mirror turn signal bulb, Front passenger side interior door handle illumination bulb, Front passenger door background lighting bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side window regulator motor, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	353
12. Operating unit for window regulator in rear left door, Rear driver side window regulator button, Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Rear driver side door control unit, Button illumination bulb, Passenger side exterior mirror, Rear driver side window regulator motor	354
13. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear driver side door control unit, Rear left door lock unit, Rear left door central locking motor, lock	355
14. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear passenger side door control unit, Rear right door lock unit, Rear right door central locking motor, lock, Rear passenger side window regulator motor	356
15. Operating unit for window regulator in rear right door, Rear passenger side window regulator button, Onboard supply control unit, Rear passenger side door control unit, Button illumination bulb	357
16. Onboard supply control unit	358
17. Interior mirror. Sunlight penetration photosensor. Rain and light sensor. Onboard supply control	359

unit	
18. Onboard supply control unit, Data bus diagnostic interface, Front left footwell light, Front right footwell light	360
19. Rear lid handle, Rear lid handle release button, Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Rear lid lock unit, Rear lid central locking motor	361
035 - Mobile telephone systems , (9IJ),(9ZX),(9ZV)	362-364
1. Mobile telephone systems , (9IJ),(9ZX),(9ZV)	362
2. Control unit 1 for information electronics, Roof aerial, Telephone bracket, LTE aerial 2, Transmission and reception stabilisation control unit, Fuse holder C	363
3. Onboard supply control unit, Telephone bracket	364
036 - Tail light clusters with LEDs , (8SK)	365-366
1. Tail light clusters with LEDs , (8SK)	365
2. Onboard supply control unit	366
037 - Reversing camera (Rear Assist) , (KA1)	367-369
1. Reversing camera (Rear Assist) , (KA1)	367
2. Rear lid handle, Control unit 1 for information electronics, Reversing camera, Emblem motor	368
3. Rear lid handle, Onboard supply control unit, Reversing camera	369
038 - Convenience system , (L0R)	370-388
1. Convenience system , (L0R)	370
2. Fuse holder C	371
3. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Driver side interior locking button for central locking system, Doors closed warning lamp, Button illumination bulb, Mirror adjustment switch illumination bulb	372
4. Exterior mirror adjuster, Exterior mirror heater button, Fold-in mirror switch, Driver side central locking lock unit, Driver side exterior mirror turn signal bulb, Coupling point for front right door, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	373
5. Coupling point for front right door	374
6. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Coupling point for front right door, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	375
7. Central locking SAFELOCK function warning lamp, Coupling point for front right door	376
8. Operating unit for window regulator in driver door, Childproof lock button, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, Window regulator lock warning lamp, Button illumination bulb, Driver side interior door handle illumination bulb, Driver door background lighting bulb, Driver side window regulator motor	377
9. Coupling point for front left door	378
10. Front passenger door contact switch, Front passenger side central locking lock unit, Front passenger door central locking actuator for SAFELOCK function, Coupling point for front left door, Front passenger door lock unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	379
11. Window regulator switch in front passenger door, Front passenger side window regulator button, Front passenger door control unit, Button illumination bulb, Front passenger side exterior mirror turn signal bulb, Front passenger side interior door handle illumination bulb, Front passenger door background lighting bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side window regulator motor, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	380
12. Operating unit for window regulator in rear left door, Rear passenger side window regulator button, Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Rear passenger side door control unit, Button illumination bulb, Passenger side exterior mirror, Rear passenger side window regulator motor	381
13. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear passenger side door control unit, Rear left door lock unit, Rear left door central locking motor, lock	382
14. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear driver side door control unit, Rear right door lock unit, Rear right door central locking motor, lock, Rear driver side window regulator motor	383
15. Operating unit for window regulator in rear right door, Rear driver side window regulator button, Onboard supply control unit, Rear driver side door control unit, Button illumination bulb	384
16. Onboard supply control unit	385

17. Interior mirror, Sunlight penetration photosensor, Rain and light sensor, Onboard supply control unit, Automatic anti-dazzle interior mirror	386
18. Onboard supply control unit, Data bus diagnostic interface, Front left footwell light, Front right footwell light	387
19. Rear lid handle, Rear lid handle release button, Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Rear lid lock unit, Rear lid central locking motor	388
039 - 1.0l petrol engine , DKJA,DKLA,DKRA,DKRF	389-404
1. 1.0l petrol engine , DKJA,DKLA,DKRA,DKRF	389
2. Battery, Battery monitor control unit, Fuse holder A, Fuse holder B	390
3. Starter, Fuse holder B	391
4. Switch module 1 in centre console, Fuse holder B, Fuse holder C	392
5. Switch module 1 in centre console, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	393
6. Alternator with voltage regulator, Data bus diagnostic interface, Engine/motor control unit	394
7. Brake light switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	395
8. Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan, Vacuum pump for brakes	396
9. Accelerator pedal module, Lambda probe 1 before catalytic converter, Engine/motor control unit	397
10. Throttle valve module, Lambda probe 1 after catalytic converter, Engine speed sender, Engine/motor control unit	398
11. Oil pressure sender, Charge pressure sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	399
12. Intake manifold sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	400
13. Hall sender, Pressure sensor for activated charcoal filter air flushing, Hall sender 3, Engine/motor control unit	401
14. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Fuel pressure regulating valve, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Charge air cooling pump	402
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	403
16. Fuel delivery unit, Knock sensor 1, Fuel pump control unit, Engine/motor control unit, Dash panel insert	404
040 - 2.0l petrol engine , CZPC,DKZC	405-432
1. 2.0l petrol engine , CZPC,DKZC	405
2. Starter relay 1, Fuse holder A, Fuse holder B, Jump start connection	406
3. Main relay, Starter relay 2, Fuse holder B	407
4. Fuse holder B	408
5. Engine/motor control unit, Engine component power supply relay, Fuse holder B, Fuse holder C	409
6. Engine/motor control unit, Radiator fan	410
7. Brake light switch, Accelerator pedal module, Engine/motor control unit	411
8. Lambda probe 1 before catalytic converter, Engine/motor control unit	412
9. Lambda probe 1 after catalytic converter, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	413
10. Air mass meter, Temperature sender before particulate filter, Temperature sender after particulate filter, Gearbox neutral position sender, Engine/motor control unit	414
11. Radiator outlet coolant temperature sender, Engine/motor control unit	415
12. Alternator with voltage regulator, Charge pressure sender, Engine/motor control unit	416
13. Engine/motor control unit	417
14. Pressure differential sender for particulate filter, Engine/motor control unit	418
15. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	419
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	420
17. Engine/motor control unit, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator B for cylinder 4	421
18. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Inlet cam actuator A for cylinder 4	422
19. Intake manifold sender, Knock sensor 1, Engine/motor control unit, Coolant valve for gearbox	423
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	424
21. Oil pressure switch. Oil pressure switch for reduced oil pressure. Stage 3 oil pressure switch.	425

Coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit, Coolant shut-off valve	
22. Throttle valve module, Engine temperature regulation module, Engine/motor control unit	426
23. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Charge pressure positioner	427
24. Engine speed sender, Engine/motor control unit, Fuel pressure regulating valve, Valve for oil pressure control, Piston cooling jet control valve	428
25. Fuel pressure sender for low pressure, Engine/motor control unit, Camshaft control valve 1, Exhaust camshaft control valve 1	429
26. Hall sender 3, Data bus diagnostic interface, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Auxiliary pump for heating	430
27. Switch module 1 in centre console, Onboard supply control unit	431
28. Fuel delivery unit, Fuel pump control unit, Dash panel insert	432
041 - 1.6l diesel engine , DGTC,DGTD	433-459
1. 1.6l diesel engine , DGTC,DGTD	433
2. Low heat output relay, High heat output relay, Starter relay 1, Fuse holder A, Fuse holder B, Auxiliary air heater element	434
3. Starter, Terminal 30 voltage supply relay, Starter relay 2, Fuse holder B	435
4. Fuse holder B	436
5. Automatic glow period control unit, Fuse holder B	437
6. Automatic glow period control unit, Relay for reducing agent metering system, Fuse holder B, Fuse holder C	438
7. Engine/motor control unit	439
8. Engine/motor control unit	440
9. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	441
10. Engine/motor control unit, Fuel metering valve, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	442
11. Oil pressure switch for reduced oil pressure, Engine/motor control unit, Valve for oil pressure control, Injector for reducing agent, Coolant valve for cylinder head	443
12. Brake light switch, Clutch position sender, Engine/motor control unit	444
13. Alternator with voltage regulator, Oil level and oil temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Charge air cooling pump	445
14. Lambda probe 1 before catalytic converter, Engine/motor control unit, Control unit for NOx sender 2	446
15. Accelerator pedal module, Engine/motor control unit, Radiator fan	447
16. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Auxiliary pump for heating	448
17. Water separator sender, Air mass meter, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	449
18. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	450
19. Oil pressure switch, Delivery unit for reducing agent metering system, Engine/motor control unit, Fuel pressure regulating valve	451
20. Throttle valve module, Exhaust gas recirculation valve 1, Position sender for charge pressure positioner, Engine/motor control unit	452
21. Intake air temperature sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender after charge air cooler, Engine/motor control unit	453
22. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	454
23. Engine speed sender, Charge pressure sender, Hall sender, Fuel pressure sender, Engine/motor control unit	455
24. Exhaust gas recirculation valve 2, Engine/motor control unit	456
25. Fuel pump control unit, Engine/motor control unit, Heater element for crankcase breather	457
26. Fuel delivery unit, Onboard supply control unit, Fuel pump control unit, Dash panel insert	458
27. Switch module 1 in centre console, Onboard supply control unit	459
042 - Dual clutch gearbox 0D9 , (0ES)	460-464
1. Dual clutch gearbox 0D9 , (0ES)	460
2. Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	461
3. Selector mechanism, Mechatronic unit for dual clutch gearbox, Selector lever position display	462
4. Selector mechanism, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	463
5. Ignition key withdrawal lock solenoid	464
043 - USB charging sockets , (U9B),(U9C)	465-466
1. USB charging sockets , (U9B),(U9C)	465
2. Onboard supply control unit. Fuse holder C. USB charging socket 1	466

044 - 1.6l petrol engine , CWVB,DWYB	467-483
1. 1.6l petrol engine , CWVB,DWYB	467
2. Starter relay 1, Fuse holder A, Fuse holder B	468
3. Starter, Fuel pump relay, Starter relay 2, Fuse holder B	469
4. Main relay, Fuse holder B	470
5. Engine/motor control unit, Fuse holder B, Fuse holder C, Vacuum pump for brakes	471
6. Engine/motor control unit	472
7. Gearbox neutral position sender, Engine/motor control unit, Radiator fan	473
8. Accelerator pedal module, Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit	474
9. Brake light switch, Engine/motor control unit	475
10. Oil pressure switch, Intake manifold sender, Engine speed sender, Hall sender, Coolant temperature sender, Engine/motor control unit	476
11. Throttle valve module, Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	477
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	478
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	479
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	480
15. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	481
16. Switch module 1 in centre console, Onboard supply control unit	482
17. Fuel delivery unit, Dash panel insert	483
045 - Actuator for structure-borne sound , (TD3)	484-485
1. Actuator for structure-borne sound , (TD3)	484
2. Onboard supply control unit, Data bus diagnostic interface, Control unit for structure-borne sound, Actuator for structure-borne sound, Fuse holder C	485
046 - Earthing concept	486-515
1. Earthing concept	486
2. Battery, ABS control unit, Battery monitor control unit, Adaptive cruise control unit, Air conditioner compressor regulating valve, Coupling point in engine compartment, left	487
3. Brake light switch, Left daytime running light bulb, Front left headlight	488
4. Bonnet contact switch 2, Clutch position sender, Treble horn, Mechatronic unit for dual clutch gearbox, Left fog light bulb, Left fog light, Left static cornering light	489
5. Ignition coil 1 with output stage, Coupling point in engine compartment, left, Auxiliary air heater element	490
6. Ignition coil 2 with output stage, Ignition coil 3 with output stage	491
7. Ignition coil 4 with output stage, Charge air cooling pump, Auxiliary pump for heating	492
8. Oil pressure switch, Oil pressure switch for reduced oil pressure, Control unit for NOx sender, Control unit 2 for NOx sender, Fuel pressure regulating valve, Fuse holder B	493
9. Rear lid handle, Digital sound package control unit, Chip card reader control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, CD player, Telephone bracket, USB hub, Transmission and reception stabilisation control unit	494
10. Air mass measurement module, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	495
11. Bonnet contact switch, Oil level and oil temperature sender, Pressure sender for refrigerant circuit, Bass horn, Right fog light bulb, Right daytime running light bulb, Right fog light, Right static cornering light, Vacuum pump for brakes	496
12. Hazard warning light switch, Heater and air conditioning controls, Starter button, Parking brake pressure switch, Dash panel insert, Front right headlight	497
13. Rotary light switch, Selector mechanism, Switch module 1 in centre console, Power steering control unit, Storage compartment illumination bulb, Light for left dash panel background lighting, Light for right dash panel background lighting, Light for centre dash panel background lighting, Cigarette lighter	498
14. Operating unit for preparation for mobile telephone, Fresh air blower control unit, Sliding sunroof adjustment control unit, Emergency call module control unit and communication unit, Fresh air blower	499
15. Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection	500
16. Interior mirror, Headlight range control regulator, Rain and light sensor, Headlight range control unit, Rear left illuminated vanity mirror, Rear right illuminated vanity mirror	501
17. Anti-theft alarm system horn, Wiper motor control unit, Rear passenger side door control unit, Front camera for driver assist systems, Rear right door lock unit	502
18. Exterior mirror adjuster, Driver side interior locking button for central locking system, Driver door control unit. Central locking SAFELOCK function warning lamp. Driver door lock unit	503

19. Contact sensor for front left exterior door handle, Front passenger door control unit, Driver side interior door handle illumination bulb, Driver door background lighting bulb, Driver side exterior mirror	504
20. Contact sensor for front right exterior door handle, Data bus diagnostic interface, Front passenger side interior door handle illumination bulb, Front passenger door background lighting bulb, Passenger side exterior mirror, Front passenger door lock unit	505
21. Parking aid control unit, Steering column electronics control unit, Seat heating control unit, Interface for entry and start system, Front right footwell light	506
22. Terminal 15 voltage supply relay, Washer pump relay, Terminal 75x voltage supply relay, TV tuner, Fuse holder C, Heated seat cushion for front right seat, Heated backrest for front right seat	507
23. Front left footwell light, USB charging socket 1, Heated seat cushion for front left seat, Heated backrest for front left seat	508
24. Rear driver side door control unit, Rear left door lock unit	509
25. Anti-theft alarm sensor, Front interior light	510
26. Electronically controlled damping control unit, Exhaust flap control unit, Left tail light cluster, Left tail light cluster 2, Left number plate light, Right number plate light	511
27. Rear lid handle, High-level brake light bulb, Front left seat belt, Frequency modulation (FM) frequency filter in negative wire, Rear window wiper motor, Rear lid lock unit, Rear window	512
28. Trailer detector control unit, Fuel pump control unit, Front right seat belt, Trailer socket	513
29. Fuel delivery unit, Delivery unit for reducing agent metering system, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Fuel tank shut-off valve 3, Heater for reducing agent line (heater circuit 2)	514
30. Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Right tail light cluster, Right tail light cluster 2, Rear interior light	515
047 - Basic equipment	516-539
1. Basic equipment	516
2. Fuse holder B, Fuse holder C	517
3. Fuse holder C, USB charging socket 1	518
4. Onboard supply control unit, Engine/motor control unit	519
5. Onboard supply control unit, Data bus diagnostic interface, Light for left dash panel background lighting, Light for right dash panel background lighting, Light for centre dash panel background lighting, Cigarette lighter	520
6. Rotary light switch, Light switch, Onboard supply control unit	521
7. Brake light switch, Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Left static cornering light	522
8. Tank flap release, Fuel tank filler flap central locking actuator, Treble horn, Bass horn, Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Right static cornering light	523
9. Onboard supply control unit	524
10. Onboard supply control unit, Luggage compartment light	525
11. Rear left vanity mirror contact switch, Rear right vanity mirror contact switch, Onboard supply control unit, Rear left illuminated vanity mirror, Rear right illuminated vanity mirror	526
12. Front interior light button, Rear interior light button, Rear left reading light button, Rear right reading light button, Front interior light (door contact) button, Front left reading light button, Front right reading light button, Onboard supply control unit, Front interior light, Rear interior light, Centre interior light, Rear left reading light, Rear right reading light, Front left reading light, Front right reading light	527
13. Hazard warning light switch, Headlight range control regulator, Hazard warning lights button, Onboard supply control unit, Indicator lamp for hazard warning light, Button illumination bulb, Storage compartment illumination bulb	528
14. Onboard supply control unit, Front left headlight, Front right headlight, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Left headlight range control motor, Right headlight range control motor	529
15. Interior mirror, Reversing light switch, Onboard supply control unit, Rear left fog light bulb, Left tail light cluster, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb	530
16. Rear lid handle, Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Right tail light cluster, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Rear lid lock unit, Rear lid central locking motor	531
17. Onboard supply control unit, High-level brake light bulb, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window, Rear window	532
18. Onboard supply control unit, Left number plate light, Right number plate light	533
19. Ignition/starter switch. Onboard supply control unit. Steering column electronics control unit	534

20. Intermittent wiper switch, Multifunction display call-up button, Onboard supply control unit, Steering column electronics control unit	535
21. Turn signal switch, Headlight dipper and flasher switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit	536
22. Brake fluid level warning contact, Airbag coil connector and return ring with slip ring, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Horn plate, Onboard supply control unit, Steering column electronics control unit	537
23. Immobiliser reader coil, Parking brake pressure switch, Data bus diagnostic interface, Dash panel insert	538
24. Fresh air blower switch, Heater and air conditioning controls, Fresh air blower series resistor with overheating fuse, Fresh air blower	539
048 - Convenience system , (L0L)	540-558
1. Convenience system , (L0L)	540
2. Fuse holder C	541
3. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Driver side interior locking button for central locking system, Doors closed warning lamp, Button illumination bulb, Mirror adjustment switch illumination bulb	542
4. Exterior mirror adjuster, Exterior mirror heater button, Fold-in mirror switch, Driver side exterior mirror turn signal bulb, Coupling point for front left door, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	543
5. Coupling point for front left door	544
6. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Coupling point for front left door, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	545
7. Central locking SAFELOCK function warning lamp, Coupling point for front left door	546
8. Operating unit for window regulator in driver door, Childproof lock button, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, Window regulator lock warning lamp, Button illumination bulb, Driver side interior door handle illumination bulb, Driver door background lighting bulb, Driver side window regulator motor	547
9. Coupling point for front right door	548
10. Front passenger door contact switch, Front passenger side central locking lock unit, Front passenger door central locking actuator for SAFELOCK function, Coupling point for front right door, Front passenger door lock unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	549
11. Window regulator switch in front passenger door, Front passenger side window regulator button, Front passenger door control unit, Button illumination bulb, Front passenger side exterior mirror turn signal bulb, Front passenger side interior door handle illumination bulb, Front passenger door background lighting bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side window regulator motor, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	550
12. Operating unit for window regulator in rear left door, Rear driver side window regulator button, Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Rear driver side door control unit, Button illumination bulb, Passenger side exterior mirror, Rear driver side window regulator motor	551
13. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear driver side door control unit, Rear left door lock unit, Rear left door central locking motor, lock	552
14. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear passenger side door control unit, Rear right door lock unit, Rear right door central locking motor, lock, Rear passenger side window regulator motor	553
15. Operating unit for window regulator in rear right door, Rear passenger side window regulator button, Onboard supply control unit, Rear passenger side door control unit, Button illumination bulb	554
16. Onboard supply control unit	555
17. Interior mirror, Sunlight penetration photosensor, Rain and light sensor, Onboard supply control unit	556
18. Onboard supply control unit, Data bus diagnostic interface, Front left footwell light, Front right footwell light	557
19. Rear lid handle, Rear lid handle release button, Luggage compartment light switch, Rear lid contact switch. Central locking rear lid lock unit. Rear lid lock unit. Rear lid central locking	558

motor	
049 - Convenience system , (L0R)	559-578
1. Convenience system , (L0R)	559
2. Fuse holder C	560
3. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Driver side interior locking button for central locking system, Doors closed warning lamp, Button illumination bulb, Mirror adjustment switch illumination bulb	561
4. Exterior mirror adjuster, Exterior mirror heater button, Fold-in mirror switch, Driver side central locking lock unit, Driver side exterior mirror turn signal bulb, Coupling point for front right door, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	562
5. Coupling point for front right door	563
6. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Coupling point for front right door, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	564
7. Central locking SAFELOCK function warning lamp, Coupling point for front right door	565
8. Coupling point for front right door	566
9. Operating unit for window regulator in driver door, Childproof lock button, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit, Window regulator lock warning lamp, Button illumination bulb, Driver side interior door handle illumination bulb, Driver door background lighting bulb, Driver side window regulator motor	567
10. Coupling point for front left door	568
11. Front passenger door contact switch, Front passenger side central locking lock unit, Front passenger door central locking actuator for SAFELOCK function, Coupling point for front left door, Front passenger door lock unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	569
12. Window regulator switch in front passenger door, Front passenger side window regulator button, Front passenger door control unit, Button illumination bulb, Front passenger side exterior mirror turn signal bulb, Front passenger side interior door handle illumination bulb, Front passenger door background lighting bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side window regulator motor, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	570
13. Operating unit for window regulator in rear left door, Rear passenger side window regulator button, Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Rear passenger side door control unit, Button illumination bulb, Passenger side exterior mirror, Rear passenger side window regulator motor	571
14. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear passenger side door control unit, Rear left door lock unit, Rear left door central locking motor, lock	572
15. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Onboard supply control unit, Rear driver side door control unit, Rear right door lock unit, Rear right door central locking motor, lock, Rear driver side window regulator motor	573
16. Operating unit for window regulator in rear right door, Rear driver side window regulator button, Onboard supply control unit, Rear driver side door control unit, Button illumination bulb	574
17. Onboard supply control unit	575
18. Interior mirror, Sunlight penetration photosensor, Rain and light sensor, Onboard supply control unit, Automatic anti-dazzle interior mirror	576
19. Onboard supply control unit, Data bus diagnostic interface, Front left footwell light, Front right footwell light	577
20. Rear lid handle, Rear lid handle release button, Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Rear lid lock unit, Rear lid central locking motor	578
050 - 1.0l petrol engine , DKJA	579-597
1. 1.0l petrol engine , DKJA	579
2. Battery, Battery monitor control unit, Fuse holder A, Fuse holder B	580
3. Starter, Fuse holder B	581
4. Fuse holder B	582
5. Alternator with voltage regulator, Heater and air conditioning controls, Air conditioner compressor regulating valve	583
6. Switch module 1 in centre console, Onboard supply control unit, Data bus diagnostic interface	584
7. Brake light switch. Onboard supply control unit. Steering column electronics control unit.	585

Engine/motor control unit, Interface for entry and start system	
8. Engine/motor control unit, Radiator fan	586
9. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	587
10. Radiator outlet coolant temperature sender, Clutch position sender, Gearbox neutral position sender, Engine/motor control unit	588
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	589
12. Accelerator pedal module, Oil level and oil temperature sender, Brake servo pressure sensor, Engine/motor control unit, Vacuum pump for brakes	590
13. Throttle valve module, Oil pressure sender, Engine/motor control unit	591
14. Intake manifold sender, Charge pressure sender, Engine speed sender, Engine/motor control unit	592
15. Hall sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	593
16. Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	594
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	595
18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	596
19. Fuel pump control unit, Engine/motor control unit, Dash panel insert, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	597
051 - 1.0l petrol engine , DFNA,DFNB,DSGB,DSGD	598-616
1. 1.0l petrol engine , DFNA,DFNB,DSGB,DSGD	598
2. Battery, Battery monitor control unit, Fuse holder B	599
3. Starter, Fuse holder B	600
4. Fuse holder B	601
5. Fuse holder B, Fuse holder C	602
6. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Air conditioner compressor regulating valve	603
7. Switch module 1 in centre console, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	604
8. Ignition/starter switch, Brake light switch, Engine/motor control unit, Interface for entry and start system	605
9. Engine/motor control unit, Radiator fan	606
10. Oil level and oil temperature sender, Clutch position sender, Gearbox neutral position sender, Vacuum pump relay, Engine/motor control unit, Vacuum pump for brakes	607
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	608
12. Accelerator pedal module, Throttle valve module, Engine/motor control unit	609
13. Intake manifold sender, Engine speed sender, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	610
14. Oil pressure sender, Knock sensor 1, Exhaust camshaft position sender, Engine/motor control unit	611
15. Engine temperature regulation module, Fuel pressure sender for low pressure, Inlet camshaft position sender, Engine/motor control unit	612
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	613
17. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 2, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	614
18. Engine/motor control unit	615
19. Fuel delivery unit, Fuel pump control unit, Dash panel insert	616
052 - 1.5l petrol engine , DADA,DPCA	617-639
1. 1.5l petrol engine , DADA,DPCA	617
2. Battery, Battery monitor control unit, Fuse holder A, Fuse holder B	618
3. Starter, Fuse holder B	619
4. Fuse holder B	620
5. Alternator with voltage regulator, Heater and air conditioning controls, Air conditioner compressor regulating valve, Fuse holder B, Fuse holder C	621
6. Switch module 1 in centre console, Onboard supply control unit, Data bus diagnostic interface	622
7. Ignition/starter switch, Brake light switch, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	623
8. Engine/motor control unit	624
9. Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	625
10. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	626

11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	627
12. Oil level and oil temperature sender, Engine/motor control unit, Exhaust flap control unit, Vacuum pump for brakes	628
13. Engine/motor control unit	629
14. Radiator outlet coolant temperature sender, Engine/motor control unit	630
15. Engine speed sender, Knock sensor 1, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	631
16. Intake manifold sender, Coolant temperature sender, Engine outlet coolant temperature sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	632
17. Throttle valve module, Engine/motor control unit, Actuator for engine temperature regulation	633
18. Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	634
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2	635
20. Engine/motor control unit, Fuel metering valve, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Charge air cooling pump	636
21. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	637
22. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	638
23. Fuel delivery unit, Fuel pump control unit, Dash panel insert	639
053 - Front camera for driver assist systems , (QK2),(QK1)	640-641
1. Front camera for driver assist systems , (QK2),(QK1)	640
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	641
054 - Emergency call module , (NZ2),(NZ4)	642-645
1. Emergency call module , (NZ2),(NZ4)	642
2. Onboard supply control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Fuse holder C	643
3. Operating unit for preparation for mobile telephone, Airbag control unit, Emergency call module control unit and communication unit, Telephone microphone, LTE aerial 1, Loudspeaker for emergency call module	644
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial	645
055 - Sound system , (9VG),(8AR)	646-649
1. Sound system , (9VG),(8AR)	646
2. Onboard supply control unit, Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C	647
3. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer	648
4. Digital sound package control unit, Rear left bass loudspeaker, Rear right bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	649
056 - 1.0l petrol engine , DLAA,DLAC	650-667
1. 1.0l petrol engine , DLAA,DLAC	650
2. Battery, Battery monitor control unit, Fuse holder B	651
3. Starter, Fuse holder B	652
4. Fuse holder B	653
5. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Magnetic clutch for supercharger, Fuse holder C	654
6. Switch module 1 in centre console, Reversing light switch, Onboard supply control unit, Data bus diagnostic interface	655
7. Brake light switch, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	656
8. Ignition/starter switch, Engine/motor control unit, Interface for entry and start system	657
9. Accelerator pedal module, Oil level and oil temperature sender, Engine/motor control unit, Radiator fan	658
10. Clutch position sender, Gearbox neutral position sender, Engine/motor control unit	659
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Knock sensor 1, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	660
12. Intake manifold sender, Radiator outlet coolant temperature sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit, Fuel metering valve	661
13. Oil pressure sender. Charge pressure sender. Charge pressure sender. Charge pressure control	662

module, Position sender for charge pressure positioner, Charge air temperature sender, Engine/motor control unit, Charge pressure positioner	
14. Throttle valve module, Engine temperature regulation module, Engine/motor control unit, Charge air cooling pump	663
15. Engine speed sender, Pressure sensor for activated charcoal filter air flushing, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	664
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet camshaft control valve 1	665
17. Engine/motor control unit, Injector, cylinder 3, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	666
18. Fuel delivery unit, Fuel pump control unit, Mechatronic unit for dual clutch gearbox, Dash panel insert	667
057 - 2.0l petrol engine , DNND	668-692
1. 2.0l petrol engine , DNND	668
2. Starter relay 1, Starter relay 2, Jump start connection	669
3. Main relay	670
4. Engine component power supply relay	671
5. Fuse holder A	672
6. Engine/motor control unit	673
7. Brake light switch, Accelerator pedal module, Engine/motor control unit, Radiator fan	674
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	675
9. Air mass measurement module, Dual exhaust gas temperature sensor 1, Air mass meter, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	676
10. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	677
11. Alternator with voltage regulator, Charge pressure sender, Engine/motor control unit, Magnetic clutch for supercharger	678
12. Radiator outlet coolant temperature sender, Engine/motor control unit	679
13. Hall sender, Fuel pressure sender, Engine/motor control unit, Piston cooling jet control valve	680
14. Data bus diagnostic interface, Engine/motor control unit, Control unit for structure-borne sound, Actuator for structure-borne sound	681
15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	682
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	683
17. Cam adjustment actuator 4, Engine speed sender, Engine/motor control unit, Coolant circulation pump	684
18. Intake manifold sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	685
19. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	686
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Engine temperature regulation module, Oil level and oil temperature sender, Engine/motor control unit	687
21. Throttle valve module, Engine/motor control unit, Intake manifold flap valve, Valve for oil pressure control	688
22. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Coolant valve for gearbox	689
23. Charge pressure control module, Hall sender 3, Engine/motor control unit, Fuel metering valve	690
24. Switch module 1 in centre console, ABS control unit, Onboard supply control unit	691
25. Heater and air conditioning controls, Fuel delivery unit, Fuel pump control unit, Dash panel insert	692
058 - Dual clutch gearbox 0GC , (0IJ)	693-697
1. Dual clutch gearbox 0GC , (0IJ)	693
2. Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	694
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	695
4. Onboard supply control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	696
5. Selector mechanism, Starter button, Interface for entry and start system	697
059 - Basic equipment	698-721
1. Basic equipment	698
2. Fuse holder B. Fuse holder C	699

3. Fuse holder C, USB charging socket 1	700
4. Onboard supply control unit, Engine/motor control unit	701
5. Onboard supply control unit, Data bus diagnostic interface, Light for left dash panel background lighting, Light for right dash panel background lighting, Light for centre dash panel background lighting, Cigarette lighter	702
6. Rotary light switch, Light switch, Onboard supply control unit	703
7. Brake light switch, Onboard supply control unit, Left fog light, Left static cornering light	704
8. Treble horn, Bass horn, Onboard supply control unit, Right fog light, Right static cornering light	705
9. Onboard supply control unit	706
10. Onboard supply control unit, Luggage compartment light	707
11. Rear left vanity mirror contact switch, Rear right vanity mirror contact switch, Onboard supply control unit, Rear left illuminated vanity mirror, Rear right illuminated vanity mirror	708
12. Front interior light button, Rear interior light button, Rear left reading light button, Rear right reading light button, Front interior light (door contact) button, Front left reading light button, Front right reading light button, Onboard supply control unit, Front interior light, Rear interior light, Centre interior light, Rear left reading light, Rear right reading light, Front left reading light, Front right reading light	709
13. Hazard warning light switch, Headlight range control regulator, Hazard warning lights button, Onboard supply control unit, Indicator lamp for hazard warning light, Button illumination bulb, Storage compartment illumination bulb	710
14. Onboard supply control unit, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	711
15. Onboard supply control unit, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	712
16. Onboard supply control unit, Left number plate light, Right number plate light	713
17. Onboard supply control unit, High-level brake light bulb, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear window, Heated rear window	714
18. Tank flap release, Rear lid handle, Reversing light switch, Luggage compartment light switch, Rear lid contact switch, Fuel tank filler flap central locking actuator, Central locking rear lid lock unit, Onboard supply control unit, Rear lid lock unit, Rear lid central locking motor	715
19. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit	716
20. Intermittent wiper switch, Onboard supply control unit, Steering column electronics control unit	717
21. Turn signal switch, Headlight dipper and flasher switch, Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit	718
22. Brake fluid level warning contact, Airbag coil connector and return ring with slip ring, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Horn plate, Onboard supply control unit, Steering column electronics control unit	719
23. Immobiliser reader coil, Parking brake pressure switch, Data bus diagnostic interface, Dash panel insert	720
24. Fresh air blower switch, Heater and air conditioning controls, Fresh air blower series resistor with overheating fuse, Fresh air blower	721
060 - Reversing camera (Rear Assist) , (KA1)	722-724
1. Reversing camera (Rear Assist) , (KA1)	722
2. Rear lid handle, Control unit 1 for information electronics, Reversing camera, Emblem motor	723
3. Rear lid handle, Onboard supply control unit, Reversing camera	724
061 - Tail light clusters with LEDs , (8VG)	725-728
1. Tail light clusters with LEDs , (8VG)	725
2. Onboard supply control unit, Left tail light cluster	726
3. Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2	727
4. Onboard supply control unit, Right tail light cluster	728
062 - Tail light clusters with LEDs , (8VP)	729-732
1. Tail light clusters with LEDs , (8VP)	729
2. Onboard supply control unit, Left tail light cluster	730
3. Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2	731
4. Onboard supply control unit, Right tail light cluster	732
063 - Seat heating , (4A3)	733-736
1. Seat heating , (4A3)	733
2. Seat heating control unit, Fuse holder C, Heated seat cushion for front left seat, Heated backrest for front left seat	734
3. Onboard supply control unit, Seat heating control unit, Heated seat cushion for front right seat, Heated backrest for front right seat	735
4. Heater and air conditioning controls	736
064 - LED headlights . (8IV).(8Q3)	737-740

1. LED headlights , (8IV),(8Q3)	737
2. Rear right vehicle level sender, Headlight range control unit, Onboard supply control unit	738
3. Light conductor for contour lighting in radiator grille, front left, Front left headlight	739
4. Light conductor for contour lighting in radiator grille, front right, Front right headlight	740
065 - Airbag systems , (L0L)	741-749
1. Airbag systems , (L0L)	741
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Diagnostic connection	742
3. Key-operated switch to deactivate airbag on front passenger side, Twin belt buckle, Belt switch for seat row 2, passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Fuse holder D	743
4. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Igniter for central airbag for occupant collision protection, driver side	744
5. Front passenger side belt switch, Seat occupied sensor on front passenger side, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Airbag control unit	745
6. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	746
7. Airbag control unit, Emergency call module control unit and communication unit, Front left seat belt, Front right seat belt, Airbag igniter on driver side	747
8. Airbag control unit, Onboard supply control unit, Data bus diagnostic interface, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	748
9. Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre	749
066 - Airbag systems , (L0R)	750-761
1. Airbag systems , (L0R)	750
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side	751
3. Key-operated switch to deactivate airbag on front passenger side, Twin belt buckle, Airbag control unit, Airbag igniter 1 on front passenger side, Diagnostic connection	752
4. Driver side belt switch, Front passenger side belt switch, Belt switch for seat row 2, driver side, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on front passenger side	753
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Airbag control unit, Side airbag igniter on driver side, Igniter for central airbag for occupant collision protection, driver side	754
6. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter on driver side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	755
7. Airbag control unit, Emergency call module control unit and communication unit, Front left seat belt, Front right seat belt	756
8. Front pressure hose sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit	757
9. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit, Onboard supply control unit, Data bus diagnostic interface	758
10. Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit, Igniter for driver side seat belt tensioner 2	759
11. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection	760
12. Coupling point on front left bumper	761
067 - 1.0l petrol engine , DXTA,DXUA	762-779
1. 1.0l petrol engine , DXTA,DXUA	762
2. Battery, Battery monitor control unit, Fuse holder A, Fuse holder B	763
3. Starter, Fuse holder B	764
4. Fuse holder B	765
5. Switch module 1 in centre console, Onboard supply control unit, Fuse holder C	766
6. Alternator with voltage regulator, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	767
7. Engine/motor control unit	768
8. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	769
9. Ignition/starter switch, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	770

10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	771
11. Accelerator pedal module, Oil level and oil temperature sender, Brake servo pressure sensor, Engine/motor control unit, Radiator fan, Vacuum pump for brakes	772
12. Throttle valve module, Engine/motor control unit	773
13. Engine speed sender, Knock sensor 1, Coolant temperature sender, Fuel pressure sender, Engine/motor control unit	774
14. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	775
15. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit, Charge pressure positioner	776
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Fuel metering valve, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Charge air cooling pump	777
17. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1	778
18. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert	779
068 - Multifunction steering wheel , (2FD),(2FE),(2PE)	780-783
1. Multifunction steering wheel , (2FD),(2FE),(2PE)	780
2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	781
3. Heated steering wheel sender, Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for steering wheel contact detection, Heated steering wheel	782
4. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	783
069 - USB charging sockets , (U9E)	784-785
1. USB charging sockets , (U9E)	784
2. Onboard supply control unit, Control unit 1 for information electronics, USB hub, Fuse holder C, USB charging socket 1	785
801 - - Fitting locations: Earth points - 3	786-808
1. Earth points	786-808
1.1 Earth points in front part of vehicle	788-800
1.1.1 Front from left	789
1.1.2 Front from right	790
1.1.3 1.0l petrol engine, CHZB, CHZL, CHZJ, DKJA, DKLA, DKRA, DKRF, DLAA, DLAC, DXTA, DXUA	791
1.1.4 1.0l petrol and natural gas engine, CHYB, CHYC, DBYA	792
1.1.5 1.0l petrol engine, DFNA, DFNB, DSGB, DSGD	793
1.1.6 1.5l petrol engine, DADA, DPCA	794
1.1.7 1.6l petrol engine, CWVB, DWYB	795
1.1.8 2.0l petrol engine, CZPC, DKZC	796
1.1.9 2.0l petrol engine, DNND	797
1.1.10 Manual gearbox	798
1.1.11 Dual clutch gearbox, 0CW	799
1.1.12 Dual clutch gearbox, 0D9, 0GC	800
1.2 Earth points in middle part of vehicle	801-804
1.2.1 Front left of interior	801
1.2.2 Front right of interior	802
1.2.3 Front left footwell	803
1.2.4 Steering wheel	804
1.3 Earth points in rear part of vehicle	805-808
1.3.1 Left luggage compartment	806
1.3.2 Luggage compartment, middle	807
1.3.3 On right in luggage compartment, rear lid	808
802 - -Fitting locations: Fuses - 3	809-918
1. Fuses	809-918
1.1 Fuse holder A -SA-, from June 2017	810-813
1.1.1 Fitting location of fuse holder A -SA-, from June 2017	810-811
1.1.2 Fuse assignment for fuse holder A -SA-, from June 2017	812-813
1.2 Fuse holder B -SB-, sales type AW1, from June 2017	814-817
1.2.1 Fitting location of fuse holder B -SB-, sales type AW1, from June 2017	814
1.2.2 Fuse assignment for fuse holder B -SB-, sales type AW1, from June 2017	815-817
1.3 Fuse holder B -SB-, sales type AW1, from November 2017	818-822
1.3.1 Fitting location of fuse holder B -SB-, sales type AW1, from November 2017	818
1.3.2 Fuse assignment for fuse holder B -SB-, sales type AW1, from November 2017	819-822
1.4 Fuse holder B -SB-. sales type AW1. from November 2018	823-828

1.4.1 Fitting location of fuse holder B -SB-, sales type AW1, from November 2018	823-824
1.4.2 Fuse assignment for fuse holder B -SB-, sales type AW1, from November 2018	825-828
1.5 Fuse holder B -SB-, sales type AW1, from July 2019	829-834
1.5.1 Fitting location of fuse holder B -SB-, sales type AW1, from July 2019	829-830
1.5.2 Fuse assignment for fuse holder B -SB-, sales type AW1, from July 2019	831-834
1.6 Fuse holder B -SB-, sales type AW1, from July 2020	835-840
1.6.1 Fitting location of fuse holder B -SB-, sales type AW1, from July 2020	835-836
1.6.2 Fuse assignment for fuse holder B -SB-, sales type AW1, from July 2020	837-840
1.7 Fuse holder B -SB-, sales type AE1, from June 2021	841-846
1.7.1 Fitting location of fuse holder B -SB-, sales type AE1, from June 2021	841-842
1.7.2 Fuse assignment for fuse holder B -SB-, sales type AE1, from June 2021	843-846
1.8 Fuse holder B -SB-, sales type AE1, from June 2022	847-852
1.8.1 Fitting location of fuse holder B -SB-, sales type AE1, from June 2022	847-848
1.8.2 Fuse assignment for fuse holder B -SB-, sales type AE1, from June 2022	849-852
1.9 Fuse holder C -SC-, sales type AW1, from June 2017	853-860
1.9.1 Fitting location of fuse holder C -SC-, LHD models, sales type AW1, from June 2017	853-854
1.9.2 Fitting location of fuse holder C -SC-, RHD models, sales type AW1, from June 2017	855-856
1.9.3 Fuse assignment for fuse holder C -SC-, sales type AW1, from June 2017	857-860
1.10 Fuse holder C -SC-, sales type AW1, from November 2017	861-869
1.10.1 Fitting location of fuse holder C -SC-, LHD models, sales type AW1, from November 2017	862-863
1.10.2 Fitting location of fuse holder C -SC-, RHD models, sales type AW1, from November 2017	864-865
1.10.3 Fuse assignment for fuse holder C -SC-, sales type AW1, from November 2017	866-869
1.11 Fuse holder C -SC-, sales type AW1, from July 2018	870-878
1.11.1 Fitting location of fuse holder C -SC-, LHD models, sales type AW1, from July 2018	871-872
1.11.2 Fitting location of fuse holder C -SC-, RHD models, sales type AW1, from July 2018	873-874
1.11.3 Fuse assignment for fuse holder C -SC-, sales type AW1, from July 2018	875-878
1.12 Fuse holder C -SC-, sales type AW1, from July 2019	879-887
1.12.1 Fitting location of fuse holder C -SC-, LHD models, sales type AW1, from July 2019	880-881
1.12.2 Fitting location of fuse holder C -SC-, RHD models, sales type AW1, from July 2019	882-883
1.12.3 Fuse assignment for fuse holder C -SC-, sales type AW1, from July 2019	884-887
1.13 Fuse holder C -SC-, sales type AW1, from July 2020	888-896
1.13.1 Fitting location of fuse holder C -SC-, LHD models, sales type AW1, from July 2020	889-890
1.13.2 Fitting location of fuse holder C -SC-, RHD models, sales type AW1, from July 2020	891-892
1.13.3 Fuse assignment for fuse holder C -SC-, sales type AW1, from July 2020	893-896
1.14 Fuse holder C -SC-, sales type AE1, from June 2021	897-906
1.14.1 Fitting location of fuse holder C -SC-, LHD models, sales type AE1, from June 2021	898-899
1.14.2 Fitting location of fuse holder C -SC-, RHD models, sales type AE1, from June 2021	900-901
1.14.3 Fuse assignment for fuse holder C -SC-, sales type AE1, from June 2021	902-906
1.15 Fuse holder C -SC-, sales type AE1, from June 2022	907-915
1.15.1 Fitting location of fuse holder C -SC-, LHD models, sales type AE1, from June 2022	907-908
1.15.2 Fitting location of fuse holder C -SC-, RHD models, sales type AE1, from June 2022	909-910
1.15.3 Fuse assignment for fuse holder C -SC-, sales type AE1, from June 2022	911-915
1.16 Fuse holder D -SD-, from November 2017	916-918
1.16.1 Fitting location of fuse holder D -SD-, from November 2017	916
1.16.2 Fuse assignment for fuse holder D -SD-, from November 2017	917-918
803 - - Fitting locations: Relays - 3	919-930
1. Relays	919-930
1.1 Relays on fuse holder B -SB-, from June 2017	921
1.1.1 Relays on fuse holder B -SB-, from June 2017	921
1.2 Relays on fuse holder B -SB-, from July 2018	922
1.2.1 Relays on fuse holder B -SB-, from July 2018	922
1.3 Relays on fuse holder B -SB-, from July 2019	923
1.3.1 Relays on fuse holder B -SB-, from July 2019	923
1.4 Relays on fuse holder C -SC-, from June 2017	924-926
1.4.1 Relays on fuse holder C -SC-, for left-hand drive models, from June 2017	925
1.4.2 Relays on fuse holder C -SC-, for right-hand drive models, from June 2017	926
1.5 Relays on fuse holder C -SC-, from November 2018	927-930
1.5.1 Relays on fuse holder C -SC-, for left-hand drive models, from November 2018	927-928
1.5.2 Relays on fuse holder C -SC-, for right-hand drive models, from November 2018	929-930
804 - - Fitting locations: front part of vehicle - 3	931-997
1. Fitting locations: front part of vehicle	931-997
1.1 Front, view from front	952-955
1.1.1 Front, view from front, sales type AW1	952-953
1.1.2 Front, view from front, sales type AE1	954-955
1.2 Front, from front left, part 1	956-958
1.3 Front, from front left, part 2	959

1.4 Front from right	960
1.5 1.0l petrol engine, CHYB,CHYC	960-962
1.5.1 1.0l petrol engine, CHYB,CHYC, from front	961
1.5.2 1.0l petrol engine, CHYB, CHYC from above	962
1.5.3 1.0l petrol engine, CHYB, CHYC from rear	962
1.6 1.0l petrol/natural gas engine, CHZB, CHZJ, CHZL, DBYA, DKJA, DKLA, DKRA, DKRF, DXTA, DXUA	963-965
1.6.1 1.0l petrol/natural gas engine, CHZB, CHZJ, CHZL, DBYA, DKJA, DKLA, DKRA, DKRF, DXTA, DXUA , from front	963
1.6.2 1.0l petrol/natural gas engine, CHZB, CHZJ, CHZL, DBYA, DKJA, DKLA, DKRA, DKRF, DXTA, DXUA , from above	964
1.6.3 1.0l petrol/natural gas engine, CHZB, CHZJ, CHZL, DBYA, DKJA, DKLA, DKRA, DKRF, DXTA, DXUA , from rear	965
1.7 1.0l petrol engine, DFNA, DFNB, DSGB, DSGD	966-968
1.7.1 1.0l petrol engine, DFNA, DFNB, DSGB, DSGD, from front	967
1.7.2 1.0l petrol engine, DFNA, DFNB, DSGB, DSGD, from above	967
1.7.3 1.0l petrol engine, DFNA, DFNB, DSGB, DSGD, from rear	968
1.8 1.0l petrol engine, DLAA, DLAC	969-971
1.8.1 1.0l petrol engine, DLAA, DLAC, from front	970
1.8.2 1.0l petrol engine, DLAA, DLAC, from above	970
1.8.3 1.0l petrol engine, DLAA, DLAC, from rear	971
1.9 1.5l petrol engine, DADA, DPCA	972-975
1.9.1 1.5l petrol engine, DADA, DPCA, from front	973
1.9.2 1.5l petrol engine, DADA, DPCA, from above	973
1.9.3 1.5l petrol engine, DADA, DPCA, from right	974
1.9.4 1.5l petrol engine, DADA, DPCA, from rear	975
1.10 1.6l petrol engine, CWVB, DWYB	976-979
1.10.1 1.6l petrol engine, CWVB, DWYB, from front	977
1.10.2 1.6l petrol engine, CWVB, DWYB, from above	977
1.10.3 1.6l petrol engine, CWVB, DWYB, from left	978
1.10.4 1.6l petrol engine, CWVB, DWYB, from rear	979
1.11 1.6l diesel engine, DGTC, DGTD	980-983
1.11.1 1.6l diesel engine, DGTC, DGTD, from front	981
1.11.2 1.6l diesel engine, DGTC, DGTD, from above	981
1.11.3 1.6l diesel engine, DGTC, DGTD, from left	982
1.11.4 1.6l diesel engine, DGTC, DGTD, from rear	983
1.12 2.0l petrol engine, CZPC, DKZC, DNND	984-992
1.12.1 2.0l petrol engine, CZPC, DKZC, from front	985
1.12.2 2.0l petrol engine, DNND, from front	986
1.12.3 2.0l petrol engine, CZPC, DKZC, from above	987
1.12.4 2.0l petrol engine, DNND, from above	988
1.12.5 2.0l petrol engine, CZPC, DKZC, from left	989
1.12.6 2.0l petrol engine, CZPC, DKZC, DNND, from right	990
1.12.7 2.0l petrol engine, CZPC, DKZC, from rear	991
1.12.8 2.0l petrol engine, DNND, from rear	992
1.13 Dual clutch gearbox	993-995
1.13.1 Dual clutch gearbox, 0CW	994
1.13.2 Dual clutch gearbox, 0D9	994
1.13.3 Dual clutch gearbox, 0GC	995
1.14 Manual gearbox	996-997
805 - - Fitting locations: middle part of vehicle - 3	998-1056
1. Fitting locations: middle part of vehicle	998-1056
1.1 At front of interior	1012-1037
1.1.1 Front left of interior, LHD models, sales type AW1	1013-1014
1.1.2 Front left of interior, LHD models, sales type AE1	1015-1016
1.1.3 Front left of interior, RHD models, sales type AW1	1017-1018
1.1.4 Front left of interior, RHD models, sales type AE1	1019-1020
1.1.5 Left footwell, LHD models	1021
1.1.6 Front right footwell, RHD models	1022
1.1.7 Front right of interior, LHD models, sales type AW1	1023-1024
1.1.8 Front right of interior, LHD models, sales type AE1	1025-1026
1.1.9 Front right of interior, RHD models, sales type AW1	1027-1028
1.1.10 Front right of interior, RHD models, sales type AE1	1029-1030
1.1.11 Dash panel, LHD models	1031
1.1.12 Dash panel, RHD models	1032
1.1.13 Steering wheel	1033
1.1.14 Steering column	1033-1034

1.1.15 Front centre console, LHD models	1035
1.1.16 Front centre console, RHD models	1036
1.1.17 Left front seat	1037
1.1.18 Right front seat	1037
1.2 Rear interior	1038-1040
1.2.1 Rear interior, view from left, sales type AW1	1039
1.2.2 Rear interior, view from left, sales type AE1	1040
1.2.3 Rear interior, view from right	1041
1.3 Roof	1041-1043
1.3.1 Roof, part 1	1042
1.3.2 Roof, sliding/tilting sunroof, 3FB	1043
1.4 Doors	1044-1049
1.4.1 Driver door, left-hand drive models	1044-1045
1.4.2 Driver door, right-hand drive models	1046
1.4.3 Front passenger door, left-hand drive models	1047
1.4.4 Front passenger door, right-hand drive models	1048
1.4.5 Rear left door	1049
1.4.6 Rear right door	1049
1.5 Heater and air conditioning unit	1050-1054
1.5.1 Air conditioning system, 9AB, part 1	1051
1.5.2 Air conditioning system, 9AB, part 2	1052
1.5.3 Climatronic, 9AK, part 1	1053
1.5.4 Climatronic, 9AK, part 2	1054
1.6 Connector assignments	1055-1056
1.6.1 Onboard supply control unit -J519-	1055-1056
806 - - Fitting locations: rear part of vehicle - 3	1057-1066
1. Fitting locations: rear part of vehicle	1057-1066
1.1 Rear lid	1059-1061
1.1.1 Rear lid, sales type AW1	1060
1.1.2 Rear lid, sales type AE1	1061
1.2 Rear bumper	1062
1.3 Rear side, view from left	1062-1064
1.3.1 Rear side, view from left, sales type AW1	1063
1.3.2 Rear side, view from left, sales type AE1	1064
1.4 Rear, centre view	1065
1.5 Rear side, view from right	1066
807 - -Fitting locations: vehicle underbody - 3	1067-1073
1. Fitting locations: vehicle underbody	1067-1073
1.1 Front of underbody	1068-1069
1.1.1 Front underbody, for models with petrol engine	1068
1.1.2 Front underbody, for models with diesel engine	1069
1.2 Rear underbody	1070-1073
1.2.1 Rear underbody, for models with petrol engine	1071
1.2.2 Rear underbody, for models with diesel engine	1071
1.2.3 Underbody, for models with natural gas engine	1072-1073
830 - -Connector views: parts with prefix A to D - 3	1074-1078
1. -Connector views: parts with prefix A to D	1074-1078
1.1 Starter -B-	1074
1.1.1 1-pin connector -T1co-	1074
1.1.2 1-pin connector -T1gm-	1074
1.2 Alternator with voltage regulator -CX1-	1075
1.2.1 2-pin connector -T2ah-	1075
1.3 Ignition/starter switch -D-	1076
1.3.1 6-pin connector -T6aj-	1076
1.4 Immobiliser reader coil -D2-	1077-1078
1.4.1 2-pin connector -T2cj-	1077-1078
831 - -Connector views: parts with prefix E - 3	1079-1106
1. -Connector views: parts with prefix E	1079-1106
1.1 Driver side belt switch -E24-	1079
1.1.1 2-pin connector -T2ey-	1079
1.2 Headlight range control regulator -E102-	1080
1.2.1 7-pin connector -T7b-	1080
1.3 Key operated switch to deactivate airbag on front passenger side -E224-	1081
1.3.1 6-pin connector -T6j-	1081
1.4 Driver side interior locking button for central locking system -E308-	1082
1.4.1 4-pin connector -T4r-	1082

1.5 Starter button -E378-	1083
1.5.1 6-pin connector -T6s-	1083
1.6 Operating unit for preparation for mobile telephone -E508-	1084
1.6.1 6-pin connector -T6ai-	1084
1.7 Rotary light switch -EX1-	1085
1.7.1 10-pin connector -T10o-	1085
1.8 Selector mechanism -EX2-	1086
1.8.1 10-pin connector -T10v-	1086
1.9 Hazard warning light switch -EX3-	1087
1.9.1 6-pin connector -T6l-	1087
1.10 Interior mirror -EX5-	1088
1.10.1 8-pin connector -T8s-	1088
1.11 Exterior mirror adjuster -EX11-	1089-1090
1.11.1 6-pin connector -T6e-	1089
1.11.2 10-pin connector -T10h-	1090
1.12 Tank flap release -EX13-	1091
1.12.1 2-pin connector -T2df-	1091
1.13 Heater and air conditioning controls -EX21-	1091-1095
1.13.1 5-pin connector -T5aa-	1092
1.13.2 16-pin connector -T16g-	1092
1.13.3 16-pin connector -T16h-	1093
1.13.4 16-pin connector -T16f-	1094
1.13.5 16-pin connector -T16i-	1094
1.13.6 20-pin connector -T20c-	1095
1.14 Switch module 1 in centre console -EX23-	1096-1097
1.14.1 6-pin connector -T6p-	1096
1.14.2 10-pin connector -T10u-	1097
1.14.3 10-pin connector -T10at-	1097
1.15 Window regulator switch in front passenger door -EX27-	1098
1.15.1 4-pin connector -T4t-	1098
1.16 Operating unit for window regulator in rear right door -EX28-	1099
1.16.1 4-pin connector -T4ab-	1099
1.17 Operating unit for window regulator in rear left door -EX29-	1100
1.17.1 4-pin connector -T4z-	1100
1.18 Operating unit for window regulator in driver door -EX36-	1101-1102
1.18.1 4-pin connector -T4u-	1101
1.18.2 10-pin connector -T10i-	1102
1.19 Rear lid handle -EX37-	1103-1106
1.19.1 2-pin connector -T2fh-	1103
1.19.2 2-pin connector -T2fd-	1104
1.19.3 4-pin connector -T4c-	1104
1.19.4 4-pin connector -T4e-	1105-1106
832 - -Connector views: parts with prefix F - 3	1107-1134
1. -Connector views: parts with prefix F	1107-1134
1.1 Brake light switch -F-	1108
1.1.1 4-pin connector -T4ac-	1108
1.2 Oil pressure switch -F1-	1108-1109
1.2.1 1-pin connector -T1j-	1108
1.2.2 1-pin connector -T1o-	1109
1.2.3 2-pin connector -T2ab-	1110
1.3 Reversing light switch -F4-	1110
1.3.1 2-pin connector -T2br-	1110
1.4 Radiator fan thermal switch -F18-	1111
1.4.1 3-pin connector -T3ab-	1111
1.5 Oil pressure switch -F22-	1112
1.5.1 1-pin connector -T1g-	1112
1.6 Brake fluid level warning contact -F34-	1113
1.6.1 2-pin connector -T2av-	1113
1.7 Parking brake pressure switch -F234-	1114
1.7.1 2-pin connector -T2di-	1114
1.8 Bonnet contact switch -F266-	1115
1.8.1 2-pin connector -T2bh-	1115
1.9 Rear left vanity mirror contact switch -F298-	1116
1.9.1 2-pin connector -T2dn-	1116
1.10 Rear right vanity mirror contact switch -F299-	1117
1.10.1 2-pin connector -T2dr-	1117

1.11 Bonnet contact switch 2 -F329-	1118
1.11.1 2-pin connector -T2bg-	1118
1.12 Actuator 1 for camshaft adjustment -F366-	1119
1.12.1 2-pin connector -T2ip-	1119
1.13 Actuator 2 for camshaft adjustment -F367-	1120
1.13.1 2-pin connector -T2iq-	1120
1.14 Actuator 3 for camshaft adjustment -F368-	1121
1.14.1 2-pin connector -T2iw-	1121
1.15 Actuator 4 for camshaft adjustment -F369-	1122
1.15.1 2-pin connector -T2ix-	1122
1.16 Actuator 5 for camshaft adjustment -F370-	1123
1.16.1 2-pin connector -T2it-	1123
1.17 Actuator 6 for camshaft adjustment -F371-	1124
1.17.1 2-pin connector -T2is-	1124
1.18 Actuator 7 for camshaft adjustment -F372-	1125
1.18.1 2-pin connector -T2iv-	1125
1.19 Actuator 8 for camshaft adjustment -F373-	1126
1.19.1 2-pin connector -T2iu-	1126
1.20 Oil pressure switch for reduced oil pressure -F378-	1127-1128
1.20.1 1-pin connector -T1am-	1127
1.20.2 2-pin connector -T2z-	1128
1.21 Belt switch for seat row 2, driver side -F390-	1129
1.21.1 2-pin connector -T2em-	1129
1.22 Belt switch for seat row 2, passenger side -F392-	1129
1.22.1 2-pin connector -T2cz-	1129
1.23 Stage 2 oil pressure switch -F446-	1130
1.23.1 2-pin connector -T2iy-	1130
1.24 Stage 3 oil pressure switch -F447-	1131
1.24.1 2-pin connector -T2gp-	1131
1.25 Twin belt buckle -FX4-	1132-1134
1.25.1 4-pin connector -T4ar-	1132
1.25.2 4-pin connector -T4be-	1133-1134
833 - -Connector views: parts with prefix G - 3	1135-1237
1. -Connector views: parts with prefix G	1135-1237
1.1 Oil pressure sender -G10-	1138
1.1.1 3-pin connector -T3g-	1138
1.2 Ambient temperature sensor -G17-	1139
1.2.1 2-pin connector -T2be-	1139
1.3 Engine speed sender -G28-	1139-1140
1.3.1 3-pin connector -T3b-	1139
1.3.2 3-pin connector -T3c-	1140
1.4 Charge pressure sender -G31-	1141
1.4.1 3-pin connector -T3bz-	1141
1.5 Coolant shortage indicator sender -G32-	1142
1.5.1 2-pin connector -T2bi-	1142
1.6 Windscreen washer fluid level sender -G33-	1143
1.6.1 2-pin connector -T2bb-	1143
1.7 Hall sender -G40-	1144-1145
1.7.1 3-pin connector -T3a-	1144
1.7.2 3-pin connector -T3dd-	1145
1.8 Intake air temperature sender -G42-	1146
1.8.1 2-pin connector -T2al-	1146
1.9 Rear right speed sensor -G44-	1146
1.9.1 2-pin connector -T2eg-	1146
1.10 Front right speed sensor -G45-	1147
1.10.1 2-pin connector -T2ee-	1147
1.11 Rear left speed sensor -G46-	1148
1.11.1 2-pin connector -T2ef-	1148
1.12 Front left speed sensor -G47-	1149
1.12.1 2-pin connector -T2ed-	1149
1.13 Knock sensor 1 -G61-	1150-1151
1.13.1 2-pin connector -T2gq-	1150
1.13.2 2-pin connector -T2j-	1151
1.13.3 2-pin connector -T2jf-	1152
1.14 Coolant temperature sender -G62-	1152-1153
1.14.1 2-pin connector -T2k-	1152

1.14.2 2-pin connector -T2es-	1153
1.15 Air mass meter -G70-	1154
1.15.1 4-pin connector -T4aj-	1154
1.16 Rear right vehicle level sender -G77-	1155
1.16.1 3-pin connector -T3bb-	1155
1.17 Fuel temperature sender -G81-	1156
1.17.1 2-pin connector -T2aj-	1156
1.18 Engine outlet coolant temperature sender -G82-	1157-1158
1.18.1 2-pin connector -T2ge-	1157
1.18.2 2-pin connector -T2fa-	1158
1.19 Radiator outlet coolant temperature sender -G83-	1159-1160
1.19.1 2-pin connector -T2ax-	1159
1.19.2 2-pin connector -T2eb-	1160
1.19.3 2-pin connector -T2hr-	1160
1.20 Sunlight penetration photosensor -G107-	1161
1.20.1 6-pin connector -T6i-	1161
1.21 Seat occupied sensor on front passenger side -G128-	1162
1.21.1 2-pin connector -T2ew-	1162
1.22 Left vent temperature sender -G150-	1163
1.22.1 2-pin connector -T2ca-	1163
1.23 Right vent temperature sender -G151-	1164
1.23.1 2-pin connector -T2bz-	1164
1.24 Hall sender 2 -G163-	1165
1.24.1 3-pin connector -T3cm-	1165
1.25 Rear seat occupied sensor on driver side -G177-	1166
1.25.1 2-pin connector -T2ik-	1166
1.26 Rear seat occupied sensor on passenger side -G178-	1167
1.26.1 2-pin connector -T2il-	1167
1.27 Side airbag crash sensor on driver side -G179-	1168
1.27.1 2-pin connector -T2as-	1168
1.28 Side airbag crash sensor on front passenger side -G180-	1169
1.28.1 2-pin connector -T2ar-	1169
1.29 Crash sensor for front airbag -G190-	1170
1.29.1 2-pin connector -T2bf-	1170
1.30 Footwell vent temperature sender -G192-	1171
1.30.1 2-pin connector -T2hf-	1171
1.31 Rear left parking aid sender -G203-	1172
1.31.1 3-pin connector -T3v-	1172
1.32 Rear centre left parking aid sender -G204-	1173
1.32.1 3-pin connector -T3w-	1173
1.33 Rear centre right parking aid sender -G205-	1174
1.33.1 3-pin connector -T3x-	1174
1.34 Rear right parking aid sender -G206-	1175
1.34.1 3-pin connector -T3y-	1175
1.35 Exhaust gas temperature sender 1 -G235-	1176
1.35.1 2-pin connector -T2ai-	1176
1.36 Fuel pressure sender -G247-	1177-1178
1.36.1 3-pin connector -T3f-	1177
1.36.2 3-pin connector -T3db-	1178
1.37 Front right parking aid sender -G252-	1179
1.37.1 3-pin connector -T3m-	1179
1.38 Front centre right parking aid sender -G253-	1179
1.38.1 3-pin connector -T3l-	1179
1.39 Front centre left parking aid sender -G254-	1180
1.39.1 3-pin connector -T3k-	1180
1.40 Front left parking aid sender -G255-	1181
1.40.1 3-pin connector -T3j-	1181
1.41 Rear side airbag crash sensor on driver side -G256-	1182
1.41.1 2-pin connector -T2cv-	1182
1.42 Rear side airbag crash sensor on passenger side -G257-	1183
1.42.1 2-pin connector -T2de-	1183
1.43 Oil level and oil temperature sender -G266-	1184-1185
1.43.1 3-pin connector -T3af-	1184
1.43.2 3-pin connector -T3ah-	1185
1.44 Hall sender 3 -G300-	1186
1.44.1 3-pin connector -T3d-	1186

1.44.2 3-pin connector -T3df-	1186
1.45 Evaporator temperature sensor -G308-	1187
1.45.1 2-pin connector -T2he-	1187
1.46 Intake manifold flap potentiometer -G336-	1188
1.46.1 3-pin connector -T3dc-	1188
1.47 Rain and light sensor -G397-	1189
1.47.1 3-pin connector -T3az-	1189
1.48 Tank pressure sensor -G400-	1190
1.48.1 3-pin connector -T3ak-	1190
1.49 Fuel pressure sender for low pressure -G410-	1191
1.49.1 3-pin connector -T3by-	1191
1.50 Exhaust gas pressure sensor 1 -G450-	1192
1.50.1 3-pin connector -T3cl-	1192
1.51 Toll collection sender -G459-	1193
1.51.1 2-pin connector -T2xa-	1193
1.52 Clutch position sender -G476-	1194
1.52.1 5-pin connector -T5a-	1194
1.53 Pressure differential sender -G505-	1195
1.53.1 3-pin connector -T3i-	1195
1.54 Front left sender for park assist steering on left side of vehicle -G568-	1196
1.54.1 3-pin connector -T3o-	1196
1.55 Front right sender for park assist steering on right side of vehicle -G569-	1197
1.55.1 3-pin connector -T3n-	1197
1.56 Driver side crash sensor for pedestrian protection -G570-	1198
1.56.1 2-pin connector -T2hb-	1198
1.57 Front passenger side crash sensor for pedestrian protection -G571-	1199
1.57.1 2-pin connector -T2hc-	1199
1.58 Anti-theft alarm sensor -G578-	1200
1.58.1 4-pin connector -T4ay-	1200
1.59 Front pressure hose sensor for pedestrian protection -G579-	1201-1202
1.59.1 2-pin connector -T2ep-	1201
1.59.2 2-pin connector -T2eq-	1202
1.60 Trigger 1 for pedestrian protection -G598-	1203
1.60.1 3-pin connector -T3bd-	1203
1.61 Trigger 2 for pedestrian protection -G599-	1203
1.61.1 3-pin connector -T3be-	1203
1.62 Contact sensor for front left exterior door handle -G605-	1204
1.62.1 4-pin connector -T4bg-	1204
1.63 Contact sensor for front right exterior door handle -G606-	1205
1.63.1 4-pin connector -T4bi-	1205
1.64 Vacuum sender -G608-	1206
1.64.1 3-pin connector -T3an-	1206
1.65 Centre crash sensor for pedestrian protection -G693-	1207
1.65.1 2-pin connector -T2er-	1207
1.66 Gearbox neutral position sender -G701-	1208
1.66.1 3-pin connector -T3am-	1208
1.67 Rear left park assist steering sender -G716-	1209
1.67.1 3-pin connector -T3z-	1209
1.68 Rear right park assist steering sender -G717-	1210
1.68.1 3-pin connector -T3aa-	1210
1.69 Pressure sender for refrigerant circuit -G805-	1211
1.69.1 3-pin connector -T3ai-	1211
1.70 Inlet camshaft position sender -G1002-	1212-1213
1.70.1 3-pin connector -T3ce-	1212
1.70.2 3-pin connector -T3cs-	1213
1.71 Exhaust camshaft position sender -G1003-	1214
1.71.1 3-pin connector -T3cf-	1214
1.72 Rear seat occupied sensor, centre -G1010-	1214
1.72.1 2-pin connector -T2im-	1214
1.73 Fuel delivery unit -GX1-	1215-1216
1.73.1 5-pin connector -T5m-	1215
1.73.2 5-pin connector -T5o-	1216
1.74 Accelerator pedal module -GX2-	1217
1.74.1 6-pin connector -T6k-	1217
1.75 Throttle valve module -GX3-	1217-1218
1.75.1 6-pin connector -T6a-	1218

1.75.2 6-pin connector -T6u-	1218
1.76 Lambda probe 1 after catalytic converter -GX7-	1219
1.76.1 4-pin connector -T4ai-	1219
1.77 Intake manifold sender -GX9-	1220-1223
1.77.1 3-pin connector -T3bx-	1220
1.77.2 3-pin connector -T3cp-	1221
1.77.3 4-pin connector -T4bw-	1222
1.77.4 4-pin connector -T4cg-	1222
1.77.5 4-pin connector -T4j-	1223
1.77.6 4-pin connector -T4l-	1224
1.78 Lambda probe 1 before catalytic converter -GX10-	1224-1226
1.78.1 4-pin connector -T4ah-	1225
1.78.2 5-pin connector -T5d-	1225
1.78.3 6-pin connector -T6g-	1226
1.79 Delivery unit for reducing agent metering system -GX19-	1227
1.79.1 5-pin connector -T5p-	1227
1.80 Gas rail temperature and pressure sensor -GX21-	1227
1.80.1 4-pin connector -T4m-	1227
1.81 Charge pressure sender -GX26-	1228
1.81.1 4-pin connector -T4k-	1228
1.82 Control unit for NOx sender -GX30-	1229
1.82.1 5-pin connector -T5b-	1229
1.83 Engine temperature regulation module -GX33-	1230-1231
1.83.1 5-pin connector -T5ah-	1230
1.83.2 5-pin connector -T5ai-	1231
1.84 Charge pressure control module -GX34-	1232
1.84.1 6-pin connector -T6ak-	1232
1.84.2 6-pin connector -T6t-	1232
1.85 Air mass measurement module -GX35-	1233
1.85.1 4-pin connector -T4ba-	1233
1.86 Dual exhaust gas temperature sensor 1 -GX41-	1234
1.86.1 3-pin connector -T3cu-	1234
1.87 Pressure sensor for activated charcoal filter air flushing -GX44-	1235
1.87.1 4-pin connector -T4by-	1235
1.88 Control unit 2 for NOx sender -GX46-	1236-1237
1.88.1 5-pin connector -T5e-	1236-1237
834 - -Connector views: parts with prefix H to I - 3	1238-1242
1. -Connector views: parts with prefix H to I	1238-1242
1.1 Treble horn -H2-	1238
1.1.1 2-pin connector -T2bd-	1238
1.2 Bass horn -H7-	1239
1.2.1 2-pin connector -T2bk-	1239
1.3 Anti-theft alarm system horn -H8-	1239
1.3.1 3-pin connector -T3al-	1239
1.4 Rear parking aid warning buzzer -H15-	1240
1.4.1 2-pin connector -T2dd-	1240
1.5 Front parking aid warning buzzer -H22-	1241-1242
1.5.1 2-pin connector -T2by-	1241-1242
835 - -Connector views: parts with prefix J - 3	1243-1297
1. -Connector views: parts with prefix J	1243-1297
1.1 ABS control unit -J104-	1244
1.1.1 38-pin connector -T38c-	1244
1.2 Fresh air blower control unit -J126-	1245
1.2.1 4-pin connector -T4ak-	1245
1.3 Airbag control unit -J234-	1245
1.3.1 90-pin connector -T90b-	1245
1.4 Electronically controlled damping control unit -J250-	1246
1.4.1 18-pin connector -T18c-	1246
1.5 Trailer detector control unit -J345-	1247-1248
1.5.1 6-pin connector -T6m-	1247
1.5.2 10-pin connector -T10s-	1248
1.5.3 24-pin connector -T24c-	1249
1.6 Battery monitor control unit -J367-	1249
1.6.1 2-pin connector -T2aw-	1249
1.7 Driver door control unit -J386-	1250
1.7.1 24-pin connector -T24b-	1250

1.8 Front passenger door control unit -J387-	1251
1.8.1 24-pin connector -T24a-	1251
1.9 Wiper motor control unit -J400-	1252
1.9.1 4-pin connector -T4ag-	1252
1.10 Adaptive cruise control unit -J428-	1253
1.10.1 7-pin connector -T7a-	1253
1.11 Headlight range control unit -J431-	1254
1.11.1 26-pin connector -T26b-	1254
1.12 Parking aid control unit -J446-	1255-1256
1.12.1 18-pin connector -T18a-	1255
1.12.2 26-pin connector -T26a-	1256
1.13 Multifunction steering wheel control unit -J453-	1257
1.13.1 6-pin connector -T6am-	1257
1.14 Power steering control unit -J500-	1257-1258
1.14.1 2-pin connector -T2cl-	1258
1.14.2 3-pin connector -T3ao-	1258
1.15 Onboard supply control unit -J519-	1259-1260
1.15.1 46-pin connector -T46a-	1259
1.15.2 73-pin connector -T73a-	1260
1.15.3 73-pin connector -T73b-	1261
1.16 Digital sound package control unit -J525-	1261
1.16.1 38-pin connector -T38d-	1261
1.17 Steering column electronics control unit -J527-	1262-1264
1.17.1 7-pin connector -T7c-	1262
1.17.2 10-pin connector -T10p-	1263
1.17.3 16-pin connector -T16d-	1264
1.17.4 16-pin connector -T16e-	1264
1.18 Data bus diagnostic interface -J533-	1265
1.18.1 20-pin connector -T20b-	1265
1.19 Fuel pump control unit -J538-	1266
1.19.1 5-pin connector -T5n-	1266
1.20 Engine/motor control unit -J623-	1267-1270
1.20.1 60-pin connector -T60a-	1267
1.20.2 91-pin connector -T91a-	1268
1.20.3 94-pin connector -T94b-	1269
1.20.4 94-pin connector -T94a-	1269
1.20.5 94-pin connector -T94c-	1270
1.20.6 105-pin connector -T105a-	1271
1.21 Chip card reader control unit -J676-	1271-1273
1.21.1 2-pin connector -T2ga-	1272
1.21.2 5-pin connector -T5w-	1272
1.21.3 10-pin connector -T10ae-	1273
1.22 Display unit for front information display and operating unit control unit -J685-	1274-1275
1.22.1 5-pin connector -T5z-	1274
1.22.2 5-pin connector -T5al-	1275
1.22.3 12-pin connector -T12d-	1275
1.23 Mechatronic unit for dual clutch gearbox -J743-	1276-1277
1.23.1 16-pin connector -T16k-	1276
1.23.2 20-pin connector -T20a-	1277
1.23.3 25-pin connector -T25a-	1278
1.24 Control unit for electronic steering column lock -J764-	1278
1.24.1 4-pin connector -T4an-	1278
1.25 Control unit 1 for information electronics -J794-	1279-1287
1.25.1 2-pin connector -T2cc-	1280
1.25.2 2-pin connector -T2cd-	1280
1.25.3 2-pin connector -T2cf-	1281
1.25.4 4-pin connector -T4al-	1282
1.25.5 5-pin connector -T5f-	1282
1.25.6 5-pin connector -T5y-	1283
1.25.7 5-pin connector -T5k-	1284
1.25.8 8-pin connector -T8k-	1284
1.25.9 8-pin connector -T8l-	1285
1.25.10 12-pin connector -T12b-	1286
1.25.11 12-pin connector -T12c-	1286
1.25.12 12-pin connector -T12a-	1287
1.26 Control unit for structure-borne sound -J869-	1288

1.26.1 6-pin connector -T6f-	1288
1.27 Seat heating control unit -J882-	1288
1.27.1 8-pin connector -T8j-	1288
1.28 Exhaust flap control unit -J883-	1289
1.28.1 3-pin connector -T3au-	1289
1.29 Rear driver side door control unit -J926-	1290
1.29.1 10-pin connector -T10av-	1290
1.30 Rear passenger side door control unit -J927-	1291
1.30.1 10-pin connector -T10au-	1291
1.31 Emergency call module control unit and communication unit -J949-	1292-1293
1.31.1 2-pin connector -T2hp-	1292
1.31.2 4-pin connector -T4cb-	1293
1.31.3 36-pin connector -T36a-	1294
1.32 Entry and start authorisation control unit -J965-	1294
1.32.1 40-pin connector -T40a-	1294
1.33 Blind Spot Monitor control unit -J1086-	1295
1.33.1 8-pin connector -T8q-	1295
1.34 Blind Spot Monitor control unit 2 -J1087-	1296-1297
1.34.1 8-pin connector -T8r-	1296-1297
836 - -Connector views: parts with prefix K to M - 3	1298-1335
1. -Connector views: parts with prefix K to M	1298-1335
1.1 Central locking SAFELOCK function warning lamp -K133-	1299
1.1.1 2-pin connector -T2am-	1299
1.2 Warning lamp for airbag deactivated on front passenger side -K145-	1299
1.2.1 4-pin connector -T4ao-	1299
1.3 Front left footwell light -K268-	1300
1.3.1 2-pin connector -T2cm-	1300
1.4 Front right footwell light -K269-	1301
1.4.1 2-pin connector -T2bx-	1301
1.5 Dash panel insert -KX2-	1302-1303
1.5.1 18-pin connector -T18d-	1302
1.5.2 18-pin connector -T18b-	1303
1.6 Left fog light bulb -L22-	1304
1.6.1 2-pin connector -T2bc-	1304
1.7 Right fog light bulb -L23-	1304
1.7.1 2-pin connector -T2bj-	1304
1.8 Storage compartment illumination bulb -L120-	1305
1.8.1 2-pin connector -T2cn-	1305
1.9 Driver side interior door handle illumination bulb -L146-	1306
1.9.1 2-pin connector -T2an-	1306
1.10 Front passenger side interior door handle illumination bulb -L147-	1307
1.10.1 2-pin connector -T2ao-	1307
1.11 Driver door background lighting bulb -L164-	1308
1.11.1 2-pin connector -T2ap-	1308
1.12 Front passenger door background lighting bulb -L165-	1309
1.12.1 2-pin connector -T2aq-	1309
1.13 Left daytime running light bulb -L174-	1310
1.13.1 3-pin connector -T3ae-	1310
1.14 Right daytime running light bulb -L175-	1311
1.14.1 3-pin connector -T3aj-	1311
1.15 Light for left dashboard background lighting -L229-	1312
1.15.1 2-pin connector -T2cg-	1312
1.16 Light for right dashboard background lighting -L230-	1313
1.16.1 2-pin connector -T2cp-	1313
1.17 Light for centre dashboard background lighting -L231-	1314
1.17.1 2-pin connector -T2co-	1314
1.18 Light conductor for contour lighting in radiator grille, front right -L362-	1315
1.18.1 2-pin connector -T2ih-	1315
1.19 Light conductor for contour lighting in radiator grille, front left -L363-	1316
1.19.1 2-pin connector -T2ig-	1316
1.20 High-level brake light bulb -M25-	1317
1.20.1 2-pin connector -T2b-	1317
1.21 Front left headlight -MX1-	1318-1319
1.21.1 10-pin connector -T10m-	1318
1.21.2 14-pin connector -T14p-	1319
1.22 Front right headlight -MX2-	1320

1.22.1 10-pin connector -T10n-	1320
1.22.2 14-pin connector -T14r-	1320
1.23 Left tail light cluster -MX3-	1321-1322
1.23.1 8-pin connector -T8m-	1321
1.23.2 8-pin connector -T8t-	1322
1.23.3 8-pin connector -T8n-	1323
1.24 Right tail light cluster -MX4-	1323-1325
1.24.1 8-pin connector -T8v-	1324
1.24.2 8-pin connector -T8o-	1324
1.24.3 8-pin connector -T8w-	1325
1.25 Left tail light cluster 2 -MX5-	1326-1328
1.25.1 3-pin connector -T3cv-	1326
1.25.2 3-pin connector -T3cw-	1327
1.25.3 4-pin connector -T4cf-	1327
1.25.4 4-pin connector -T4ce-	1328
1.26 Right tail light cluster 2 -MX6-	1329-1331
1.26.1 3-pin connector -T3ct-	1329
1.26.2 3-pin connector -T3dg-	1330
1.26.3 4-pin connector -T4cd-	1330
1.26.4 4-pin connector -T4cc-	1331
1.27 Left fog light -MX11-	1332
1.27.1 2-pin connector -T2ie-	1332
1.27.2 2-pin connector -T2ic-	1332
1.28 Right fog light -MX12-	1333-1335
1.28.1 2-pin connector -T2if-	1333
1.28.2 2-pin connector -T2id-	1334-1335
837 - -Connector views: parts with prefix N - 3	1336-1421
1. -Connector views: parts with prefix N	1336-1421
1.1 Fresh air blower series resistor with overheating fuse -N24-	1338
1.1.1 4-pin connector -T4br-	1338
1.2 Injector, cylinder 1 -N30-	1339-1340
1.2.1 2-pin connector -T2l-	1339
1.2.2 2-pin connector -T2s-	1340
1.2.3 2-pin connector -T2gk-	1341
1.3 Injector, cylinder 2 -N31-	1341-1343
1.3.1 2-pin connector -T2gu-	1342
1.3.2 2-pin connector -T2m-	1342
1.3.3 2-pin connector -T2gl-	1343
1.4 Injector, cylinder 3 -N32-	1344-1345
1.4.1 2-pin connector -T2n-	1344
1.4.2 2-pin connector -T2u-	1345
1.4.3 2-pin connector -T2gm-	1345
1.5 Injector, cylinder 4 -N33-	1346
1.5.1 2-pin connector -T2gn-	1346
1.6 Ignition coil 1 with output stage -N70-	1347
1.6.1 4-pin connector -T4i-	1347
1.7 Charge pressure control solenoid valve -N75-	1348
1.7.1 2-pin connector -T2bt-	1348
1.8 Heater element for crankcase breather -N79-	1349
1.8.1 2-pin connector -T2bu-	1349
1.9 Activated charcoal filter solenoid valve 1 -N80-	1350-1351
1.9.1 2-pin connector -T2et-	1350
1.9.2 2-pin connector -T2o-	1351
1.9.3 2-pin connector -T2v-	1352
1.10 Coolant shut-off valve -N82-	1352
1.10.1 2-pin connector -T2a-	1352
1.11 Activated charcoal filter solenoid valve 2 -N115-	1353
1.11.1 2-pin connector -T2hm-	1353
1.12 Ignition coil 2 with output stage -N127-	1354
1.12.1 4-pin connector -T4h-	1354
1.13 Airbag igniter 1 on front passenger side -N131-	1355
1.13.1 3-pin connector -T3aq-	1355
1.14 Rear belt tensioner igniter on driver side -N196-	1356
1.14.1 3-pin connector -T3at-	1356
1.15 Rear belt tensioner igniter on passenger side -N197-	1357
1.15.1 3-pin connector -T3ba-	1357

1.16 Side airbag igniter on driver side -N199-	1358
1.16.1 3-pin connector -T3bg-	1358
1.17 Camshaft control valve 1 -N205-	1359-1362
1.17.1 2-pin connector -T2gf-	1359
1.17.2 2-pin connector -T2jc-	1360
1.17.3 2-pin connector -T2p-	1361
1.17.4 2-pin connector -T2q-	1361
1.17.5 2-pin connector -T2go-	1362
1.18 Turbocharger air recirculation valve -N249-	1363
1.18.1 2-pin connector -T2gj-	1363
1.18.2 2-pin connector -T2jb-	1363
1.19 Driver side curtain airbag igniter -N251-	1364
1.19.1 2-pin connector -T2dl-	1364
1.20 Front passenger side curtain airbag igniter -N252-	1365
1.20.1 2-pin connector -T2dq-	1365
1.21 Fuel pressure regulating valve -N276-	1366-1367
1.21.1 2-pin connector -T2ak-	1366
1.21.2 2-pin connector -T2af-	1367
1.22 Air conditioner compressor regulating valve -N280-	1368
1.22.1 2-pin connector -T2fc-	1368
1.23 Fuel metering valve -N290-	1368-1370
1.23.1 2-pin connector -T2hd-	1369
1.23.2 2-pin connector -T2je-	1369
1.23.3 2-pin connector -T2hx-	1370
1.23.4 2-pin connector -T2x-	1371
1.24 Ignition coil 3 with output stage -N291-	1371
1.24.1 4-pin connector -T4g-	1371
1.25 Ignition coil 4 with output stage -N292-	1372
1.25.1 4-pin connector -T4b-	1372
1.26 Igniter for driver side seat belt tensioner 2 -N297-	1373
1.26.1 2-pin connector -T2ii-	1373
1.27 Igniter for front passenger side seat belt tensioner 2 -N298-	1374
1.27.1 2-pin connector -T2ij-	1374
1.28 Intake manifold flap valve -N316-	1375-1376
1.28.1 2-pin connector -T2gi-	1375
1.28.2 2-pin connector -T2iz-	1376
1.29 Exhaust camshaft control valve 1 -N318-	1377-1379
1.29.1 2-pin connector -T2r-	1377
1.29.2 2-pin connector -T2jd-	1378
1.29.3 2-pin connector -T2gg-	1378
1.29.4 2-pin connector -T2hw-	1379
1.30 Front left shock absorber damping adjustment valve -N336-	1380
1.30.1 2-pin connector -T2bo-	1380
1.31 Front right shock absorber damping adjustment valve -N337-	1380
1.31.1 2-pin connector -T2bp-	1380
1.32 Rear left shock absorber damping adjustment valve -N338-	1381
1.32.1 2-pin connector -T2cx-	1381
1.33 Rear right shock absorber damping adjustment valve -N339-	1382
1.33.1 2-pin connector -T2dg-	1382
1.34 Fuel tank shut-off valve 1 -N361-	1383
1.34.1 2-pin connector -T2gx-	1383
1.35 Fuel tank shut-off valve 2 -N362-	1384
1.35.1 2-pin connector -T2gy-	1384
1.36 Gas injection valve 1 -N366-	1385
1.36.1 2-pin connector -T2aa-	1385
1.37 Gas injection valve 2 -N367-	1386
1.37.1 2-pin connector -T2gv-	1386
1.38 Gas injection valve 3 -N368-	1387
1.38.1 2-pin connector -T2y-	1387
1.39 High-pressure valve for gas mode -N372-	1388
1.39.1 2-pin connector -T2bm-	1388
1.40 Ignition key withdrawal lock solenoid -N376-	1389
1.40.1 2-pin connector -T2ck-	1389
1.41 Magnetic clutch for supercharger -N421-	1390-1391
1.41.1 2-pin connector -T2hj-	1390
1.41.2 2-pin connector -T2hk-	1391

1.42 Valve for oil pressure control -N428-	1392-1393
1.42.1 2-pin connector -T2gh-	1392
1.42.2 2-pin connector -T2hv-	1393
1.42.3 2-pin connector -T2w-	1393
1.43 Coolant valve for gearbox -N488-	1394-1395
1.43.1 2-pin connector -T2t-	1394
1.43.2 2-pin connector -T2ja-	1395
1.44 Coolant valve for cylinder head -N489-	1396
1.44.1 2-pin connector -T2ac-	1396
1.45 Actuator for engine temperature regulation -N493-	1396
1.45.1 5-pin connector -T5ae-	1396
1.46 Piston cooling jet control valve -N522-	1397-1398
1.46.1 2-pin connector -T2gr-	1397
1.46.2 2-pin connector -T2ir-	1398
1.46.3 2-pin connector -T2ht-	1399
1.47 Injector 2, cylinder 1 -N532-	1399
1.47.1 2-pin connector -T2fe-	1399
1.48 Injector 2, cylinder 2 -N533-	1400
1.48.1 2-pin connector -T2ft-	1400
1.49 Injector 2, cylinder 3 -N534-	1401
1.49.1 2-pin connector -T2fu-	1401
1.50 Injector 2, cylinder 4 -N535-	1402
1.50.1 2-pin connector -T2fv-	1402
1.51 Inlet cam actuator A for cylinder 1 -N576-	1403
1.51.1 2-pin connector -T2d-	1403
1.52 Inlet cam actuator B for cylinder 1 -N577-	1404
1.52.1 2-pin connector -T2e-	1404
1.53 Inlet cam actuator for cylinder 2 -N583-	1405
1.53.1 3-pin connector -T3ca-	1405
1.54 Inlet cam actuator A for cylinder 2 -N584-	1406
1.54.1 2-pin connector -T2f-	1406
1.55 Inlet cam actuator B for cylinder 2 -N585-	1407
1.55.1 2-pin connector -T2g-	1407
1.56 Exhaust cam actuator for cylinder 2 -N587-	1408
1.56.1 3-pin connector -T3cb-	1408
1.57 Inlet cam actuator for cylinder 3 -N591-	1409
1.57.1 3-pin connector -T3cc-	1409
1.58 Inlet cam actuator A for cylinder 3 -N592-	1410
1.58.1 2-pin connector -T2ff-	1410
1.59 Inlet cam actuator B for cylinder 3 -N593-	1411
1.59.1 2-pin connector -T2i-	1411
1.60 Exhaust cam actuator for cylinder 3 -N595-	1412
1.60.1 3-pin connector -T3cd-	1412
1.61 Inlet cam actuator A for cylinder 4 -N600-	1413
1.61.1 2-pin connector -T2fg-	1413
1.62 Inlet cam actuator B for cylinder 4 -N601-	1414
1.62.1 2-pin connector -T2gw-	1414
1.63 Inlet camshaft control valve 1 -N727-	1415-1416
1.63.1 2-pin connector -T2hl-	1415
1.63.2 2-pin connector -T2hu-	1416
1.63.3 2-pin connector -T2jg-	1417
1.64 Igniter for central airbag for occupant collision protection, driver side -N737-	1417
1.64.1 3-pin connector -T3cx-	1417
1.65 Front left seat belt -NX10-	1418-1419
1.65.1 2-pin connector -T2du-	1418
1.65.2 5-pin connector -T5r-	1419
1.66 Front right seat belt -NX11-	1420-1421
1.66.1 2-pin connector -T2dv-	1420
1.66.2 5-pin connector -T5s-	1420-1421
838 - -Connector views: parts with prefix O to Q - 3	1422-1425
1. -Connector views: parts with prefix O to Q	1422-1425
1.1 Glow plug 1 -Q10-	1422
1.1.1 1-pin connector -T1ah-	1422
1.2 Glow plug 2 -Q11-	1423
1.2.1 1-pin connector -T1ai-	1423
1.3 Glow plug 4 -Q13-	1423

1.3.1 1-pin connector -T1aj-	1423
1.4 Glow plug 3 -QX3-	1424-1425
1.4.1 4-pin connector -T4bn-	1424-1425
839 - -Connector views: parts with prefix R - 3	1426-1462
1. -Connector views: parts with prefix R	1426-1462
1.1 Rear left bass loudspeaker -R15-	1427
1.1.1 4-pin connector -T4bu-	1427
1.2 Rear right bass loudspeaker -R17-	1427
1.2.1 4-pin connector -T4bv-	1427
1.3 Front left treble loudspeaker -R20-	1428
1.3.1 2-pin connector -T2dp-	1428
1.4 Front left bass loudspeaker -R21-	1429
1.4.1 4-pin connector -T4q-	1429
1.5 Front right treble loudspeaker -R22-	1430
1.5.1 2-pin connector -T2dt-	1430
1.6 Front right bass loudspeaker -R23-	1431
1.6.1 4-pin connector -T4w-	1431
1.7 Telephone microphone -R38-	1432
1.7.1 2-pin connector -T2dm-	1432
1.8 TV tuner -R78-	1433-1435
1.8.1 2-pin connector -T2ej-	1433
1.8.2 2-pin connector -T2ek-	1434
1.8.3 4-pin connector -T4bb-	1435
1.8.4 12-pin connector -T12e-	1435
1.9 CD player -R89-	1436-1437
1.9.1 5-pin connector -T5l-	1436
1.9.2 9-pin connector -T9a-	1437
1.10 Left aerial module -R108-	1438
1.10.1 2-pin connector -T2fb-	1438
1.10.2 4-pin connector -T4d-	1438
1.11 Right aerial module -R109-	1439
1.11.1 2-pin connector -T2hg-	1439
1.12 Telephone bracket -R126-	1440-1441
1.12.1 2-pin connector -T2dk-	1440
1.12.2 6-pin connector -T6ad-	1441
1.13 Rear bumper aerial for entry and start system -R136-	1442
1.13.1 2-pin connector -T2cw-	1442
1.14 Interior aerial 1 for entry and start system -R138-	1442
1.14.1 2-pin connector -T2dj-	1442
1.15 Interior aerial 2 for entry and start system -R139-	1443
1.15.1 2-pin connector -T2cy-	1443
1.16 Traffic data aerial -R173-	1444
1.16.1 8-pin connector -T8x-	1444
1.17 Subwoofer -R211-	1445
1.17.1 4-pin connector -T4as-	1445
1.18 Actuator for structure-borne sound -R214-	1446
1.18.1 2-pin connector -T2bq-	1446
1.19 Front camera for driver assist systems -R242-	1447
1.19.1 12-pin connector -T12g-	1447
1.20 USB hub -R293-	1448-1451
1.20.1 4-pin connector -T4ap-	1448-1449
1.20.2 5-pin connector -T5h-	1450
1.20.3 5-pin connector -T5i-	1450
1.20.4 5-pin connector -T5j-	1451
1.20.5 5-pin connector -T5x-	1452
1.21 LTE aerial 1 -R297-	1452
1.21.1 2-pin connector -T2hq-	1452
1.22 LTE aerial 2 -R306-	1453
1.22.1 2-pin connector -T2ho-	1453
1.23 Transmission and reception stabilisation control unit -R308-	1454-1455
1.23.1 2-pin connector -T2db-	1454
1.23.2 2-pin connector -T2dc-	1455
1.23.3 4-pin connector -T4at-	1456
1.24 Loudspeaker for emergency call module -R335-	1456
1.24.1 2-pin connector -T2hs-	1456
1.25 Roof aerial -RX5-	1457-1460

1.25.1 2-pin connector -T2dx-	1457
1.25.2 2-pin connector -T2dy-	1458
1.25.3 2-pin connector -T2dz-	1459
1.25.4 2-pin connector -T2en-	1459
1.25.5 2-pin connector -T2eo-	1460
1.25.6 2-pin connector -T2ea-	1461
1.26 Interface for external audio sources -RX9-	1461-1462
1.26.1 7-pin connector -T7d-	1461-1462
840 - -Connector views: parts with prefix S to U - 3	1463-1536
1. -Connector views: parts with prefix S to U	1463-1536
1.1 Fuse holder D -SD-	1464
1.1.1 2-pin connector -T2da-	1464
1.2 Coupling point on rear cross member, right -TAQR-	1464-1466
1.2.1 4-pin connector -T4ax-	1465
1.2.2 4-pin connector -T4bk-	1465
1.2.3 6-pin connector -T6v-	1466
1.2.4 6-pin connector -T6w-	1467
1.3 Coupling point on dash panel -TCP-	1467-1468
1.3.1 2-pin connector -T2ha-	1467
1.3.2 2-pin connector -T2cb-	1468
1.4 Coupling point for gearbox oil cooling -TGOK-	1469
1.4.1 5-pin connector -T5ak-	1469
1.5 Coupling point on front left exterior door handle -TGVL-	1470-1471
1.5.1 4-pin connector -T4bh-	1470
1.5.2 4-pin connector -T4s-	1471
1.6 Coupling point on front right exterior door handle -TGVR-	1472
1.6.1 4-pin connector -T4bj-	1472
1.6.2 4-pin connector -T4x-	1472
1.7 Coupling point for roof -TH-	1473
1.7.1 6-pin connector -T6r-	1473
1.8 Coupling point for rear lid -THK-	1474-1484
1.8.1 2-pin connector -T2cu-	1475
1.8.2 2-pin connector -T2c-	1475
1.8.3 2-pin connector -T2ia-	1476
1.8.4 2-pin connector -T2ib-	1477
1.8.5 2-pin connector -T2in-	1477
1.8.6 2-pin connector -T2io-	1478
1.8.7 4-pin connector -T4bd-	1479
1.8.8 4-pin connector -T4f-	1479
1.8.9 10-pin connector -T10q-	1480
1.8.10 10-pin connector -T10b-	1481
1.8.11 10-pin connector -T10a-	1481
1.8.12 10-pin connector -T10d-	1482
1.8.13 10-pin connector -T10r-	1483
1.8.14 10-pin connector -T10c-	1483
1.8.15 10-pin connector -T10aw-	1484
1.8.16 10-pin connector -T10e-	1485
1.9 Coupling point on rear lid, centre -THKM-	1485
1.9.1 2-pin connector -T2ct-	1485
1.10 Coupling point in engine compartment, left -TML-	1486-1496
1.10.1 2-pin connector -T2ay-	1487
1.10.2 2-pin connector -T2ez-	1487
1.10.3 4-pin connector -T4ae-	1488
1.10.4 4-pin connector -T4bq-	1489
1.10.5 4-pin connector -T4bo-	1489
1.10.6 8-pin connector -T8h-	1490
1.10.7 8-pin connector -T8g-	1491
1.10.8 8-pin connector -T8ac-	1491
1.10.9 14-pin connector -T14h-	1492
1.10.10 14-pin connector -T14n-	1493
1.10.11 14-pin connector -T14o-	1493
1.10.12 14-pin connector -T14c-	1494
1.10.13 14-pin connector -T14l-	1495
1.10.14 14-pin connector -T14a-	1495
1.10.15 14-pin connector -T14i-	1496
1.11 Coupling point on engine, top centre -TMOM-	1497

1.11.1 8-pin connector -T8b-	1497
1.12 Coupling point on engine, top right -TMOR-	1498
1.12.1 8-pin connector -T8ah-	1498
1.13 Coupling point 1 for engine prewiring harness -TMOVO1-	1498-1502
1.13.1 14-pin connector -T14z-	1499
1.13.2 14-pin connector -T14b-	1499
1.13.3 14-pin connector -T14m-	1500
1.13.4 14-pin connector -T14f-	1501
1.13.5 14-pin connector -T14d-	1501
1.13.6 14-pin connector -T14q-	1502
1.14 Coupling point 2 for engine prewiring harness -TMOVO2-	1503
1.14.1 4-pin connector -T4bz-	1503
1.14.2 4-pin connector -T4ca-	1503
1.15 Coupling point for front left side airbag -TSABVL-	1504-1505
1.15.1 3-pin connector -T3bf-	1504
1.15.2 3-pin connector -T3as-	1505
1.16 Coupling point for front right side airbag -TSABVR-	1506
1.16.1 3-pin connector -T3ar-	1506
1.16.2 3-pin connector -T3cq-	1506
1.17 Coupling point on rear left bumper -TSFHL-	1507-1508
1.17.1 10-pin connector -T10t-	1507
1.17.2 10-pin connector -T10l-	1508
1.18 Coupling point on front left bumper -TSFVL-	1509-1512
1.18.1 4-pin connector -T4o-	1509
1.18.2 4-pin connector -T4bf-	1510
1.18.3 8-pin connector -T8a-	1510
1.18.4 8-pin connector -T8i-	1511
1.18.5 14-pin connector -T14w-	1512
1.18.6 14-pin connector -T14j-	1512
1.19 Coupling point for front left seat -TSVL-	1513-1518
1.19.1 2-pin connector -T2cq-	1513
1.19.2 2-pin connector -T2eu-	1514
1.19.3 2-pin connector -T2cs-	1515
1.19.4 2-pin connector -T2ev-	1515
1.19.5 4-pin connector -T4bc-	1516
1.19.6 4-pin connector -T4bx-	1517
1.19.7 17-pin connector -T17a-	1517
1.19.8 17-pin connector -T17c-	1518
1.20 Coupling point for front right seat -TSVR-	1519-1523
1.20.1 2-pin connector -T2cr-	1519
1.20.2 2-pin connector -T2el-	1520
1.20.3 2-pin connector -T2hi-	1520
1.20.4 4-pin connector -T4aq-	1521
1.20.5 4-pin connector -T4bl-	1522
1.20.6 17-pin connector -T17b-	1522
1.20.7 17-pin connector -T17d-	1523
1.21 Coupling point for rear left door -TTHL-	1524
1.21.1 28-pin connector -T28c-	1524
1.21.2 28-pin connector -T28a-	1524
1.22 Coupling point for rear right door -TTHR-	1525-1526
1.22.1 28-pin connector -T28d-	1525
1.22.2 28-pin connector -T28b-	1526
1.23 Coupling point for front left door -TTVL-	1527
1.23.1 38-pin connector -T38e-	1527
1.23.2 38-pin connector -T38a-	1527
1.24 Coupling point for front right door -TTVR-	1528-1529
1.24.1 38-pin connector -T38f-	1528
1.24.2 38-pin connector -T38b-	1529
1.25 Cigarette lighter -U1-	1530
1.25.1 3-pin connector -T3ax-	1530
1.26 Trailer socket -U10-	1530
1.26.1 13-pin connector -T13b-	1530
1.27 Diagnostic connection -U31-	1531
1.27.1 16-pin connector -T16c-	1531
1.28 USB charging socket 1 -U37-	1532-1533
1.28.1 4-pin connector -T4bm-	1532-1533

1.28.2 4-pin connector -T4ci-	1534
1.29 USB connection 1 -U41-	1534
1.29.1 5-pin connector -T5u-	1534
1.30 USB connection 2 -U42-	1535-1536
1.30.1 5-pin connector -T5v-	1535-1536
841 - -Connector views: parts with prefix V - 3	1537-1562
1. -Connector views: parts with prefix V	1537-1562
1.1 Fresh air blower -V2-	1537
1.1.1 2-pin connector -T2gd-	1537
1.2 Washer pump -V5-	1538
1.2.1 2-pin connector -T2ba-	1538
1.3 Rear window wiper motor -V12-	1539
1.3.1 4-pin connector -T4bp-	1539
1.4 Coolant circulation pump -V50-	1540
1.4.1 3-pin connector -T3de-	1540
1.5 Fresh air and air recirculation flap control motor -V154-	1541
1.5.1 6-pin connector -T6y-	1541
1.6 Charge air cooling pump -V188-	1542
1.6.1 3-pin connector -T3e-	1542
1.7 Vacuum pump for brakes -V192-	1543-1544
1.7.1 2-pin connector -T2bn-	1543
1.7.2 6-pin connector -T6h-	1544
1.8 Charge pressure positioner -V465-	1545-1546
1.8.1 6-pin connector -T6ac-	1545
1.8.2 6-pin connector -T6c-	1546
1.8.3 6-pin connector -T6b-	1546
1.9 Auxiliary pump for heating -V488-	1547-1548
1.9.1 3-pin connector -T3ag-	1547
1.9.2 3-pin connector -T3ck-	1548
1.10 Driver side exterior mirror -VX4-	1549
1.10.1 16-pin connector -T16b-	1549
1.11 Passenger side exterior mirror -VX5-	1549
1.11.1 16-pin connector -T16a-	1549
1.12 Driver door lock unit -VX21-	1550
1.12.1 8-pin connector -T8d-	1550
1.13 Front passenger door lock unit -VX22-	1551
1.13.1 8-pin connector -T8c-	1551
1.14 Rear left door lock unit -VX23-	1552
1.14.1 8-pin connector -T8e-	1552
1.15 Rear right door lock unit -VX24-	1553
1.15.1 8-pin connector -T8f-	1553
1.16 Rear lid lock unit -VX25-	1554
1.16.1 4-pin connector -T4a-	1554
1.17 Air distribution flap -VX33-	1555
1.17.1 6-pin connector -T6af-	1555
1.18 Front left temperature flap -VX34-	1556
1.18.1 6-pin connector -T6ag-	1556
1.19 Front right temperature flap -VX35-	1557
1.19.1 6-pin connector -T6ab-	1557
1.20 Defroster flap -VX47-	1558
1.20.1 6-pin connector -T6ah-	1558
1.21 Air recirculation flap -VX52-	1559
1.21.1 6-pin connector -T6ae-	1559
1.22 Radiator fan -VX57-	1560-1562
1.22.1 3-pin connector -T3ad-	1560
1.22.2 3-pin connector -T3ac-	1561
1.22.3 4-pin connector -T4ad-	1562
842 - -Connector views: parts with prefix W to Z - 3	1563-1573
1. -Connector views: parts with prefix W to Z	1563-1573
1.1 Luggage compartment light -W3-	1563
1.1.1 2-pin connector -T2dw-	1563
1.2 Rear left illuminated vanity mirror -W49-	1564
1.2.1 2-pin connector -T2do-	1564
1.3 Rear right illuminated vanity mirror -W50-	1564
1.3.1 2-pin connector -T2ds-	1564
1.4 Front interior light -WX1-	1565-1566

1.4.1 3-pin connector -T3ay-	1565
1.4.2 6-pin connector -T6q-	1566
1.5 Rear interior light -WX2-	1567
1.5.1 4-pin connector -T4az-	1567
1.6 Left number plate light -X4-	1567
1.6.1 2-pin connector -T2at-	1567
1.7 Right number plate light -X5-	1568
1.7.1 2-pin connector -T2au-	1568
1.8 Left washer jet heater element -Z20-	1569
1.8.1 2-pin connector -T2gt-	1569
1.9 Right washer jet heater element -Z21-	1570
1.9.1 2-pin connector -T2gs-	1570
1.10 Heater for reducing agent line (heater circuit 2) -Z104-	1571
1.10.1 2-pin connector -T2dh-	1571
1.11 Windscreen heater for front sensors -Z113-	1572-1573
1.11.1 2-pin connector -T2hn-	1572-1573