



Contents

00 - Technical data	1
1 — Change history —	1
2 Safety indications	2
2.1 Safety measures for work in vehicles with Start-Stop system	2
2.2 Safety measures for work in the auxiliary frame	2
3 Repair instructions	3
3.1 Shock absorbers - leaks	3
3.2 Shock absorbers - noises	3
3.3 Shock absorbers - test	4
3.4 Steering box	4
3.5 Seals, seal rings	5
3.6 Bolts, nuts	5
3.7 Electric components	5
3.8 Raise the axle of the unloaded vehicle with coil spring	6
4 Assessment of crashed vehicles	12
4.1 Crashed vehicles - running gear assessment checklist	12
5 Disposal of gas struts	14
5.1 Disposal of front gas struts	14
5.2 Disposal of rear gas struts	15
40 - Front suspension	18
1 Front axle	18
1.1 Front axle - general assembly overview	18
2 Auxiliary frame	21
2.1 Auxiliary frame - general assembly overview	21
2.2 Auxiliary frame without steering rack - remove and install	21
2.3 Auxiliary frame with steering rack - remove and install	24
2.4 Auxiliary frame - position	29
2.5 Auxiliary frame - Lower	34
3 Anti-roll bar	38
3.1 Anti-roll bar - general assembly overview	38
3.2 Anti-roll bar - remove and install	39
3.3 Coupling rod - remove and install	42
4 Suspension strut, upper wishbone	45
4.1 Suspension strut, upper wishbone - Assembly overview	45
4.2 Suspension strut - remove and install	46
4.3 Suspension strut - repair	56
5 Lower wishbone, swivel joint	60
5.1 Lower wishbone, swivel joint - Assembly overview	60
5.2 Lower wishbone - remove and install	61
5.3 Check the drive shaft	64
5.4 Swivel guide - remove and install	64
5.5 Lower front metal/rubber bearings of the wishbone - replace	68
6 Wheel roller bearing	76
6.1 Wheel bearing - general overview of assembly	76
6.2 Wheel bearing case - remove and install	77
6.3 Hub and wheel bearing - remove and install	83
7 Drive shaft	92
7.1 Drive shaft - assembly overview	92
7.2 Drive shaft - remove and install	96
7.3 Joint - remove and install	113



7.4	Drive shaft heat shield - remove and install	118
7.5	Drive shaft - assemble and disassemble	118
7.6	External constant velocity joint - check	132
7.7	Internal constant velocity joint - check (Only for model 1.6 MSI Manual	133
42	- Rear suspension	136
1	Rear axle	136
1.1	Rear axle - overview	136
1.2	Rear axle - remove and install	137
2	Axle beam	143
2.1	Axle beam - assembly overview	143
2.2	Axle beam - replace the bonded rubber bush	143
3	Suspension strut/shock absorber, spring	153
3.1	Suspension strut/shock absorber, spring - assembly overview	153
3.2	Shock absorber - remove and install	154
3.3	Shock absorber - repair	156
3.4	Spring - remove and install	158
4	Wheel roller bearing	161
4.1	Wheel bearing - general overview of assembly	161
4.2	Wheel hub/wheel bearing unit - remove and install	162
43	- Self-levelling suspension	170
1	Vehicle level sender	170
1.1	Rear vehicle level sender - assembly overview	170
1.2	Rear vehicle level sender G76 – remove and install	170
44	- Wheels, tyres, vehicle geometry	173
1	Tyre monitoring system	173
1.1	Tyre Pressure Monitoring System - system description	173
2	Axle geometry check	175
2.1	Axle geometry check instructions	175
2.2	Preliminary testing conditions	176
2.3	Preparation for alignment	176
2.4	Nominal vehicle geometry alignment values	178
2.5	Place the vehicle in initial position to check geometry	180
2.6	Axle alignment work procedure	180
2.7	Axle geometry measurement requirement	182
2.8	Vehicle data tag	182
2.9	Adjust front axle camber angle	183
2.10	Adjust the rear axle camber angle	184
2.11	Adjust the rear axle toe-out	184
2.12	Adjust front axle toe-out angle	184
2.13	Check the maximum steering angle	186
3	Tightening torques of wheel bolts	187
48	- Steering	188
1	Steering wheel	188
1.1	Steering wheel - assembly overview	188
1.2	Steering wheel - remove and install	188
2	Steering column	191
2.1	Steering column - assembly overview	191
2.2	Steering column - remove and install	193
2.3	Handling and transporting the steering column	202
2.4	Intermediate steering column axle - remove and install	205
2.5	Steering column - repair	206



2.6	Power steering control unit J500 - remove and install	208
3	Steering rack	214
3.1	Steering rack - general overview of assembly	214
3.2	Steering rack - remove and install	217
3.3	Track rod - remove and install	223
3.4	Track rod ball joint - remove and install	227
4	Sensors	230
4.1	Steering angle sensor G85	230