



Contents

00 - Technical data	1
1 — Change history —	1
2 Safety indications	2
2.1 Safety measures for work in vehicles with Start-Stop system	2
2.2 Safety measures for activities with pyrotechnical components	3
2.3 Storage, transport and disposal of airbags, belt tensioners and battery separation units (pyrotechnical components)	4
2.4 Additional safety instructions for the side airbag	5
2.5 Additional safety instructions for the curtain airbag	5
2.6 Safety instructions for collision sensors (pressure sensors) of the front side airbag	6
2.7 Additional safety instructions for works in the seat-occupied recognition system to deactivate the front passenger's airbag - country-specific version	6
2.8 Replacing pyrotechnical, electrical, and mechanical components of the restraint system after accidents	7
2.9 Airbag fastening parts after an accident - check	9
2.10 Accident without airbag triggering	10
2.11 Seat belts - check	10
2.12 Seat belt webbing - check	10
2.13 Automatic belt retractor (blocking effect) - check	12
2.14 Visual inspection of the belt latch	12
2.15 Check belt latch operation	12
2.16 Belt guides and tabs - check	13
2.17 Fastening parts and fastening points after an accident - check	13
2.18 Child seat restraint system for additional child seats (not for the driver seat belt), country-specific version - check	13
2.19 Child seat anchor after an accident - check	14
2.20 Internal rearview mirror with automatic anti-glare - safety instructions	14
3 Repair instructions	15
3.1 Contact corrosion	15
3.2 Cable routing and fastening	15
68 - Interior equipment	16
1 Storage compartment/covers	16
1.1 Storage compartment/covers - assembly overview	16
1.2 Dash panel cover on the driver side - Assembly overview	17
1.3 Steering column lining - assembly overview	18
1.4 Glove box - assembly overview	19
1.5 Storage compartment and reading light on the passenger side and/or reading light on the driver side - assembly overview	20
1.6 Upper steering column lining - remove and install	21
1.7 Lower steering column lower lining - remove and install	22
1.8 Glove box - remove and install	24
1.9 Glove box lid - remove and install	25
1.10 Glove compartment lid – service position	26
1.11 Dash panel cover on the driver side - remove and install	27
1.12 Headliner storage compartment - remove and install	28
2 Equipment	30
2.1 Sun visor - assembly overview	30
2.2 Sun visor - remove and install	31
2.3 Sun visor centre mount bearing - remove and install	33
2.4 Roof grab handle - remove and install	34
3 Centre console	37
3.1 Centre console - assembly overview	37



3.2	Rear centre console lining - remove and install	41
3.3	Front centre console lining in the footwell area - remove and install	43
3.4	Centre console - remove and install	45
3.5	Centre console bracket - remove and install	49
4	Front centre armrest	51
4.1	Front centre armrest - assembly overview	51
4.2	Front centre armrest - remove and install	51
5	Interior mirror	54
5.1	Interior mirror - assembly overview	54
5.2	Interior mirror - remove and install	55
69	Passenger protection	60
1	Seat belts	60
1.1	Seat belt and fastening points - assembly overview and locations	60
1.2	Front three-point seat belt - assembly overview	62
1.3	Rear exterior three-point seat belt - assembly overview	64
1.4	Rear centre three-point seat belt - assembly overview	64
1.5	Front belt latch - assembly overview	65
1.6	Rear belt latch - assembly overview	66
1.7	Front three-point seat belt - remove and install	67
1.8	Belt height adjuster - remove and install	71
1.9	Front seat belt guide - remove and install	72
1.10	Rear three-point seat belt - remove and install	73
1.11	Rear seat belt guide - remove and install	76
1.12	Front belt fitting - remove and install	76
1.13	Rear exterior seat belt fitting - remove and install	77
1.14	Front belt latch - remove and install	78
1.15	Rear seat belt latch - remove and install	79
2	Child seat fittings	82
2.1	Rear child seat fastening points — assembly overview	82
2.2	Rear child seat anchors - remove and install	82
3	Airbag system	85
3.1	Airbag system - assembly overview	85
4	Airbag control unit	87
4.1	Airbag control unit - assembly overview	87
4.2	Airbag control unit J234	87
5	Driver-side airbag	91
5.1	Driver-side airbag - assembly overview	91
5.2	Airbag unit with igniter - remove and install	93
5.3	Airbag connector - replace	97
6	Passenger-side airbag	100
6.1	Passenger-side airbag - assembly overview	100
6.2	Passenger-side airbag unit with igniter - remove and install	100
6.3	Passenger airbag deactivation key switch - remove and install	104
7	Side airbags	106
7.1	Front side airbag - assembly overview	106
7.2	Front side airbag unit with igniter - remove and install	106
8	Airbag collision sensors	109
8.1	Airbag collision sensors - assembly overview	109
8.2	Front airbag collision sensor G190 - remove and install	110
8.3	Front side airbag collision sensor G179/G180 - remove and install	114
8.4	Rear side airbag collision sensor G256/G257 - remove and install	117
9	Seat belt use recognition sensor	121
9.1	Passenger seat-occupied sensor G128- remove and install	121



70 - Trim, insulation	122
1 Front door lining	122
1.1 Front door lining - assembly overview	122
1.2 Front door lining - remove and install	124
1.3 Mirror cover lining - remove and install	128
1.4 Interior door handle - remove and install	129
2 Rear door lining	132
2.1 Rear door lining - assembly overview	132
2.2 Rear door lining - remove and install	132
3 Dash panel	137
3.1 dash panel - assembly overview	137
3.2 Dashboard side cover - remove and install	139
3.3 Dash panel cover - remove and install	140
3.4 Dash panel unit gap cover - remove and install	140
3.5 Radio/navigation system assembly frame - remove and install	142
3.6 Dash panel - remove and install	143
3.7 Outer dash panel vents - remove and install	148
3.8 Centre vent - remove and install	149
3.9 Heating side vent - remove and install	150
4 Dash panel cross member	152
4.1 Dash panel cross member - assembly overview	152
4.2 Dash panel cross member - remove and install	152
4.3 Impact bar - remove and install	158
5 Internal lining	160
5.1 Internal lining (Polo) - assembly overview	160
5.2 Internal lining (Virtus) - assembly overview	161
5.3 Sill panel trim lining - assembly overview	162
5.4 A-pillar lining - assembly overview	163
5.5 B Pillar covering - assembly overview	165
5.6 C-pillar lining (Polo) - assembly overview	166
5.7 Steering housing lining - assembly overview	167
5.8 Footwell and foot rest lining - assembly overview	168
5.9 Sill panel trim lining - remove and install	169
5.10 A-pillar lining - remove and install	172
5.11 A-pillar gap lining - remove and install	176
5.12 B-pillar lining - remove and install	178
5.13 C-pillar lining (Polo) - remove and install	182
5.14 C-pillar lining (Virtus) - remove and install	183
5.15 Luggage compartment lining (Virtus) - remove and install	185
5.16 Wheel housing trim - remove and install	186
5.17 Foot rest - remove and install	187
5.18 Floor lining - remove and install	188
6 Luggage compartment lining	191
6.1 Luggage compartment lining (Polo) - assembly overview	191
6.2 Luggage compartment lining (Virtus) - assembly overview	192
6.3 Luggage compartment lining - temporary spare wheel (Polo) - assembly overview	193
6.4 Boot lid lower lining (Virtus) - assembly overview	194
6.5 Boot lid lower lining (Polo) - assembly overview	195
6.6 Boot lid lower lining (Polo) - remove and install	196
6.7 Boot lid lower lining (Virtus) - remove and install	197
6.8 Luggage compartment cover support (Polo) - remove and install	198
6.9 Luggage compartment side lining - remove and install	200
6.10 Luggage compartment side trim (Virtus) - remove and install	202
6.11 Rear panel lining (Polo) - remove and install	204



6.12	Rear panel lining (Virtus) - remove and install	206
6.13	Luggage compartment floor cover (Virtus) - remove and install	207
6.14	Luggage compartment lining support (Polo) - remove and install	208
6.15	Luggage compartment lining support (Virtus) - remove and install	209
7	Moulded headliner	211
7.1	Moulded headliner - assembly overview	211
7.2	Moulded headliner (Polo) - remove and install	211
7.3	Moulded headliner (Virtus) - remove and install	214
7.4	Body roof reinforcement - remove and install	219
72	Seat frames	223
1	Front seat - assembly overview	223
1.1	Seat versions - assembly overview	223
2	Front seat	224
2.1	Electrical and electronic components - assembly overview	224
2.2	Front seat - assembly overview	225
2.3	Front backrest - assembly overview	226
2.4	Front backrest (GTS) - assembly overview	227
2.5	Head restraint - assembly overview	228
2.6	Seat frame - assembly overview	229
2.7	Seat height adjustment - assembly overview	230
2.8	Front seat - remove and install	231
2.9	Airbag adapter - connect and disconnect	234
2.10	Seat height adjustment lever - remove and install	235
2.11	Seat height adjuster - remove and install	237
2.12	Backrest adjustment lever - remove and install	238
2.13	Front backrest - remove and install	239
2.14	Front backrest (GTS) - remove and install	241
2.15	Head restraint - remove and install	244
2.16	Head restraint guide - remove and install	245
2.17	Seat frame - remove and install	245
2.18	Seat lining - remove and install	247
2.19	Install the front seat in the seat repair bracket	249
3	Rear seats	251
3.1	Individual seats — assembly overview	251
3.2	Backrest lock - remove and install	252
3.3	Head restraint and head restraint guide - assembly overview	252
3.4	Rear backrest - assembly overview	253
3.5	Back seat seating - remove and install	255
3.6	Head restraint - remove and install	258
3.7	Head restraint guide - remove and install	259
3.8	Back seat backrest - remove and install	261
3.9	Locking mechanism lining - remove and install	263
3.10	Rear backrest catch - remove and install	264
3.11	Internal support pin - remove and install	266
74	Seat - padding, covers	267
1	Front seat padding and lining	267
1.1	Seat frame padding and lining - assembly overview	267
1.2	Backrest padding and lining - assembly overview	268
1.3	Backrest padding and lining (GTS) - assembly overview	268
1.4	Seat frame lining and padding - remove and install	269
1.5	Backrest lining and padding - remove and install	271
1.6	Backrest lining and padding (GTS) - remove and install	273
1.7	Seat frame lining and padding - separate	277



1.8	Backrest lining and padding - separate	279
2	Rear seat lining and padding	283
2.1	Seat lining and padding - assembly overview	283
2.2	Rear seat lining and padding - remove and install	285
2.3	Seat lining and padding - separate	288