



## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>— Change history —</b>	<b>1</b>
<b>50 - Body - front</b>	<b>2</b>
1 <b>Front end</b>	<b>2</b>
1.1 Front end with complementary parts - assembly overview	2
1.2 Front end with complementary parts - remove and install	4
1.3 Front end with complementary parts - service position	8
2 <b>Wing</b>	<b>12</b>
2.1 Front wing - assembly overview	12
2.2 Front wing - remove and install	12
3 <b>Body - front section</b>	<b>17</b>
3.1 Upper bulkhead panel - assembly overview	17
3.2 Plenum chamber cover - assembly overview	17
3.3 Plenum chamber cover trim - remove and install	18
3.4 Plenum chamber cover - remove and install	19
<b>55 - Bonnet, rear lid</b>	<b>23</b>
1 <b>Bonnet</b>	<b>23</b>
1.1 Bonnet - assembly overview	23
1.2 Operating cable - assembly overview	24
1.3 Bonnet - remove and install	25
1.4 Bonnet - adjust	28
1.5 Bonnet latches - remove and install	34
1.6 Bonnet latch handle - remove and install	39
1.7 Bonnet fasteners - remove and install	42
1.8 Hinges - remove and install	43
1.9 Bonnet trim - remove and install	45
1.10 Bonnet support rod - remove and install	47
1.11 Bowden cable - remove and install	49
2 <b>Rear lid (Polo)</b>	<b>57</b>
2.1 Rear lid - assembly overview	57
2.2 Rear lid - remove and install	59
2.3 Rear lid - adjust	61
2.4 Rear lid lock - remove and install	68
2.5 Rear lid hinges - remove and install	70
2.6 Rear lid stop - remove and install	73
2.7 Rear lid trim - remove and install	74
2.8 Rear lid struts - remove and install	75
2.9 Rear lid gas strut - remove	77
3 <b>Rear lid (Virtus)</b>	<b>79</b>
3.1 Rear lid - assembly overview	79
3.2 Rear lid - remove and install	79
3.3 Rear lid - adjust	82
3.4 Rear lid lock - remove and install	84
3.5 Rear lid hinges - remove and install	86
3.6 Rear lid stop - remove and install	88
3.7 Rear lid trim - remove and install	90
3.8 Rear lid spring - remove and install	92
4 <b>Fuel tank cap unit</b>	<b>94</b>
4.1 Fuel tank flap unit - assembly overview	94
4.2 Fuel tank flap unit - remove and install	94



4.3	Fuel tank flap - remove and install	97
<b>57</b>	<b>- Front doors, door components, central locking</b>	<b>99</b>
<b>1</b>	<b>Front doors</b>	<b>99</b>
1.1	Front doors - assembly overview	99
1.2	Front door inner trim - remove and install	102
1.3	Front door outer trim - remove and install	104
1.4	Front doors - remove and install	105
1.5	Front doors - adjust	109
1.6	Front door strikers - adjust	111
1.7	Door arresters - remove and install	113
<b>2</b>	<b>Door installation components</b>	<b>116</b>
2.1	Assembly parts - assembly overview	116
2.2	Front door latch operation mechanism - assembly overview	118
2.3	Front door external handle and lock - assembly overview	119
2.4	Front door window mechanism motor - remove and install	120
2.5	Front door window drive mechanism - remove and install	122
2.6	Internal door trim - remove and install	125
2.7	Front door striker - remove and install	127
2.8	Exterior door handle cover - remove and install	129
2.9	Door lock cylinder - remove and install	135
2.10	External door handle - remove and install	138
2.11	External handle support - remove and install	140
2.12	Door lock - remove and install	142
2.13	Window guide - remove and install	147
2.14	Window compartment external trim - remove and install	150
2.15	Window compartment internal trim - remove and install	152
<b>3</b>	<b>Central locking system</b>	<b>153</b>
3.1	Central locking - general assembly overview	153
3.2	Ignition key battery - remove and install	155
3.3	Ignition key cover - remove and install	157
3.4	Fuel tank cap lock motor V155 - remove and install	158
<b>58</b>	<b>- Rear doors, door components</b>	<b>160</b>
<b>1</b>	<b>Rear lids</b>	<b>160</b>
1.1	Rear door - assembly overview	160
1.2	Rear door internal trim - remove and install	166
1.3	Rear door external trim - remove and install	170
1.4	Rear passenger door - remove and install	171
1.5	Rear passenger door - adjust	175
1.6	Rear door striker - adjust	177
1.7	Door arrester - remove and install	179
<b>2</b>	<b>Door installation components</b>	<b>182</b>
2.1	Assembly parts - assembly overview	182
2.2	Rear door latch operation mechanism - assembly overview	184
2.3	Rear door external handle and lock - assembly overview	184
2.4	Rear door window mechanism motor - remove and install	185
2.5	Rear door window drive mechanism - remove and install	188
2.6	Internal door trim - remove and install	191
2.7	Rear door striker - remove and install	193
2.8	Exterior door handle finishing - remove and install	195
2.9	External door handle - remove and install	199
2.10	External handle support - remove and install	201
2.11	Rear door lock - remove and install	204
2.12	Window guide - remove and install	208



2.13	Door window external trim - remove and install	213
2.14	Door window internal trim - remove and install	214
<b>63</b>	<b>- Bumpers</b>	<b>216</b>
<b>1</b>	<b>Front bumper</b>	<b>216</b>
1.1	Front bumper cover - assembly overview	216
1.2	Front protector support - assembly overview	220
1.3	Front bumper protector - remove and install	220
1.4	Support of the parking aid device sensor - install	224
<b>2</b>	<b>Rear bumper (Polo)</b>	<b>229</b>
2.1	Rear bumper protector - assembly overview	229
2.2	Rear bumper cover (Polo GTS) - assembly overview	230
2.3	Rear protector support - assembly overview	230
2.4	Rear bumper protector - remove and install	231
2.5	Rear protector support - remove and install	234
2.6	Support of the parking aid device sensor - install	235
<b>3</b>	<b>Rear bumper (Virtus)</b>	<b>241</b>
3.1	Rear bumper protector - assembly overview	241
3.2	Rear protector support - assembly overview	241
3.3	Rear bumper protector - remove and install	242
3.4	Rear protector support - remove and install	245
3.5	Support of the parking aid device sensor - install	247
<b>64</b>	<b>- Glazing</b>	<b>253</b>
<b>1</b>	<b>Repair instructions</b>	<b>253</b>
1.1	Minimum adhesive drying time	253
1.2	Assembly instructions and material for bonded windows	253
1.3	Stickers for engraving the VIS number on the windows (only for Brazil) - supply	255
1.4	Undamaged windows - prepare for install	255
1.5	New glass - prepare for install	256
1.6	Body flange - prepare to install the window	258
1.7	Cleaning in case of resulting adhesive residues	259
<b>2</b>	<b>Windscreen</b>	<b>260</b>
2.1	Windscreen - assembly overview	260
2.2	Windscreen - remove and install	261
<b>3</b>	<b>Rear window (Polo)</b>	<b>267</b>
3.1	Rear window - assembly overview	267
3.2	Rear window - remove and install	267
<b>4</b>	<b>Rear window (Virtus)</b>	<b>272</b>
4.1	Rear window - assembly overview	272
4.2	Rear window - remove and install	272
<b>5</b>	<b>Side window (Polo)</b>	<b>277</b>
5.1	Rear side window - assembly overview	277
5.2	Rear side window - remove and install	277
<b>6</b>	<b>Side windows (Virtus)</b>	<b>281</b>
6.1	Rear side window - assembly overview	281
6.2	Rear side window - remove and install	281
<b>7</b>	<b>Door window glass (Polo)</b>	<b>285</b>
7.1	Front door window glass - assembly overview	285
7.2	Rear door window glass - assembly overview	286
7.3	Front door window glass - remove and install	286
7.4	Rear door window glass - remove and install	290
<b>8</b>	<b>Door window glass (Virtus)</b>	<b>295</b>
8.1	Front door window glass - assembly overview	295



8.2	Rear door window glass - assembly overview	296
8.3	Rear door fixed window - assembly overview	296
8.4	Front door window glass - remove and install	297
8.5	Rear door window glass - remove and install	301
8.6	Rear door fixed window - remove and install	305
<b>66</b>	<b>Exterior equipment</b>	<b>309</b>
<b>1</b>	<b>Front grid</b>	<b>309</b>
1.1	Radiator grille - assembly overview	309
1.2	Front bonnet - remove and install	309
<b>2</b>	<b>Trims and linings</b>	<b>312</b>
2.1	A-pillar exterior trim - remove and install	312
2.2	B-pillar exterior trim - remove and install	314
2.3	C-pillar exterior trim - remove and install	319
2.4	External lining of lower longitudinal member (Polo Beats) - replace	321
2.5	Side member trim - assembly overview	323
2.6	Side member trim - remove and install	324
<b>3</b>	<b>Underbody trim</b>	<b>331</b>
3.1	Engine lower lining - assembly overview	331
3.2	Floor lower lining - assembly overview	331
3.3	Underbody cross piece - assembly overview	332
3.4	Underbody trim - remove and install	333
3.5	Underbody cross piece - remove and install	334
3.6	Rear underbody covering - remove and install	336
3.7	Central underbody covering - remove and install	337
<b>4</b>	<b>External rear-view mirror</b>	<b>339</b>
4.1	External rear-view mirror - assembly overview	339
4.2	Exterior rear-view mirror - remove and install	341
4.3	Mirror glass - remove and install	346
4.4	Mirror adjustment unit - remove and install	348
4.5	Mirror glass - remove and install	350
4.6	Mirror trim - remove and install	351
<b>5</b>	<b>Wheel housing liner</b>	<b>353</b>
5.1	Front wheel housing liner - assembly overview	353
5.2	Rear wheel housing liner - assembly overview	354
5.3	Rear wheel housing liner - assembly overview	354
5.4	Front wheel housing liner - remove and install	355
5.5	Rear wheel housing liner - remove and install	357
5.6	Rear wheel housing liner - remove and install	359
<b>6</b>	<b>Badges and letterings</b>	<b>361</b>
6.1	Letterings on the rear lid (Polo) - measurements	361
6.2	Letterings on the rear lid (Virtus) - measurements	365
6.3	Side letterings - measurements	371
6.4	GTS model designation - remove and install	374
6.5	Front badge - remove and install	375
6.6	Badge on the rear lid (Polo)- replace	376
6.7	Badge on the rear lid (Virtus)- replace	378
<b>7</b>	<b>"LATIN NCAP" badge (Rear window)</b>	<b>380</b>
7.1	"LATIN NCAP" badge (Rear window - Polo) - remove and install	380
7.2	"LATIN NCAP" badge (Rear window - Virtus) - remove and install	381
<b>8</b>	<b>Rear spoiler (Polo GTS)</b>	<b>383</b>
8.1	Rear spoiler (Polo GTS) - assembly overview	383
8.2	Rear spoiler (Polo GTS) - remove and install	383
<b>9</b>	<b>Rear spoiler (Virtus GTS)</b>	<b>391</b>



---

9.1	Rear spoiler (Virtus GTS) – assembly overview .....	391
9.2	Rear spoiler (Virtus GTS) - remove and install .....	391
<b>10</b>	<b>Heat shields</b> .....	<b>395</b>
10.1	Heat shields - assembly overview .....	395
10.2	Heat shield for the centre tunnel - remove and install .....	395
10.3	Heat shield for the fuel tank region - remove and install .....	396
10.4	Heat shield for the rear silencer - remove and install .....	397