



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 — Change history — | 1 |
| 2 Identification | 2 |
| 2.1 Gearbox identification | 2 |
| 3 Technical data | 4 |
| 3.1 Correspondence (gearbox / engine) | 4 |
| 3.2 Supply capacity (gearbox oil) | 5 |
| 3.3 Gear ratio calculation “i” | 5 |
| 4 Transmission assembly scheme | 6 |
| 4.1 Transmission assembly scheme | 6 |
| 5 Repair instructions | 8 |
| 5.1 General repair instructions | 8 |
| 30 - Clutch | 13 |
| 1 Clutch control | 13 |
| 1.1 Clutch drive system - assembly locations overview | 13 |
| 1.2 Clutch drive pedal - assembly overview | 14 |
| 1.3 Hydraulic clutch system - assembly overview | 16 |
| 1.4 Clutch release mechanism - assembly overview | 18 |
| 1.5 Support shell - remove and install | 19 |
| 1.6 Clutch position sender G476 - remove and install | 20 |
| 1.7 Pedal return spring - remove and install | 22 |
| 1.8 Clutch drive pedal - remove and install | 24 |
| 1.9 Clutch drive pedal support - remove and install | 25 |
| 1.10 Clutch transmitter cylinder - remove and install | 28 |
| 1.11 Clutch slave cylinder - remove and install | 29 |
| 1.12 Clutch drive system line - remove and install | 32 |
| 1.13 Hydraulic clutch mechanism - bleed | 34 |
| 1.14 Clutch release mechanism - repair | 36 |
| 2 Clutch | 38 |
| 2.1 Clutch - assembly overview | 38 |
| 2.2 Clutch - remove and install | 39 |
| 34 - Controls, housing | 44 |
| 1 Gearshift mechanism | 44 |
| 1.1 Gearshift mechanism - installation position | 44 |
| 1.2 Gear lever - assembly overview | 45 |
| 1.3 Handle and boot on the gear lever - assembly overview | 47 |
| 1.4 Gear knob - remove and install | 48 |
| 1.5 Gearshift mechanism - remove and install | 50 |
| 1.6 Gearshift mechanism - repair | 54 |
| 1.7 Gearshift mechanism - adjust | 58 |
| 1.8 Gearshift mechanism - check operation | 61 |
| 1.9 Gearshift lever and mechanism - remove and install | 62 |
| 1.10 Selector cables - remove and install | 67 |
| 1.11 Selector rod - replace seal | 69 |
| 1.12 Selector rod and the selector mechanism cover - assembly overview | 71 |
| 1.13 Selector rod and selector mechanism cover - remove and install with the gearbox installed | 73 |
| 2 Gearbox - remove and install | 77 |
| 2.1 Transmission - removal | 77 |
| 2.2 Gearbox - installation | 89 |



| | | |
|--|--|------------|
| 2.3 | Transmission - tightening torques | 94 |
| 3 | Assembly mountings | 95 |
| 3.1 | Assembly mountings - assembly overview | 95 |
| 4 | Gearbox - transport | 98 |
| 4.1 | Gearbox - transport | 98 |
| 5 | Gearbox oil | 99 |
| 5.1 | Gearbox oil - check and refill | 99 |
| 5.2 | Gearbox oil - drain and fill | 100 |
| 6 | Transmission - fasten to support | 102 |
| 6.1 | Transmission - fasten to the Support 3221A | 102 |
| 7 | Gearbox - disassemble and assemble | 104 |
| 7.1 | Gearbox - schematic overview | 104 |
| 7.2 | gearbox - assembly overview | 104 |
| 7.3 | Transmission housing cover and 5th gear - assembly overview | 105 |
| 7.4 | Gearbox housing Cover and 5th gear - remove and install (gearbox installed) | 107 |
| 7.5 | Clutch housing - assembly overview | 109 |
| 7.6 | Input shaft, output shaft, differential, selection mechanism and selector forks | 110 |
| 7.7 | Input shaft, output shaft, differential, selection mechanism and selector forks - remove and install | 112 |
| 8 | Gearbox and clutch housings | 122 |
| 8.1 | Transmission housing and transmission housing - assembly overview | 122 |
| 8.2 | Transmission and clutch housings - repair | 124 |
| 9 | Selector forks | 126 |
| 9.1 | Selector forks - assembly overview | 126 |
| 9.2 | Selector forks - repair | 126 |
| 35 - Gears, shafts | | 132 |
| 1 | Input shaft | 132 |
| 1.1 | Input shaft - general overview of assembly | 132 |
| 1.2 | Input shaft - remove and install | 134 |
| 1.3 | Input shaft - replace seal | 145 |
| 2 | Output shaft | 148 |
| 2.1 | Output shaft - general overview of assembly | 148 |
| 2.2 | Output shaft- remove and install | 151 |
| 39 - Final drive - differential | | 159 |
| 1 | Seals | 159 |
| 1.1 | Seals - assembly overview | 159 |
| 1.2 | Seal (left-hand side) - replace | 159 |
| 1.3 | Seal (right-hand side) - replace | 162 |
| 2 | Differential | 165 |
| 2.1 | Differential - general overview of assembly | 165 |
| 2.2 | Differential - remove and install | 167 |
| 2.3 | Differential - adjust | 174 |