



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1</b> <b>— Change history —</b>	<b>1</b>
<b>2</b> <b>Safety instructions</b>	<b>2</b>
2.1 Safety measures regarding work on the fuel supply	2
2.2 Safety measures for work in vehicles with Start-Stop system	3
2.3 Safety measures in test drives using testing and measurement devices	3
2.4 Safety measures when working on the ignition system	4
2.5 Safety measures when working on the exhaust system	4
2.6 Safety measures when working on the cooling system	5
<b>3</b> <b>Identification</b>	<b>6</b>
3.1 Engine number/engine characteristics	6
<b>4</b> <b>Repair instructions</b>	<b>8</b>
4.1 Cleaning rules	8
4.2 General instructions	8
4.3 General repair instructions	9
4.4 Foreign bodies on the engine	9
4.5 Contact corrosion	9
4.6 Connection installation and fastening	10
4.7 Radiator and capacitor installation	10
4.8 Check the vacuum system	10
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1</b> <b>Engine - remove and install</b>	<b>11</b>
1.1 Engine - removal	11
1.2 Engine - separate gearbox	24
1.3 Engine - secure to engine and gearbox support	28
1.4 Engine - installation	30
1.5 Engine - remove and install, summarized instructions	33
<b>2</b> <b>Power-drive unit supports</b>	<b>37</b>
2.1 Power unit brackets - assembly overview	37
2.2 Power unit bracket (engine side) - remove and install	40
2.3 Drive-train mounting (gearbox side) - remove and install	41
2.4 Pendulum support (torque limiter) - remove and install	43
2.5 Support the engine in assembly position	45
2.6 Drive train mountings - adjust	54
2.7 Drive train mounting adjustment - check	56
<b>13 - Crankshaft group</b>	<b>58</b>
<b>1</b> <b>Cylinder block (pulley side)</b>	<b>58</b>
1.1 Poly-V belt mechanism - assembly overview	58
1.2 Poly-V belt - remove and install	60
1.3 Poly-V belt tensioner - remove and install	61
1.4 Crankshaft pulley (vibration damper) - remove and install	62
1.5 Engine console - remove and install	66
1.6 Crankshaft seal (pulley side) - replace	71
<b>2</b> <b>Cylinder block (gearbox side)</b>	<b>75</b>
2.1 Cylinder block (gearbox side) - assembly overview	75
2.2 Flywheel - remove and install	79
2.3 Clutch Disk - removal and installation	81
2.4 Crankshaft flange (flywheel side) - replace	83
<b>3</b> <b>Crankshaft</b>	<b>96</b>
3.1 Crankshaft - dimensions	96



<b>4</b>	<b>Pistons and conrods - remove and install</b>	<b>97</b>
4.1	Pistons and conrods - assembly overview	97
4.2	Pistons - remove and install	100
4.3	Pistons, rings, and cylinders - check	101
4.4	Conrod and cap (new part) - separate	104
4.5	Conrod radial clearance - check	104
4.6	Oil spray jet and valve - remove and install	105
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>107</b>
<b>1</b>	<b>Engine cylinder head</b>	<b>107</b>
1.1	Engine cylinder head - assembly overview	107
1.2	Cylinder head cover with exhaust and inlet camshafts - assembly overview	109
1.3	Cylinder head - remove and install	112
1.4	Cylinder head - remove and install, summarized instructions	116
1.5	Cylinder head cover with exhaust and inlet camshafts - remove and install	118
1.6	Cylinder compression - check	124
<b>2</b>	<b>Toothed belt drive</b>	<b>127</b>
2.1	Console, upper and lower cover of the toothed belt - assembly overview	127
2.2	Toothed belt - assembly overview	127
2.3	Toothed belt - remove and install	129
2.4	Valve timing - check	133
2.5	Valve timing - adjust	139
2.6	Camshaft toothed belt - remove	147
<b>3</b>	<b>Camshaft mechanism</b>	<b>153</b>
3.1	Camshaft mechanism - assembly overview	153
3.2	Crankshaft - check axial clearance	155
3.3	Camshaft gasket (pulley side) - replace	156
3.4	Inlet and exhaust camshaft regulators - remove and install	163
3.5	Camshaft adjustment valve 1 N205 and Exhaust camshaft adjustment valve 1 N318 - remove and install	174
3.6	Valve stem sealant - replace	175
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>188</b>
4.1	Valve guides - check	188
4.2	Valves - check	189
4.3	Valve dimensions	189
<b>17</b>	<b>Lubrication</b>	<b>190</b>
<b>1</b>	<b>Crankcase/oil pump</b>	<b>190</b>
1.1	Crankcase/oil pump - assembly overview	190
1.2	Lower sump - remove and install	195
1.3	Upper crankcase - remove and install	197
1.4	Oil pump - remove and install	201
1.5	Engine oil	203
<b>2</b>	<b>Engine oil cooler</b>	<b>205</b>
2.1	Engine oil cooler - assembly overview	205
2.2	Engine oil cooler - remove and install	205
<b>3</b>	<b>Engine crankcase ventilation</b>	<b>207</b>
3.1	Engine crankcase ventilation - assembly overview	207
3.2	Crankcase ventilation device - remove and install	208
<b>4</b>	<b>Oil filter/Oil pressure switch F378</b>	<b>213</b>
4.1	Oil filter/Oil pressure switch F378 – assembly overview	213
4.2	Oil filter - remove and install	213
4.3	Oil pressure switch F378 – remove and install	214
4.4	Oil pressure and Oil pressure switch F378 – check	216



<b>19 - Cooling</b>	<b>219</b>
<b>1 Cooling system/coolant</b>	<b>219</b>
1.1 Hose connection diagram for cooling system	219
1.2 Cooling system - check air-tightness	221
1.3 Coolant tank flap - check safety valve	224
1.4 Cooling system - drainage and replenishment	226
<b>2 Water pump/coolant adjustment</b>	<b>235</b>
2.1 Water pump/thermostatic valves - assembly overview	235
2.2 Air intake cooling pump V188 - assembly overview	238
2.3 Coolant temperature sensor - assembly overview	239
2.4 Air intake cooling pump V188 - remove and install	240
2.5 Water pump - remove and install	242
2.6 Thermostats - remove and install	247
2.7 Water pump toothed belt - remove and install	253
2.8 Water pump sprocket - remove and install	256
2.9 Coolant temperature sensor G62 - remove and install	257
2.10 Coolant temperature sensor on the radiator outlet G83 - remove and install	259
<b>3 Cooling system pipes</b>	<b>261</b>
3.1 Coolant system line - assembly overview	261
3.2 Cooling system line - remove and install	261
<b>4 Radiator/Radiator fan</b>	<b>264</b>
4.1 Radiator - assembly overview	264
4.2 Fan cowl and radiator fan - assembly overview	266
4.3 Radiator - remove and install	267
4.4 Fan housing - remove and install	269
4.5 Radiator fan V7 - remove and install	270
4.6 Charge air cooling system radiator - remove and install	271
<b>20 - Fuel supply system</b>	<b>275</b>
<b>1 Fuel tank</b>	<b>275</b>
1.1 Fuel tank - assembly overview	275
1.2 Fuel tank - remove and install	277
1.3 Fuel tank - drain	285
<b>2 Fuel supply unit/Fuel level sensor</b>	<b>295</b>
2.1 Fuel pump (pre-supply pump) G6/Fuel gauge sensor G - assembly overview	295
2.2 Fuel pump (pre-supply pump) G6/Fuel gauge sensor G - remove and install	297
2.3 Fuel gauge sensor G - remove and install	303
2.4 Installation opening cover - remove and install	303
<b>3 Plug-in connectors</b>	<b>305</b>
3.1 Plug-in connectors - disconnect	305
<b>4 Fuel filter</b>	<b>311</b>
4.1 Fuel filter - remove and install	311
<b>5 Activated charcoal system</b>	<b>313</b>
5.1 Wiring diagram - Activated carbon filter system	313
5.2 Activated charcoal tank system - assembly overview	315
5.3 Activated charcoal tank - remove and install	317
5.4 Fuel tank ventilation - check	318
<b>6 Accelerator activation</b>	<b>327</b>
6.1 Accelerator pedal module - assembly overview	327
6.2 Accelerator pedal module GX2 - remove and install	327
<b>7 Fuel system pressurisation pump G6</b>	<b>329</b>
7.1 Fuel system pressurisation pump G6 - check	329
7.2 Fuel pump control unit J538 - remove and install	363



<b>8</b>	<b>Fuel lines</b> .....	<b>365</b>
8.1	Fuel lines - remove and install .....	365
<b>21</b>	<b>- Turbocharging/supercharging</b> .....	<b>370</b>
<b>1</b>	<b>Exhaust gas turbocharger</b> .....	<b>370</b>
1.1	Exhaust gas turbocharger - Assembly overview .....	370
1.2	Exhaust gas turbocharger - remove and install .....	374
1.3	Exhaust gas turbocharger - remove and install, summarized instructions .....	379
1.4	Load pressure control V465 - remove and install .....	380
1.5	Turbocharger nozzle - remove and install .....	381
<b>2</b>	<b>Supercharging air system</b> .....	<b>387</b>
2.1	Supercharging air system - Assembly overview .....	387
2.2	Air duct - remove and install .....	390
2.3	Supercharging air intercooler - remove and install .....	392
2.4	Load pressure sensor GX26 - remove and install .....	394
2.5	Charge air system - check air-tightness .....	395
<b>24</b>	<b>- Mixture preparation - injection</b> .....	<b>398</b>
<b>1</b>	<b>Injection system</b> .....	<b>398</b>
1.1	Injection system - assembly overview .....	398
1.2	Fuel system - relieve pressure .....	404
<b>2</b>	<b>Air cleaner</b> .....	<b>406</b>
2.1	Air filter - assembly overview .....	406
2.2	Air filter - remove and install .....	408
2.3	Front panel air filter lead - remove and install .....	410
<b>3</b>	<b>Intake manifold</b> .....	<b>412</b>
3.1	Intake manifold - assembly overview .....	412
3.2	Intake manifold - remove and install .....	414
3.3	Throttle butterfly valve control unit GX3 - remove and install .....	418
3.4	Throttle valve control unit GX3 - clean .....	419
<b>4</b>	<b>Injection valves</b> .....	<b>421</b>
4.1	Fuel rail with injection valves - assembly overview .....	421
4.2	Fuel distributor - removal and installation .....	423
4.3	Injection valves - remove and install .....	424
4.4	Injectors - remove and install, summarized instructions .....	431
4.5	Injection valves - clean .....	433
<b>5</b>	<b>Transmitters and sensors</b> .....	<b>435</b>
5.1	Intake manifold sensor GX9 - remove and install .....	435
5.2	Fuel pressure sensor G247 - remove and install .....	436
5.3	Fuel pressure sensor G247 - check .....	437
5.4	Ethanol concentration sensor G708 - remove and install .....	440
<b>6</b>	<b>High pressure pump</b> .....	<b>442</b>
6.1	High pressure pump - assembly overview .....	442
6.2	High pressure pump - remove and install .....	444
6.3	High pressure line - remove and install .....	446
<b>7</b>	<b>Lambda probe</b> .....	<b>449</b>
7.1	Lambda probe - assembly overview .....	449
7.2	Lambda probe 1 before the catalytic converter GX10/Lambda probe 1 after the catalytic converter GX7 - remove and install .....	450
<b>8</b>	<b>Engine control unit J623</b> .....	<b>453</b>
8.1	Engine control unit J623 - remove and install .....	453
<b>26</b>	<b>- Exhaust system</b> .....	<b>455</b>
<b>1</b>	<b>Silencer/exhaust pipes</b> .....	<b>455</b>



---

1.1	Silencer - assembly overview	455
1.2	Silencer/exhaust pipes - detach	456
1.3	Centre silencer with rear silencer - remove and install	458
1.4	Centre silencer - remove and install	462
1.5	Rear silencer - remove and install	464
1.6	Exhaust system - tension free alignment	465
1.7	Exhaust system - check tightness	466
1.8	Pipe clamp installation position	466
<b>2</b>	<b>Exhaust system</b>	<b>468</b>
2.1	Emission control - assembly overview	468
2.2	Catalytic converter - remove and install	471
<b>28</b>	<b>Ignition system</b>	<b>475</b>
<b>1</b>	<b>Ignition system</b>	<b>475</b>
1.1	Ignition system - assembly overview	475
1.2	Ignition coils with final power stage - assembly overview	477
1.3	Spark plugs Q - technical data	478
1.4	Ignition coil with final power stage - remove and install	478
1.5	Knock sensor 1 G61 - remove and install	481
1.6	Hall Sensor G40 - remove and install	483
1.7	Engine speed sensor G28 - remove and install	484