



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety measures when working on vehicles with a start/stop system	2
2 Identification	3
2.1 Engine number/engine data	3
3 General information	4
3.1 Rules for cleanliness when working on auxiliary heater and fuel system	4
4 Repair notes	5
4.1 Routing and attachment of lines	5
4.2 General repair instructions	5
20 - Fuel supply system	6
1 Fuel	6
1.1 Assembly overview - fuel tank	6
1.2 Removing and installing fuel tank	8
1.3 Emptying fuel tank	15
2 Fuel delivery unit, fuel gauge sender	24
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	24
2.2 Removing and installing fuel delivery unit, fuel gauge sender	26
2.3 Removing and installing fuel gauge sender G	31
2.4 Removing and installing assembly opening cover	32
3 Plug-in connectors	33
3.1 Separating plug-in connectors	33
4 Fuel filter	40
5 Activated charcoal filter system	41
5.1 Connection diagram – activated charcoal filter system	41
5.2 Assembly overview – activated charcoal filter system	46
5.3 Removing and installing activated charcoal filter	48
5.4 Checking fuel tank breather	49
6 Accelerator pedal	58
6.1 Assembly overview - accelerator module	58
6.2 Removing and installing accelerator pedal module GX2	58
7 Fuel supply	60
7.1 Checking fuel system pressurisation pump G6, EA888evo	60
7.2 Checking fuel system pressurisation pump G6	67
7.3 Removing and installing fuel pump control unit J538	81
8 Fuel lines	83
8.1 Removing and installing fuel line for auxiliary/supplementary heater	83
8.2 Removing and installing fuel lines	85