

| | |
|---|-------|
| 001 - Basic equipment | 1-29 |
| 1. Basic equipment | 1 |
| 2. Onboard supply control unit, Left tail light cluster, Left tail light bulb, Rear left turn signal bulb, Left brake light bulb, Left reversing light bulb | 2 |
| 3. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Left tail light bulb, Left tail light cluster 2, Rear left turn signal bulb, Right tail light cluster 2, Left brake light bulb, Left reversing light bulb | 3 |
| 4. Onboard supply control unit, Right tail light bulb, Right tail light cluster, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb | 4 |
| 5. Brake fluid level warning contact, Onboard supply control unit | 5 |
| 6. Onboard supply control unit, Left side light bulb, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb | 6 |
| 7. Onboard supply control unit, Front right headlight, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb | 7 |
| 8. Tank flap release, Reversing light switch, Fuel tank filler flap central locking actuator, Onboard supply control unit | 8 |
| 9. Light switch, Rotary light switch, Onboard supply control unit | 9 |
| 10. Turn signal switch, Headlight dipper and flasher switch, Onboard supply control unit, Steering column electronics control unit | 10 |
| 11. Intermittent wiper switch, Rear wiper switch, Intermittent wiper regulator, Onboard supply control unit, Steering column electronics control unit | 11 |
| 12. Luggage compartment light switch, Central locking rear lid lock unit, Onboard supply control unit, Rear lid lock unit, Rear lid central locking motor | 12 |
| 13. Rear lid release switch, Onboard supply control unit, High-level brake light bulb | 13 |
| 14. Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Onboard supply control unit, Rear window wiper motor, Rear lid lock unit, Rear lid central locking motor | 14 |
| 15. Rear interior light button, Front left reading light button, Onboard supply control unit, Front interior light, Centre interior light, Front left reading light, Front right reading light, Rear window | 15 |
| 16. Onboard supply control unit | 16 |
| 17. Onboard supply control unit | 17 |
| 18. Rear left vanity mirror contact switch, Rear right vanity mirror contact switch, Onboard supply control unit, Luggage compartment light, Rear left illuminated vanity mirror, Rear right illuminated vanity mirror | 18 |
| 19. Hazard warning light switch, Hazard warning light switch, Glove compartment light switch, Rear left reading light button, Rear right reading light button, Onboard supply control unit, Indicator lamp for hazard warning light, Glove compartment light, Rear left reading light, Rear right reading light | 19 |
| 20. Fog light relay, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left static cornering light, Right static cornering light | 20 |
| 21. Onboard supply control unit, Left number plate light, Right number plate light | 21 |
| 22. Treble horn, Onboard supply control unit | 22 |
| 23. Wiper motor control unit, Onboard supply control unit | 23 |
| 24. Fuse holder C, Cigarette lighter | 24 |
| 25. Heater and air conditioning controls, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fuse holder C, Fresh air blower | 25 |
| 26. Left daytime running light bulb, Fuse holder C | 26 |
| 27. Fuse holder C, Windscreen and rear window washer pump | 27 |
| 28. Brake light switch, Engine/motor control unit, Right daytime running light bulb, Fuse holder B, Fuse holder C | 28 |
| 29. Immobiliser reader coil, Main beam warning lamp, Alternator warning lamp, Dash panel insert, Oil pressure warning lamp, Reserve fuel warning lamp, Oil level warning lamp, Airbag warning lamp | 29 |
| 002 - Convenience system | 30-46 |
| 1. Convenience system | 30 |
| 2. Fuse holder C | 31 |
| 3. Operating unit for window regulator in driver door, Operating unit for window regulator in driver door, Driver door control unit, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side window regulator motor, Driver side mirror adjustment motor | 32 |
| 4. Driver side interior locking button for central locking system, Onboard supply control unit, Doors closed warning lamp, Central locking SAFELock function warning lamp, Button illumination bulb | 33 |
| 5. Driver door contact switch, Front left central locking actuator, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Onboard supply control unit, Driver door lock unit, Driver door central locking motor | 34 |
| 6. Rear left door contact switch, Rear left central locking actuator, Rear left central locking lock unit, Onboard supply control unit, Rear left door lock unit, Rear left door central locking motor. | 35 |

| | |
|--|-------|
| lock | |
| 7. Operating unit for window regulator in rear left door, Rear left window regulator switch, in door, Rear left door control unit, Onboard supply control unit, Button illumination bulb, Rear left window regulator motor | 36 |
| 8. Front passenger door contact switch, Front right central locking actuator, Front passenger side central locking lock unit, Onboard supply control unit, Front passenger door lock unit, Front passenger door central locking motor | 37 |
| 9. Window regulator switch in front passenger door, Window regulator switch in front passenger door, Front passenger door control unit, Onboard supply control unit, Button illumination bulb, Front passenger side window regulator motor | 38 |
| 10. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Onboard supply control unit, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor | 39 |
| 11. Rear right door contact switch, Rear right central locking actuator, Rear right central locking lock unit, Onboard supply control unit, Rear right door lock unit, Rear right door central locking motor, lock | 40 |
| 12. Operating unit for window regulator in rear right door, Rear right window regulator switch, in door, Onboard supply control unit, Button illumination bulb, Rear right window regulator motor | 41 |
| 13. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Onboard supply control unit, Mirror adjustment switch illumination bulb | 42 |
| 14. Interior mirror, Rain and light sensor, Onboard supply control unit, Automatic anti-dazzle interior mirror | 43 |
| 15. Luggage compartment light switch, Central locking rear lid lock unit, Onboard supply control unit, Steering column electronics control unit, Rear lid central locking motor | 44 |
| 16. Onboard supply control unit | 45 |
| 17. Luggage compartment light switch, Rear lid contact switch, Central locking rear lid lock unit, Rear lid lock unit, Rear lid central locking motor | 46 |
| 003 - Fuse assignment | 47-72 |
| 1. Fuse assignment | 47 |
| 2. Battery, Starter, Alternator with voltage regulator, Fuse holder A, Air conditioner compressor | 48 |
| 3. ABS control unit, Automatic gearbox control unit, Battery monitor control unit, Fuse holder B | 49 |
| 4. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B | 50 |
| 5. Main relay, Low heat output relay, Fuse holder B | 51 |
| 6. Automatic glow period control unit, Fuse holder B, Charge air cooling pump | 52 |
| 7. Fuse holder B | 53 |
| 8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Fuse holder B | 54 |
| 9. Radiator fan 2nd speed relay, Fuse holder B, Radiator fan, Vacuum pump for brakes | 55 |
| 10. Fuel pump relay, Radiator fan relay, Onboard supply control unit, Fuse holder B | 56 |
| 11. Onboard supply control unit, Fuse holder B | 57 |
| 12. Onboard supply control unit, Fuse holder C | 58 |
| 13. Onboard supply control unit, Fuse holder C | 59 |
| 14. Ignition/starter switch, Headlight dipper and flasher switch, Intermittent wiper switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C | 60 |
| 15. Heater and air conditioning controls, Anti-theft alarm system horn, Alarm horn relay, Fuse holder C | 61 |
| 16. Fuse holder C, Diagnostic connection | 62 |
| 17. Fuse holder C | 63 |
| 18. Rotary light switch, Fuse holder C | 64 |
| 19. Fuse holder C | 65 |
| 20. Airbag control unit, Terminal 15 voltage supply relay, Fuse holder C | 66 |
| 21. Terminal 75x voltage supply relay, Fuse holder C | 67 |
| 22. Fuse holder C | 68 |
| 23. Fuse holder C, USB charging socket 1 | 69 |
| 24. Front left headlight, Front right headlight, Fuse holder C | 70 |
| 25. Fuse holder C | 71 |
| 26. Left tail light cluster, Fuse holder C | 72 |
| 004 - Earthing concept | 73-84 |
| 1. Earthing concept | 73 |
| 2. Fuse holder B, Earth point, on gearbox, Earth point, lower part of right A-pillar | 74 |
| 3. Earth point, on lower left of engine block, Earth point, on right A-pillar | 75 |
| 4. Onboard supply control unit | 76 |
| 5. Onboard supply control unit, Fuse holder C, Front interior light | 77 |
| 6. Steering column electronics control unit. Engine/motor control unit. Diagnostic connection | 78 |

| | |
|--|---------|
| 7. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage | 79 |
| 8. Selector lever, Automatic gearbox control unit, Gearbox | 80 |
| 9. Rotary light switch, Hazard warning light switch, Heater and air conditioning controls | 81 |
| 10. Left tail light cluster | 82 |
| 11. ABS control unit | 83 |
| 12. Right tail light cluster | 84 |
| 005 - Data bus network | 85-93 |
| 1. Data bus network | 85 |
| 2. Airbag control unit, Diagnostic connection | 86 |
| 3. Fuse holder C, Diagnostic connection | 87 |
| 4. ABS control unit, Automatic gearbox control unit, Parking aid control unit, Power steering control unit, Onboard supply control unit, Engine/motor control unit, Control unit for structure-borne sound | 88 |
| 5. Onboard supply control unit | 89 |
| 6. Onboard supply control unit | 90 |
| 7. Headlight range control unit, Onboard supply control unit, Front left headlight, Front right headlight | 91 |
| 8. Heater and air conditioning controls, Onboard supply control unit, Interface for entry and start system, Amplifier | 92 |
| 9. Control unit in dash panel insert, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Dash panel insert, Malfunction warning lamp, Electronic power control fault lamp | 93 |
| 006 - Air conditioning system , (9AB) | 94-98 |
| 1. Air conditioning system , (9AB) | 94 |
| 2. Heater and air conditioning controls, Air conditioning system control unit, Fuse holder B, Fuse holder C | 95 |
| 3. Heater and air conditioning controls, Air conditioning system control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower | 96 |
| 4. Heater and air conditioning controls, Evaporator temperature sensor, Air conditioning system control unit, Onboard supply control unit, Magnetic clutch for supercharger, Air conditioner compressor | 97 |
| 5. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioning system control unit, Air recirculation flap | 98 |
| 007 - Climatronic , (KC0) | 99-105 |
| 1. Climatronic , (KC0) | 99 |
| 2. Heater and air conditioning controls, Climatronic control unit, Fuse holder B, Fuse holder C | 100 |
| 3. Heater and air conditioning controls, Climatronic control unit, Onboard supply control unit, Air conditioner compressor | 101 |
| 4. Heater and air conditioning controls, Climatronic control unit, Air distribution flap, Air recirculation flap | 102 |
| 5. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Fresh air blower control unit, Climatronic control unit, Front left temperature flap | 103 |
| 6. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Climatronic control unit | 104 |
| 7. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Climatronic control unit | 105 |
| 008 - 6-speed automatic gearbox , CNXC,CWLA,CWSA,DHSB,DHSD,DSJA,(0ER),(0ID) | 106-112 |
| 1. 6-speed automatic gearbox , CNXC,CWLA,CWSA,DHSB,DHSD,DSJA,(0ER),(0ID) | 106 |
| 2. Multifunction switch, Automatic gearbox control unit, Gearbox | 107 |
| 3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Solenoid valve 1, Solenoid valve 2 | 108 |
| 4. Selector lever, Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 3, Automatic gearbox pressure regulating valve | 109 |
| 4, Auxiliary hydraulic pump 1 for gearbox oil | |
| 5. Selector lever, Selector lever locked in position P switch, Automatic gearbox control unit, Selector lever lock solenoid, Ignition key withdrawal lock solenoid, Fuse holder C, Selector lever position display | 110 |
| 6. Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit | 111 |
| 7. Onboard supply control unit, Fuse holder B | 112 |
| 009 - Airbag systems , (4UF),(4X1) | 113-120 |
| 1. Airbag systems , (4UF),(4X1) | 113 |
| 2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse holder C | 114 |
| 3. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Crash sensor for front airbag, Airbag control unit | 115 |
| 4. Key-operated switch to deactivate airbag on front passenger side. Side airbag crash sensor on | 116 |

| | |
|--|---------|
| driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side | |
| 5. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side | 117 |
| 6. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Diagnostic connection | 118 |
| 7. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side | 119 |
| 8. Control unit in dash panel insert, Onboard supply control unit, Dash panel insert, Seat belt warning system warning lamp, Airbag warning lamp | 120 |
| 010 - Electromechanical steering , (1N1) | 121-122 |
| 1. Electromechanical steering , (1N1) | 121 |
| 2. Steering moment sender, Rotor position sender for active steering motor, Control unit in dash panel insert, Power steering control unit, Onboard supply control unit, Dash panel insert, Electromechanical power steering warning lamp, Fuse holder A, Electromechanical power steering motor | 122 |
| 011 - Multifunction steering wheel , (1XX),(2FU),(2ZA),(2ZH) | 123-125 |
| 1. Multifunction steering wheel , (1XX),(2FU),(2ZA),(2ZH) | 123 |
| 2. Cruise control system switch, Cruise control system (CCS) SET button, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Multifunction steering wheel control unit | 124 |
| 3. Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side, Fuse holder C | 125 |
| 012 - Parking aid (PDC) , (7X1),(7X2) | 126-134 |
| 1. Parking aid (PDC) , (7X1),(7X2) | 126 |
| 2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Fuse holder C | 127 |
| 3. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit | 128 |
| 4. Parking aid control unit | 129 |
| 5. Switch module 1 in centre console, Parking aid button, Parking aid control unit, Onboard supply control unit, Control unit 1 for information electronics, Parking aid warning lamp, Button illumination bulb | 130 |
| 6. Front right parking aid sender, Front centre right parking aid sender, Parking aid control unit | 131 |
| 7. Parking aid control unit, Earth connection (parking aid), in front bumper wiring harness | 132 |
| 8. Front centre left parking aid sender, Front left parking aid sender | 133 |
| 9. Connection (parking aid), in front bumper wiring harness | 134 |
| 013 - Reversing camera (Rear Assist) , (KA1) | 135-137 |
| 1. Reversing camera (Rear Assist) , (KA1) | 135 |
| 2. Switch module 1 in centre console, Button illumination bulb, Reversing camera, Fuse holder C | 136 |
| 3. Rear lid release switch, Control unit 1 for information electronics, Reversing camera | 137 |
| 014 - 1.0l engine , CSEB,(M7B),(TJ9) | 138-156 |
| 1. 1.0l engine , CSEB,(M7B),(TJ9) | 138 |
| 2. Battery, Starter, Alternator with voltage regulator | 139 |
| 3. Ignition/starter switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C | 140 |
| 4. Starter relay 1, Starter relay 2, Fuse holder B | 141 |
| 5. Main relay, Low heat output relay, Fuse holder B | 142 |
| 6. Automatic glow period control unit, Fuse holder B, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3 | 143 |
| 7. Fuel pump relay, Fuse holder B | 144 |
| 8. Fuse holder B | 145 |
| 9. Radiator fan relay, Radiator fan 2nd speed relay, Onboard supply control unit, Fuse holder B, Radiator fan | 146 |
| 10. Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit | 147 |
| 11. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold), Cold start device warning lamp | 148 |
| 12. Engine/motor control unit | 149 |
| 13. Engine/motor control unit, Radiator fan | 150 |
| 14. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit | 151 |
| 15. Brake light switch. Engine/motor control unit | 152 |

| | |
|--|---------|
| 16. Engine speed sender, Knock sensor 1, Clutch position sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1 | 153 |
| 17. Oil pressure switch, Intake manifold sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit | 154 |
| 18. Throttle valve module, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3 | 155 |
| 19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3 | 156 |
| 015 - 1.0l engine , DHSB,(M5B),(T26) | 157-175 |
| 1. 1.0l engine , DHSB,(M5B),(T26) | 157 |
| 2. Battery, Starter, Alternator with voltage regulator | 158 |
| 3. Ignition/starter switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C | 159 |
| 4. Starter relay 1, Starter relay 2, Fuse holder B | 160 |
| 5. Main relay, Fuse holder B | 161 |
| 6. Fuse holder B | 162 |
| 7. Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit | 163 |
| 8. Onboard supply control unit | 164 |
| 9. Brake servo pressure sensor, Engine/motor control unit, Vacuum pump for brakes | 165 |
| 10. Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan | 166 |
| 11. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit | 167 |
| 12. Brake light switch, Fuel pump control unit, Engine/motor control unit | 168 |
| 13. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Fuel pressure sender, Engine/motor control unit | 169 |
| 14. Intake manifold sender, Hall sender, Intake air temperature sender, Knock sensor 1, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit | 170 |
| 15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Charge pressure positioner | 171 |
| 16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3 | 172 |
| 17. Oil pressure switch for reduced oil pressure, Throttle valve module, Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Fuel pressure regulating valve | 173 |
| 18. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Charge air cooling pump | 174 |
| 19. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold) | 175 |
| 016 - 1.6l engine , CWSA,(DP7),(T4I) | 176-193 |
| 1. 1.6l engine , CWSA,(DP7),(T4I) | 176 |
| 2. Battery, Starter, Alternator with voltage regulator | 177 |
| 3. Ignition/starter switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C | 178 |
| 4. Starter relay 1, Starter relay 2, Fuse holder B | 179 |
| 5. Main relay, Fuse holder B | 180 |
| 6. Fuel pump relay, Fuse holder B | 181 |
| 7. Fuse holder B | 182 |
| 8. Radiator fan relay, Radiator fan 2nd speed relay, Onboard supply control unit, Fuse holder B, Radiator fan | 183 |
| 9. Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit | 184 |
| 10. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold) | 185 |
| 11. Engine/motor control unit | 186 |
| 12. Engine/motor control unit, Radiator fan | 187 |
| 13. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit | 188 |
| 14. Brake light switch, Engine/motor control unit | 189 |
| 15. Engine speed sender, Knock sensor 1, Clutch position sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1 | 190 |
| 16. Oil pressure switch, Intake manifold sender, Hall sender, Intake air temperature sender, Coolant temperature sender. Intake manifold pressure sender. Engine/motor control unit | 191 |

| | |
|--|---------|
| 17. Throttle valve module, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4 | 192 |
| 18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4 | 193 |
| 017 - 1.6l engine , CNXC,(M5C),(TG5) | 194-212 |
| 1. 1.6l engine , CNXC,(M5C),(TG5) | 194 |
| 2. Battery, Starter, Alternator with voltage regulator | 195 |
| 3. Ignition/starter switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C | 196 |
| 4. Starter relay 1, Starter relay 2, Fuse holder B | 197 |
| 5. Main relay, Low heat output relay, Fuse holder B | 198 |
| 6. Automatic glow period control unit, Fuse holder B, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3, Fuel preheating element 4 | 199 |
| 7. Fuel pump relay, Fuse holder B | 200 |
| 8. Fuse holder B | 201 |
| 9. Radiator fan relay, Radiator fan 2nd speed relay, Onboard supply control unit, Fuse holder B, Radiator fan | 202 |
| 10. Cruise control system switch, Cruise control system (CCS) SET button, Onboard supply control unit, Steering column electronics control unit | 203 |
| 11. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold), Cold start device warning lamp | 204 |
| 12. Engine/motor control unit | 205 |
| 13. Engine/motor control unit, Radiator fan | 206 |
| 14. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit | 207 |
| 15. Brake light switch, Engine/motor control unit | 208 |
| 16. Engine speed sender, Knock sensor 1, Clutch position sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1 | 209 |
| 17. Oil pressure switch, Intake manifold sender, Hall sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Engine/motor control unit | 210 |
| 18. Throttle valve module, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4 | 211 |
| 19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4 | 212 |
| 018 - Anti-theft alarm system , (9V6),(9V7) | 213-215 |
| 1. Anti-theft alarm system , (9V6),(9V7) | 213 |
| 2. Anti-theft alarm sensor, Anti-theft alarm system horn, Onboard supply control unit, Alarm horn relay, Fuse holder C | 214 |
| 3. Bonnet contact switch, Control unit in dash panel insert, Onboard supply control unit, Engine/motor control unit, Dash panel insert, Doors closed warning lamp | 215 |
| 019 - Radio , (I7Q),(I7R) | 216-220 |
| 1. Radio , (I7Q),(I7R) | 216 |
| 2. Control unit 1 for information electronics, Fuse holder C | 217 |
| 3. Onboard supply control unit, Control unit 1 for information electronics, Front left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker | 218 |
| 4. Control unit 1 for information electronics, Front right loudspeaker, Roof aerial, Front right treble loudspeaker, Front right bass loudspeaker, GPS aerial, Digital radio aerial | 219 |
| 5. Control unit 1 for information electronics, Reversing camera, USB charging socket 1, USB charging socket 2 | 220 |
| 020 - Radio , (I8F) | 221-227 |
| 1. Radio , (I8F) | 221 |
| 2. Control unit 1 for information electronics, Fuse holder C | 222 |
| 3. Onboard supply control unit, Control unit 1 for information electronics, Front left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker | 223 |
| 4. Control unit 1 for information electronics, Front right loudspeaker, Roof aerial, Front right treble loudspeaker, Front right bass loudspeaker, GPS aerial, Digital radio aerial | 224 |
| 5. Control unit 1 for information electronics, Telephone microphone, Reversing camera, USB charging socket 1. USB charging socket 2 | 225 |

| | |
|---|---------|
| 6. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics | 226 |
| 7. Control unit 1 for information electronics, Dash panel insert, Rear window aerial 1, USB connection 1, Rear window | 227 |
| 022 - Entry and start authorisation , (4I3) | 228-233 |
| 1. Entry and start authorisation , (4I3) | 228 |
| 2. Interface for entry and start system, Fuse holder C | 229 |
| 3. Interface for entry and start system | 230 |
| 4. Onboard supply control unit, Interface for entry and start system | 231 |
| 5. Starter button, Interface for entry and start system, Button illumination bulb, Rear bumper aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system | 232 |
| 6. Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation | 233 |
| 023 - Coming Home , (9I4),(9I5),(AW5) | 234-242 |
| 1. Coming Home , (9I4),(9I5),(AW5) | 234 |
| 2. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Left tail light bulb, Left tail light cluster 2, Right tail light cluster 2, Left brake light bulb | 235 |
| 3. Onboard supply control unit, Right tail light bulb, Right tail light cluster, Right brake light bulb | 236 |
| 4. Onboard supply control unit, Left side light bulb, Right side light bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb | 237 |
| 5. Onboard supply control unit | 238 |
| 6. Rotary light switch, Light switch, Onboard supply control unit | 239 |
| 7. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Left daytime running light bulb, Right daytime running light bulb, Left static cornering light, Right static cornering light | 240 |
| 8. Turn signal switch, Headlight dipper and flasher switch, Onboard supply control unit, Steering column electronics control unit | 241 |
| 9. Rain and light sensor, Onboard supply control unit, Fuse holder C | 242 |
| 024 - Anti-lock brake system (ABS) , (1AC),(1AI) | 243-247 |
| 1. Anti-lock brake system (ABS) , (1AC),(1AI) | 243 |
| 2. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve | 244 |
| 3. ABS control unit, Onboard supply control unit, Steering column electronics control unit, Vehicle stabilization program switch valve 1, Vehicle stabilization program switch valve 2, Vehicle stabilization program high-pressure valve 2 | 245 |
| 4. Yaw rate sender, Vacuum sender, ABS control unit, Control unit in dash panel insert, Engine/motor control unit, Dash panel insert, Brake fluid level warning lamp, ABS warning lamp | 246 |
| 5. Lateral acceleration sender, Brake pressure sender 1, Longitudinal acceleration sender, ABS control unit, Fuse holder B, ABS hydraulic pump | 247 |
| 025 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (1AS),(1AT) | 248-252 |
| 1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (1AS),(1AT) | 248 |
| 2. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Front right ABS inlet valve, Front right ABS outlet valve, Front left ABS inlet valve, Front left ABS outlet valve | 249 |
| 3. ABS control unit, Onboard supply control unit, Steering column electronics control unit, Vehicle stabilization program switch valve 1, Vehicle stabilization program switch valve 2, Vehicle stabilization program high-pressure valve 2 | 250 |
| 4. Yaw rate sender, Vacuum sender, ABS control unit, Onboard supply control unit, Rear right ABS inlet valve, Rear left ABS inlet valve, Rear right ABS outlet valve, Rear left ABS outlet valve, Fuse holder B | 251 |
| 5. Lateral acceleration sender, Brake pressure sender 1, Longitudinal acceleration sender, ABS control unit, Control unit in dash panel insert, Engine/motor control unit, Dash panel insert, Brake system warning lamp, ABS hydraulic pump | 252 |
| 026 - Sound system , (9VG) | 253-255 |
| 1. Sound system , (9VG) | 253 |
| 2. Control unit 1 for information electronics, Amplifier, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer, Dual subwoofer loudspeaker 1, Dual subwoofer loudspeaker 2, Fuse holder C | 254 |
| 3. Onboard supply control unit, Front left loudspeaker, Front right loudspeaker, Rear left loudspeaker, Rear right loudspeaker, Amplifier, Rear left bass loudspeaker, Rear right bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker | 255 |

| | |
|---|---------|
| 027 - 1.4l engine , CWLA,DSJA,(DG6),(TL8) | 256-274 |
| 1. 1.4l engine , CWLA,DSJA,(DG6),(TL8) | 256 |
| 2. Battery, Starter, Alternator with voltage regulator | 257 |
| 3. Ignition/starter switch, Airbag coil connector and return ring with slip ring, Steering column electronics control unit, Fuse holder C | 258 |
| 4. Starter relay 1, Starter relay 2, Fuse holder B | 259 |
| 5. Main relay, Fuse holder B | 260 |
| 6. Fuse holder B | 261 |
| 7. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit, Driving mode selection warning lamp, Button illumination bulb | 262 |
| 8. Onboard supply control unit | 263 |
| 9. Engine/motor control unit, Vacuum pump for brakes | 264 |
| 10. Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan | 265 |
| 11. Accelerator pedal module, Lambda probe 1 after catalytic converter, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Engine/motor control unit | 266 |
| 12. Brake light switch, Oil pressure switch, Engine/motor control unit | 267 |
| 13. Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Fuel pressure sender, Fuel pump control unit, Engine/motor control unit | 268 |
| 14. Intake manifold sender, Hall sender, Knock sensor 1, Intake manifold pressure sender, Intake air temperature sender 2, Hall sender 3, Engine/motor control unit | 269 |
| 15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure positioner | 270 |
| 16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4 | 271 |
| 17. Oil pressure switch for reduced oil pressure, Throttle valve module, Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit, Fuel pressure regulating valve | 272 |
| 18. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump | 273 |
| 19. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold) | 274 |
| 028 - LED headlights , (8IT) | 275-277 |
| 1. LED headlights , (8IT) | 275 |
| 2. Rear left vehicle level sender, Headlight range control unit, Onboard supply control unit, Fuse holder C | 276 |
| 3. Output module 1 for right LED headlight, Output module 1 for left LED headlight, Front left headlight, Front right headlight, Front left turn signal bulb, Front right turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Left headlight range control motor, Right headlight range control motor | 277 |
| 029 - Tail light clusters with LEDs , (8SK) | 278-279 |
| 1. Tail light clusters with LEDs , (8SK) | 278 |
| 2. Onboard supply control unit, Right tail light bulb, Left tail light cluster, Left tail light bulb, Right tail light cluster, Rear left turn signal bulb, Rear right turn signal bulb, Left brake light bulb, Right brake light bulb, Left reversing light bulb, Right reversing light bulb | 279 |
| 030 - Actuator for structure-borne sound , CWLA,DSJA | 280-281 |
| 1. Actuator for structure-borne sound , CWLA,DSJA | 280 |
| 2. Onboard supply control unit, Control unit for structure-borne sound, Actuator for structure-borne sound, Fuse holder C | 281 |
| 031 - Radio , (8UK) | 282-288 |
| 1. Radio , (8UK) | 282 |
| 2. Control unit 1 for information electronics, Fuse holder C | 283 |
| 3. Rear lid release switch, Control unit 1 for information electronics, Front left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker | 284 |
| 4. Control unit 1 for information electronics, Front right loudspeaker, Roof aerial, Front right treble loudspeaker, Front right bass loudspeaker, Digital radio aerial | 285 |
| 5. Onboard supply control unit, Control unit 1 for information electronics | 286 |
| 6. Parking aid control unit, Control unit 1 for information electronics, Telephone microphone, USB charging socket 2 | 287 |
| 7. Control unit 1 for information electronics, Dash panel insert, USB connection 1 | 288 |
| 032 - 1.0l engine , DH5B,(M5B),(T26),(7GX) | 289-308 |
| 1. 1.0l engine , DH5B,(M5B),(T26),(7GX) | 289 |
| 2. Steering column electronics control unit, Fuse holder C | 290 |
| 3. Starter relay 1. Starter relay 2. Fuse holder B | 291 |

| | |
|--|---------|
| 4. Main relay, Fuse holder B | 292 |
| 5. Radiator outlet coolant temperature sender, Onboard supply control unit, Engine/motor control unit | 293 |
| 6. Engine/motor control unit, Interface for entry and start system | 294 |
| 7. Accelerator pedal module, Engine/motor control unit, Vacuum pump for brakes | 295 |
| 8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit | 296 |
| 9. Engine/motor control unit, Gearbox, Radiator fan | 297 |
| 10. Brake light switch, Engine/motor control unit | 298 |
| 11. Knock sensor 1, Engine/motor control unit | 299 |
| 12. Charge pressure sender, Engine/motor control unit, Charge pressure positioner | 300 |
| 13. Throttle valve module, Intake manifold sender, Engine/motor control unit | 301 |
| 14. Engine speed sender, Coolant temperature sender, Engine/motor control unit, Charge air cooling pump | 302 |
| 15. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3 | 303 |
| 16. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1 | 304 |
| 17. Hall sender, Hall sender 3, Engine/motor control unit, Fuel pressure regulating valve | 305 |
| 18. Oil pressure switch for reduced oil pressure, Fuel pressure sender, Engine/motor control unit | 306 |
| 19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Spark plug 3 | 307 |
| 20. Fuel delivery unit, Fuel pump control unit, Dash panel insert | 308 |
| 033 - 1.4l engine , CWLA,(DG6),(TL8),(7GX) | 309-329 |
| 1. 1.4l engine , CWLA,(DG6),(TL8),(7GX) | 309 |
| 2. Battery, Starter, Alternator with voltage regulator | 310 |
| 3. Steering column electronics control unit, Fuse holder C | 311 |
| 4. Starter relay 1, Starter relay 2, Fuse holder B | 312 |
| 5. Main relay, Fuse holder B | 313 |
| 6. Fuse holder B | 314 |
| 7. Switch module 1 in centre console, Start/stop operation button, Driving mode selection button, Onboard supply control unit, Driving mode selection warning lamp, Button illumination bulb | 315 |
| 8. Onboard supply control unit | 316 |
| 9. Fuel gauge sender, Fuel delivery unit, Rev counter, Fuel system pressurisation pump, Speedometer, Dash panel insert, Cruise control system warning lamp, Coolant temperature warning lamp (too cold) | 317 |
| 10. Engine/motor control unit, Vacuum pump for brakes | 318 |
| 11. Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan | 319 |
| 12. Accelerator pedal module, Lambda probe 1 after catalytic converter, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Engine/motor control unit | 320 |
| 13. Brake light switch, Oil pressure switch, Fuel pressure sender, Engine/motor control unit | 321 |
| 14. Charge pressure sender, Engine speed sender, Fuel pump control unit, Engine/motor control unit | 322 |
| 15. Intake manifold sender, Hall sender, Hall sender 3, Engine/motor control unit | 323 |
| 16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure positioner | 324 |
| 17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4 | 325 |
| 18. Throttle valve module, Knock sensor 1, Coolant temperature sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Engine/motor control unit | 326 |
| 19. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control | 327 |
| 20. Engine/motor control unit | 328 |
| 21. Oil pressure switch for reduced oil pressure, Engine/motor control unit, Fuel pressure regulating valve, Charge air cooling pump | 329 |
| 034 - 1.0l engine , DHSD,(DS8),(T26),(7GX) | 330-350 |
| 1. 1.0l engine , DHSD,(DS8),(T26),(7GX) | 330 |
| 2. Starter, Steering column electronics control unit, Fuse holder C | 331 |
| 3. Starter relay 1, Starter relay 2, Fuse holder B | 332 |
| 4. Main relay, Fuse holder B | 333 |
| 5. Onboard supply control unit, Engine/motor control unit | 334 |
| 6. Engine/motor control unit, Interface for entry and start system | 335 |
| 7. Accelerator pedal module, Engine/motor control unit, Vacuum pump for brakes | 336 |
| 8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit | 337 |
| 9. Engine/motor control unit, Radiator fan | 338 |
| 10. Brake light switch. Radiator outlet coolant temperature sender. Engine/motor control unit | 339 |

| | |
|---|---------|
| 11. Engine/motor control unit | 340 |
| 12. Charge pressure sender, Engine/motor control unit, Charge pressure positioner | 341 |
| 13. Throttle valve module, Intake manifold sender, Engine/motor control unit | 342 |
| 14. Engine speed sender, Coolant temperature sender, Engine/motor control unit, Charge air cooling pump | 343 |
| 15. Gearbox neutral position sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3 | 344 |
| 16. Ethanol concentration sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1 | 345 |
| 17. Hall sender, Hall sender 3, Engine/motor control unit, Fuel pressure regulating valve | 346 |
| 18. Oil pressure switch for reduced oil pressure, Knock sensor 1, Fuel pressure sender, Engine/motor control unit | 347 |
| 19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Spark plug 3 | 348 |
| 20. Clutch position sender, Engine/motor control unit, Gearbox | 349 |
| 21. Fuel delivery unit, Fuel pump control unit, Dash panel insert | 350 |
| 035 - 1.0l engine , CSEB,(M7B),(TJ9),(7GX) | 351-371 |
| 1. 1.0l engine , CSEB,(M7B),(TJ9),(7GX) | 351 |
| 2. Starter, Steering column electronics control unit, Fuse holder C | 352 |
| 3. Starter relay 1, Starter relay 2, Fuse holder B | 353 |
| 4. Main relay, Fuse holder B | 354 |
| 5. Radiator fan relay, Radiator fan 2nd speed relay, Fuse holder B, Radiator fan | 355 |
| 6. Fuel pump relay, Automatic glow period control unit, Low heat output relay, Fuse holder B | 356 |
| 7. Fuel delivery unit, Dash panel insert | 357 |
| 8. Onboard supply control unit, Engine/motor control unit | 358 |
| 9. Engine/motor control unit | 359 |
| 10. Accelerator pedal module, Engine/motor control unit | 360 |
| 11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit | 361 |
| 12. Engine/motor control unit, Radiator fan | 362 |
| 13. Brake light switch, Engine/motor control unit | 363 |
| 14. Engine/motor control unit | 364 |
| 15. Engine/motor control unit, Fuel pre-heating heater element, Fuel preheating element 2, Fuel preheating element 3 | 365 |
| 16. Throttle valve module, Intake manifold sender, Engine/motor control unit | 366 |
| 17. Engine speed sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3 | 367 |
| 18. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Activated charcoal filter solenoid valve 2, Camshaft control valve 1 | 368 |
| 19. Oil pressure switch, Hall sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit | 369 |
| 20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Spark plug 3 | 370 |
| 21. Clutch position sender, Engine/motor control unit | 371 |
| 801 - Installation locations: Earth point - 3 | 372-383 |
| 1. Earth point | 372-383 |
| 1.1 Earth points in the front vehicle area | 372-379 |
| 1.1.1 Front left | 372-373 |
| 1.1.2 Front on right side | 374 |
| 1.1.3 1.0L, DHSB engine | 375 |
| 1.1.4 1.0L, CSEB engine | 376 |
| 1.1.5 1.6L, CNXC, CWSA engine | 377 |
| 1.1.6 Manual gearbox | 378 |
| 1.1.7 Automatic gearbox | 379 |
| 1.2 Earth points in the vehicle mid section | 380 |
| 1.2.1 Vehicle interior front left side | 380 |
| 1.2.2 Vehicle interior front right side | 381 |
| 1.3 Earth points in the rear vehicle area | 381-383 |
| 1.3.1 Luggage compartment to the left | 382 |
| 1.3.2 Luggage compartment to the right, boot lid | 383 |
| 802 - -Fitting locations: fuses - 3 | 384-398 |
| 1. Fuses | 384-398 |
| 1.1 Fuse holder A -SA-, as of August 2017 | 384-388 |
| 1.1.1 Fitting location Fuse holder A -SA-, as of August 2017 | 384 |
| 1.1.2 Fuse placement Fuse holder A -SA-, as of August 2017 | 385-388 |
| 1.2 Fuse holder B -SB-. as of August 2017 | 389-391 |

| | |
|--|---------|
| 1.2.1 Fitting location Fuse holder B -SB-, as of August 2017 | 389 |
| 1.2.2 Fuse placement Fuse holder B -SB-, as of August 2017 | 390-391 |
| 1.3 Fuse holder C -SC-, as of August 2017 | 392-398 |
| 1.3.1 Fitting location Fuse holder C -SC-, as of August 2017 | 392-393 |
| 1.3.2 Fuse placement Fuse holder C -SC-, as of August 2017 | 394-398 |
| 803 - -Fitting locations: relays - 3 | 399-401 |
| 1. Relays | 399-401 |
| 1.1 Relays in Fuse holder B -SB-, as of August 2017 | 399-400 |
| 1.1.1 Relays in Fuse holder B -SB-, as of August 2017 | 400 |
| 1.2 Relays in Fuse holder C -SC-, as of August 2017 | 401 |
| 1.2.1 Relays in Fuse holder C -SC-, as of August 2017 | 401 |
| 804 - -Fitting locations: front of vehicle - 3 | 402-424 |
| 1. Fitting locations: front of vehicle | 402-424 |
| 1.1 Front, front view | 407-408 |
| 1.2 Front, left view | 409 |
| 1.3 Front, right view | 410 |
| 1.4 1.0 I Engine, CSEB | 410-412 |
| 1.4.1 1.0 I Engine, CSEB, front view | 411 |
| 1.4.2 1.0 I Engine, CSEB, top view | 412 |
| 1.4.3 1.0 I Engine, CSEB, rear view | 413 |
| 1.5 1.0 I Engine, DHSB | 413-415 |
| 1.5.1 1.0 I Engine, DHSB, front view | 414 |
| 1.5.2 1.0 I Engine, DHSB, top view | 415 |
| 1.5.3 1.0 I Engine, DHSB, rear view | 416 |
| 1.6 1.4 I Engine, CWLA | 416-418 |
| 1.6.1 1.4 I Engine, CWLA, front view | 417 |
| 1.6.2 1.4 I Engine, CWLA, top view | 418 |
| 1.6.3 1.4 I Engine, CWLA, rear view | 419 |
| 1.7 1.6 I Engine, CWSA/CNXC | 419-422 |
| 1.7.1 1.6 I Engine, CWSA/CNXC, front view | 420 |
| 1.7.2 1.6 I Engine, CWSA/CNXC, top view | 421 |
| 1.7.3 1.6 I Engine, CWSA/CNXC, rear view | 422 |
| 1.8 Automatic Transmission, 09G | 423 |
| 1.9 Manual Transmission, 0AF, 0DF | 424 |
| 805 - -Fitting locations: central part of the vehicle - 3 | 425-452 |
| 1. Fitting locations: central part of the vehicle | 425-452 |
| 1.1 Vehicle interior in the front | 428-436 |
| 1.1.1 Left front vehicle interior | 429 |
| 1.1.2 Left foot area | 430 |
| 1.1.3 Right front vehicle interior | 431 |
| 1.1.4 Dash panel insert | 432 |
| 1.1.5 Steering wheel | 433 |
| 1.1.6 Steering column | 434 |
| 1.1.7 Front center console | 435 |
| 1.1.8 Left driver seat | 436 |
| 1.1.9 Passenger seat | 437 |
| 1.2 Vehicle interior at the rear | 437-438 |
| 1.2.1 Rear interior of the vehicle, shown from the left | 438 |
| 1.2.2 Rear interior of the vehicle, shown from the right | 439 |
| 1.3 Ceiling | 439-440 |
| 1.3.1 Ceiling, part 1 | 440 |
| 1.3.2 Ceiling, part 2 | 441 |
| 1.4 Doors | 441-444 |
| 1.4.1 Driver side door | 442 |
| 1.4.2 Passenger side door | 443 |
| 1.4.3 Left rear door | 444 |
| 1.4.4 Right rear door | 445 |
| 1.5 Heating and air conditioning unit | 445-450 |
| 1.5.1 Air conditioner, 9AB, part 1 | 446-447 |
| 1.5.2 Air conditioner, 9AB, part 2 | 448 |
| 1.5.3 Climatronic, KC0, part 1 | 449 |
| 1.5.4 Climatronic, KC0, part 2 | 450 |
| 1.6 Connector allocation | 451-452 |
| 1.6.1 Onboard supply control unit -J519- | 451-452 |
| 806 - -Fitting locations: rear of the vehicle - 3 | 453-457 |
| 1. Fitting locations: rear of the vehicle | 453-457 |

| | |
|---|---------|
| 1.1 Rear lid | 453-454 |
| 1.2 Rear bumper | 455 |
| 1.3 Rear, shown from the left | 456 |
| 1.4 Rear, shown from the right | 457 |
| 807 - -Fitting locations: bottom of the vehicle - 3 | 458-460 |
| 1. Control units on the bottom of the vehicle | 458-460 |
| 1.1 Bottom, 1 | 458-459 |
| 1.2 Bottom, 2 | 460 |
| 830 - -Views of the connectors: A to D prefix parts - 3 | 461-462 |
| 1. Views of the connectors: A to D prefix parts | 461-462 |
| 1.1 Starter -B- | 461 |
| 1.2 Alternator with voltage regulator -CX1- | 461 |
| 1.3 Immobilizer reading coil -D2- | 461-462 |
| 831 - Views of the connectors: E prefix parts - 3 | 463-475 |
| 1. Views of the connectors: E prefix parts | 463-475 |
| 1.1 Driver seatbelt switch -E24- | 463 |
| 1.2 Passenger seatbelt switch -E25- | 464 |
| 1.3 Glove compartment light switch -E26- | 464 |
| 1.4 Rear tailgate unlocking switch -E165- | 465 |
| 1.5 Switch with key to turn off the front passenger's side airbags -E224- | 465 |
| 1.6 Driver's internal locking switch -E308- | 466 |
| 1.7 Starter button -E378- | 466 |
| 1.8 Rotatory light switch -EX1- | 467 |
| 1.9 Selector lever -E313- | 468 |
| 1.10 Hazard warning light switch -EX3- | 468 |
| 1.11 Interior mirror -EX5- | 469 |
| 1.12 Adjustment of the outer mirror -EX11- | 469 |
| 1.13 Tank filler flap unlock -EX13- | 470 |
| 1.14 Heater and air conditioning controls -EX21- | 470-471 |
| 1.15 Switch module 1 of the centre console -EX23- | 472 |
| 1.16 Passenger door window control switch -EX27- | 473 |
| 1.17 Operating unit for window regulator in rear right door -EX28- | 473 |
| 1.18 Operating unit for window regulator in rear left door -EX29- | 474 |
| 1.19 Control unit of the driver door control unit -EX36- | 474-475 |
| 832 - -Views of the connectors: F prefix parts - 3 | 476-480 |
| 1. Views of the connectors: F prefix parts | 476-480 |
| 1.1 Brake light switch -F- | 476 |
| 1.2 Oil pressure switch -F1- | 476 |
| 1.3 Reverse gear light switch -F4- | 477 |
| 1.4 Brake oil level warning contact -F34- | 477 |
| 1.5 Engine braking effect pressure switch -F234- | 478 |
| 1.6 Bonnet contact switch -F266- | 478 |
| 1.7 Rear left vanity mirror contact switch -F298- | 479 |
| 1.8 Rear right vanity mirror contact switch -F299- | 479 |
| 1.9 Oil pressure switch for reduced oil pressure -F378- | 480 |
| 833 - -Views of the connectors: G prefix parts - 3 | 481-505 |
| 1. Views of the connectors: G prefix parts | 481-505 |
| 1.1 Ambient temperature sensor -G17- | 482 |
| 1.2 Engine speed sender -G28- | 483 |
| 1.3 Low coolant level indicator sensor -G32- | 483 |
| 1.4 Hall Sensor -G40- | 484 |
| 1.5 Rear right wheel rotation sensor -G44- | 484 |
| 1.6 Front right wheel rotation sensor -G45- | 485 |
| 1.7 Rear left wheel rotation sensor -G46- | 485 |
| 1.8 Front left wheel rotation sensor -G47- | 486 |
| 1.9 Knock sensor 1 -G61- | 486 |
| 1.10 Coolant temperature sensor -G62- | 487 |
| 1.11 Radiator outlet coolant temperature sender -G83- | 487 |
| 1.12 Sunlight penetration photosensor -G107- | 488 |
| 1.13 Seat occupied sensor, front passenger side -G128- | 488 |
| 1.14 Left vent temperature sender -G150- | 489 |
| 1.15 Hall sensor 2 -G163- | 489 |
| 1.16 Driver side airbag crash sensor -G179- | 490 |
| 1.17 Side airbag crash sensor, passenger side -G180- | 490 |
| 1.18 Crash sensor for front airbag -G190- | 491 |
| 1.19 Footwell vent temperature sender -G192- | 491 |

| | |
|---|---------|
| 1.20 Rear left parking assist sensor -G203- | 492 |
| 1.21 Rear left parking assist sensor, centre -G204- | 492 |
| 1.22 Rear right parking assist sensor, centre -G205- | 493 |
| 1.23 Rear right parking assist sensor -G206- | 493 |
| 1.24 Fuel pressure sender -G247- | 494 |
| 1.25 Front right parking assist sensor -G252- | 494 |
| 1.26 Front right parking assist sensor, centre -G253- | 495 |
| 1.27 Front left parking assist sensor, centre -G254- | 495 |
| 1.28 Front left parking assist sensor -G255- | 496 |
| 1.29 Evaporator temperature sensor -G308- | 496 |
| 1.30 Rain sensor and light sensor -G397- | 497 |
| 1.31 Clutch position sensor -G476- | 498 |
| 1.32 Anti-theft alarm sensor -G578- | 498 |
| 1.33 Left front door handle contact switch -G605- | 498 |
| 1.34 Right front door handle contact switch -G606- | 499 |
| 1.35 Vacuum sender -G608- | 499 |
| 1.36 Ethanol concentration sender -G708- | 500 |
| 1.37 Pressure sender for refrigerant circuit -G805- | 500 |
| 1.38 Fuel delivery unit -GX1- | 501 |
| 1.39 Accelerator pedal module -GX2- | 501 |
| 1.40 Throttle valve module -GX3- | 502 |
| 1.41 Lambda Probe 1 after the catalytic converter -GX7- | 502 |
| 1.42 Intake manifold sender -GX9- | 503 |
| 1.43 Lambda probe 1 before the catalytic converter -GX10- | 504 |
| 1.44 Charge pressure sender -GX26- | 504-505 |
| 834 - -Views of the connectors: H to I prefix parts - 3 | 506-507 |
| 1. Views of the connectors: H to I prefix parts | 506-507 |
| 1.1 Bass horn -H7- | 506 |
| 1.2 Anti-theft alarm system horn -H8- | 506 |
| 1.3 Rear parking assist warning buzzer -H15- | 507 |
| 1.4 Front parking assist warning buzzer -H22- | 507 |
| 835 - Views of the connectors: J prefix parts - 3 | 508-526 |
| 1. Views of the connectors: J prefix parts | 508-526 |
| 1.1 Fog lights relay -J5- | 508 |
| 1.2 ABS control unit for vehicles equipped with electronic stabilization program -J104- | 509 |
| 1.3 ABS control unit for vehicles with no electronic stabilization program -J104- | 509 |
| 1.4 Fresh air blower control unit -J126- | 510 |
| 1.5 Automatic gearbox control unit -J217- | 510 |
| 1.6 Airbag control unit -J234- | 511 |
| 1.7 Driver door control unit -J386- | 511 |
| 1.8 Passenger door control unit -J387- | 512 |
| 1.9 Rear left door control unit -J388- | 512 |
| 1.10 Rear right door control unit -J389- | 513 |
| 1.11 Parking assist control unit -J446- | 513 |
| 1.12 Multifunction steering wheel control unit -J453- | 514 |
| 1.13 Power steering control unit -J500- | 515 |
| 1.14 Onboard supply control unit -J519- | 515 |
| 1.15 Steering column electronics control unit -J527- | 516-517 |
| 1.16 Fuel pump control unit -J538- | 518 |
| 1.17 Engine control unit -J623- | 519-520 |
| 1.18 Display unit for front information display and control unit -J685- | 521 |
| 1.19 Control unit 1 for information electronics -J794- | 522-525 |
| 1.19.4 | 524-525 |
| 1.20 Interface for entry and start system -J965- | 526 |
| 836 - -Views of the connectors: K to M prefix parts - 3 | 527-533 |
| 1. Views of the connectors: K to M prefix parts | 527-533 |
| 1.1 Central locking SAFELOCK function warning lamp -K133- | 527 |
| 1.2 Passenger airbag control light turned off -K145- | 527 |
| 1.3 Instrument cluster -KX2- | 528 |
| 1.4 Left fog light bulb -L22- | 528 |
| 1.5 Right fog light bulb -L23- | 529 |
| 1.6 Left daytime headlight bulb -L174- | 529 |
| 1.7 Left daytime headlight bulb -L175- | 530 |
| 1.8 High-level brake light -M25- | 530 |
| 1.9 Front left headlight -MX1- | 531 |
| 1.10 Front right headlight -MX2- | 531 |

| | |
|---|---------|
| 1.11 Left tail light -MX3- | 532 |
| 1.12 Right tail light -MX4- | 532-533 |
| 837 - -Views of the connectors: N prefix parts - 3 | 534-548 |
| 1. Views of the connectors: N prefix parts | 534-548 |
| 1.1 Fresh air blower series resistor with overheating fuse -N24- | 535 |
| 1.2 Cylinder 1 injector -N30- | 535 |
| 1.3 Cylinder 1 injector, DHSB -N30- | 535 |
| 1.4 Cylinder 2 injector -N31- | 536 |
| 1.5 Cylinder 2 injector, DHSB -N31- | 536 |
| 1.6 Cylinder 3 injector -N32- | 537 |
| 1.7 Cylinder 3 injector, DHSB -N32- | 537 |
| 1.8 Cylinder 4 injector -N33- | 538 |
| 1.9 Ignition coil 1 w/ final power stage -N70- | 538 |
| 1.10 Electromagnetic valve 1 for activated charcoal reservoir -N80- | 539 |
| 1.11 Activated charcoal filter solenoid valve 1, DHSB -N80- | 539 |
| 1.12 Airbag ignitor on driver side -N95- | 540 |
| 1.13 Ignition coil 2 w/ final power stage -N127- | 540 |
| 1.14 Airbag ignitor 1 of passenger front airbag -N131- | 541 |
| 1.15 Driver seat belt tensioner igniter 1 -N153- | 541 |
| 1.16 Passenger seat belt tensioner igniter 1 -N154- | 542 |
| 1.17 Side airbag ignitor on driver side -N199- | 542 |
| 1.18 Side airbag ignitor on passenger side -N200- | 543 |
| 1.19 Valve 1 for camshaft adjustment -N205- | 543 |
| 1.20 Valve 1 for camshaft adjustment, DHSB -N205- | 544 |
| 1.21 Fuel metering valve -N290- | 544 |
| 1.22 Ignition coil 3 w/ final power stage -N291- | 545 |
| 1.23 Ignition coil 4 w/ final power stage -N292- | 545 |
| 1.24 Valve 1 for exhaust valve camshaft adjustment -N318- | 546 |
| 1.25 Ignition key removal lock electromagnet -N376- | 546 |
| 1.26 Transmission -NX1- | 547-548 |
| 839 - -Connector views: R prefix parts - 3 | 549-557 |
| 1. Connector views: R prefix parts | 549-557 |
| 1.1 Rear left loudspeaker -R4- | 549 |
| 1.2 Rear right loudspeaker -R5- | 550 |
| 1.3 Amplifier -R12- | 550 |
| 1.4 Front left treble loudspeaker -R20- | 550 |
| 1.5 Front left bass loudspeaker -R21- | 551 |
| 1.6 Front right treble loudspeaker -R22- | 551 |
| 1.7 Front right bass loudspeaker -R23- | 552 |
| 1.8 Telephone microphone -R38- | 552 |
| 1.9 Rear window aerial 1 -R130- | 553 |
| 1.10 Rear bumper aerial for entry and start system -R136- | 554 |
| 1.11 Interior aerial 1 for entry and start system -R138- | 554 |
| 1.12 Interior aerial 2 for entry and start system -R139- | 555 |
| 1.13 Reversing camera -R189- | 555 |
| 1.14 Roof aerial -RX5- | 556 |
| 1.15 Interface for external audio sources -RX9- | 557 |
| 840 - -Views of the connectors: S to U prefix parts - 3 | 558-574 |
| 1. Views of the connectors: S to U prefix parts | 558-574 |
| 1.1 Coupling point on dash panel -TCP- | 558 |
| 1.2 Left front door handle contact switch -TGVL- | 559 |
| 1.3 Right front door handle contact switch -TGVR- | 560 |
| 1.4 Rear lid coupling point -THK- | 561-563 |
| 1.5 | 564 |
| 1.6 Engine compartment connector, left -TML- | 564 |
| 1.7 Coupling point on rear left bumper -TSFHL- | 565 |
| 1.8 Coupling point on front left bumper -TSFVL- | 566 |
| 1.9 Coupling point for front left seat -TSVL- | 567 |
| 1.10 Coupling point for front right seat -TSVR- | 568 |
| 1.11 Left rear door connector -TTHL- | 568 |
| 1.12 Right rear door connector -TTHR- | 569 |
| 1.13 Left front door connector -TTVL- | 570 |
| 1.14 Right front door connector -TTVR- | 571 |
| 1.15 Lighter -U1- | 572 |
| 1.16 Diagnostic connection -U31- | 572 |
| 1.17 USB 1 connection -U37- | 573 |

| | |
|--|---------|
| 1.18 USB 2 connection -U38- | 573-574 |
| 841 - -Views of the connectors: V prefix parts - 3 | 575-586 |
| 1. Views of the connectors: V prefix parts | 575-586 |
| 1.1 Windscreen wiper motor -V- | 575 |
| 1.2 Fresh air blower -V2- | 576 |
| 1.3 Rear window wiper motor -V12- | 576 |
| 1.4 Rear window and windscreen washer pump -V59- | 577 |
| 1.5 Fresh air flap and recirculation flap control motor -V154- | 577 |
| 1.6 Charge air cooling pump -V188- | 578 |
| 1.7 Brake vacuum pump -V192- | 578 |
| 1.8 Air conditioner compressor -V454- | 579 |
| 1.9 Charge pressure positioner -V465- | 579 |
| 1.10 Driver side exterior mirror -VX4- | 580 |
| 1.11 Passenger side exterior mirror -VX5- | 580 |
| 1.12 Driver door lock unit -VX21- | 581 |
| 1.13 Passenger door lock unit -VX22- | 581 |
| 1.14 Rear left door lock unit -VX23- | 582 |
| 1.15 Rear right door lock unit -VX24- | 582 |
| 1.16 Rear lid lock unit -VX25- | 583 |
| 1.17 Air distribution flap -VX33- | 583 |
| 1.18 Front left temperature flap -VX34- | 584 |
| 1.19 Air recirculation flap -VX52- | 584 |
| 1.20 Radiator fan -VX57- | 585-586 |
| 842 - -Views of the connectors: W to Z prefix parts - 3 | 587-593 |
| 1. Views of the connectors: W to Z prefix parts | 587-593 |
| 1.1 Boot light -W3- | 587 |
| 1.2 Glove compartment light -W6- | 587 |
| 1.3 Rear left illuminated vanity mirror -W49- | 588 |
| 1.4 Rear right illuminated vanity mirror -W50- | 588 |
| 1.5 Front interior light -WX1- | 589 |
| 1.6 Rear interior light -WX2- | 590 |
| 1.7 Left number plate light -X4- | 590 |
| 1.8 Right number plate light -X5- | 591 |
| 1.9 Fuel pre-heating heater element -Z66- | 591 |
| 1.10 Fuel pre-heating heater element 2 -Z108- | 592 |
| 1.11 Fuel pre-heating heater element 3 -Z109- | 592 |
| 1.12 Fuel pre-heating heater element 4 -Z110- | 593 |