



Contents

1	Engine list	1
2	Service work	5
2.1	Information about flexible or fixed service	5
2.2	Service tables	8
3	General information	20
3.1	Raising vehicle with lifting platform or trolley jack	20
3.2	Stickers	22
3.3	Entries in service schedule	23
3.4	Connecting vehicle diagnostic tester	23
3.5	Vehicle identification number	24
3.6	Vehicle data sticker	25
3.7	Severe operating conditions	26
3.8	Countries with hot climate	27
3.9	Country overview for diesel not compliant with EN 590	27
3.10	Country overview for petrol not compliant with EN 228	28
3.11	Engine code and engine number	29
3.12	Countries with high levels of dust	30
3.13	Type plate	31
3.14	Shortened intervals for spark plug replacement	31
4	Descriptions of work	36
4.1	Swivel joints and suspension link mountings: inspecting	37
4.2	Renewing buffer stops for air filter housing	38
4.3	Automatic headlight control and static cornering light: checking function	39
4.4	Front passenger front airbag: checking key switch and "ON/OFF function"	41
4.5	Battery: checking battery terminal clamps for secure seating	42
4.6	Battery: checking with battery tester (always refer to workshop manual)	45
4.7	Status of battery: reading, sending diagnosis protocol online	45
4.8	Tyres: checking condition, wear pattern, tyre pressure and tread depth	45
4.9	Brake and clutch system: change brake fluid	58
4.10	Brake system and shock absorbers: inspecting for leaks and damage	64
4.11	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	64
4.12	Brake fluid level: Check	66
4.13	Diesel fuel filter: renewing	68
4.14	Diesel particulate filter: checking	74
4.15	Dual clutch gearbox 02E: changing gear oil and filter	75
4.16	Electric windows: checking positioning (open and close functions)	75
4.17	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	75
4.18	Boots: inspecting	76
4.19	Interior and exterior body: inspecting for corrosion with doors and flaps open	76
4.20	Poly V-belt: renewing	77
4.21	Poly V-belt: checking condition	77
4.22	Cooling system: checking frost protection and coolant level	79
4.23	Air filter: cleaning housing and renewing filter element	82
4.24	Multi-purpose additive for diesel fuel: adding	89
4.25	Multi-purpose additive for petrol fuel: adding	91
4.26	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	92
4.27	Engine cover panel "top": removing and installing	93
4.28	Engine cover panel, -bottom- (noise insulation): removing and installing	98
4.29	Engine oil level: checking	98
4.30	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	100
4.31	Engine oil: capacities and specifications	117
4.32	Road test: performing (driving behaviour, noises, air conditioner etc.)	118



4.33	Wheel securing bolts: tightening to specified torque	119
4.34	Radio code: reading using vehicle diagnostic tester	120
4.35	Radio/navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	121
4.36	Tyre pressure monitoring: performing basic setting	121
4.37	Tyre repair set: Checking	124
4.38	Window wash/wipe system and headlight washer system: checking function	124
4.39	Headlight adjustment: checking halogen headlights	129
4.40	Headlight adjustment: checking gas discharge headlights	133
4.41	Headlight adjustment: checking fog lights	137
4.42	Service interval display: Reset	139
4.43	Service interval display: recoding	144
4.44	Track rod ends: checking clearance, firm seating and boots	145
4.45	Dust and pollen filter: cleaning housing and renewing filter element	146
4.46	Transportation mode: switching off	146
4.47	Transportation devices: removing blocking pieces from springs on front axle	146
4.48	Transportation devices: removing towing eyes/tie-down rings	148
4.49	Clock and date: setting	150
4.50	Underbody: inspecting for damage to underbody sealant, underbody cladding, routing of lines, plugs etc.	153
4.51	Toothed belt (petrol engines): renewing	153
4.52	Camshaft drive toothed belt (diesel engines): renewing	153
4.53	Spark plugs: Renew	153
5	Exhaust emissions test	168
5.1	Exhaust emissions test for petrol engines	168
5.2	Exhaust emissions test for diesel engines	170
6	Glossary	173
7	---Change history---	176