



Contents

00 - Technical data	1
1 Brake allocation via PR No.	1
1.1 Front brakes	1
1.2 Rear brakes	1
2 Technical data for brakes	3
2.1 Brake master cylinder and brake booster	3
2.2 Front brakes	3
2.3 Rear brakes (disc brakes)	4
3 Brake test	5
3.1 General	5
3.2 Test for vehicles with front-wheel drive	5
45 - Anti-lock brake system	6
1 General notes on anti-lock brake system	6
2 Notes for repair work on anti-lock brake system	7
3 Connecting VAS 5051 and selecting functions	8
4 Electrical/electronic components and locations	10
4.1 ABS Mark 60 EC (ABS/EDL/TCS/ESP)	10
5 Fault display via warning lamps	13
6 ABS Mark 60 EC (ABS/EDL/TCS/ESP) (left-hand drive vehicle)	15
6.1 Assembly overview	15
7 ABS Mark 60 EC (ABS/EDL/TCS/ESP) (RHD vehicle)	22
7.1 Assembly overview	22
7.2 Connecting brake lines from tandem brake master cylinder to hydraulic unit	23
7.3 Removing control unit and hydraulic unit	24
7.4 Unscrewing control unit from hydraulic unit	27
7.5 Installing new control unit to hydraulic unit	27
7.6 Installing control unit and hydraulic unit	28
8 Removing and installing parts of ABS system on front and rear axle	30
8.1 Removing and installing parts of ABS system on front axle	30
8.2 Removing and installing parts of anti-lock brake system on rear axle (front-wheel drive) ..	31
9 Removing and installing parts of ESP system	33
9.1 Removing and installing steering angle sender G85	33
46 - Brakes - mechanism	34
1 Repairing front brakes	34
1.1 Assembly overview - front brakes FN3	34
1.2 Removing and installing brake pads/linings	37
1.3 Removing and installing brake caliper	39
1.4 Assembly overview - front brakes FNR-G	41
1.5 Removing and installing brake pads/linings	43
1.6 Removing and installing brake caliper	46
2 Repairing rear brakes	53
2.1 Assembly overview - rear brakes C 38	53
2.2 Removing and installing brake pads/linings	54
2.3 Removing and installing brake caliper	56
2.4 Assembly overview - rear brakes CII 41	58
2.5 Removing and installing brake pads/linings	60
2.6 Removing and installing brake caliper	62
3 Handbrake	66
3.1 Assembly overview - handbrake lever	66



3.2	Removing and installing handbrake cable	66
3.3	Adjusting handbrake	68
4	Brake pedal (left-hand drive vehicle)	70
4.1	Assembly overview	70
4.2	Separating brake pedal from brake booster	70
5	Brake pedal (right-hand drive vehicle)	72
5.1	Assembly overview	72
5.2	Separating brake pedal from, and clipping to, brake booster	72
5.3	Removing and installing brake pedal	74
5.4	Removing and installing mounting bracket	77
47	Brakes - hydraulics	80
1	Repairing front brake calipers	80
1.1	Assembly overview - brake caliper FN 3	80
1.2	Removing and installing piston for brake caliper FN 3	80
1.3	Assembly overview - brake caliper FNR-G	83
1.4	Removing and installing piston for FNR-G brake caliper	84
2	Repairing rear brake calipers	88
2.1	Assembly overview - brake caliper C 38	88
2.2	Assembly overview - brake caliper CII 41	89
2.3	Removing and installing piston for brake caliper C 38 and CII 41	90
2.4	Pre-bleeding brake caliper	92
3	Pressurised leak test	93
3.1	Test prerequisites:	93
4	Bleeding brake system	94
4.1	Bleeding brake system with the brake filling and bleeding equipment VAS 5234	94
4.2	Changing brake fluid	96
5	Brake booster and brake master cylinder	97
5.1	Assembly overview: brake booster/brake master cylinder (left-hand drive vehicle)	97
5.2	Assembly overview: brake booster/brake master cylinder (right-hand drive vehicle)	98
5.3	Vacuum pump for brake booster (vehicles with diesel engine)	100
5.4	Vacuum pump for brake booster (vehicles with petrol engine)	100
5.5	Checking brake booster vacuum system	101
5.6	Checking non-return valve	105
5.7	Removing and installing vacuum sender G608	105
5.8	Removing and installing brake light switch F	105
6	Removing and installing brake master cylinder	109
6.1	Removing and installing brake master cylinder, LHD	109
6.2	Removing and installing brake master cylinder, RHD	110
7	Removing and installing brake booster	116
7.1	Removing and installing brake booster, LHD	116
7.2	Removing and installing brake booster, right-hand drive vehicle	118
8	Repairing brake lines	125
8.1	Assembly overview - flanging tool	127
8.2	Work instructions	127