



## Contents

<b>91 - Communication</b>	<b>1</b>
<b>1 Communication systems</b>	<b>1</b>
1.1 General notes	1
1.2 Fault finding in communication systems	1
<b>2 Radio units and radio navigation systems in general</b>	<b>2</b>
2.1 Removing and installing radio units and radio navigation systems	2
2.2 Adapting radio components	4
2.3 Adapting radio navigation system components	5
<b>3 Radio system "RCD 210"</b>	<b>6</b>
3.1 General notes	6
3.2 Fault finding	6
3.3 Overview of radio system "RCD 210"	7
3.4 Overview of connectors on radio "RCD 210"	8
3.5 Anti-theft coding	10
<b>4 Radio system "RCD 310"</b>	<b>13</b>
4.1 General notes	13
4.2 Overview of radio system "RCD 310"	13
4.3 Overview of connectors on radio "RCD 310"	16
4.4 Anti-theft coding	18
<b>5 Radio system "RCD 510"</b>	<b>21</b>
5.1 General notes	21
5.2 Overview of radio system "RCD 510"	22
5.3 Activating/deactivating transport lock for CD changer in "RCD 510"	23
5.4 Overview of connectors on radio "RCD 510"	24
5.5 Anti-theft coding	28
<b>6</b>	<b>32</b>
6.1 General notes	32
6.2 Overview of radio navigation system "RNS 300"	33
6.3 Overview of connectors on radio navigation system "RNS 300"	35
6.4 Anti-theft coding	37
<b>7</b>	<b>41</b>
7.1 General notes	41
7.2 Features of radio navigation system "RNS 315"	41
7.3 Assembly overview of the radio navigation system "RNS 315"	42
7.4 System overview of the radio navigation system "RNS 315"	44
7.5 Anti-theft coding	45
<b>8</b>	<b>47</b>
8.1 General notes	47
8.2 Overview of radio navigation system "RNS 510"	48
8.3 Overview of connectors on radio navigation system "RNS 510"	50
8.4 Anti-theft coding	53
<b>9 CD changer</b>	<b>57</b>
9.1 Removing and installing CD changer	57
<b>10 Sound system amplifier</b>	<b>59</b>
10.1 General notes	59
10.2 Removing and installing amplifier	59
10.3 Pin assignments on connectors of amplifier	61
<b>11 Interface for external multimedia devices R215</b>	<b>63</b>
11.1 General notes	63
11.2 System overview of "interface for external multimedia devices"	63
11.3 Removing and installing interface for external multimedia devices R215	64



<b>12</b>	<b>Connection for external audio sources</b>	<b>66</b>
12.1	General notes	66
12.2	Removing and installing connection for external audio sources R199	66
12.3	Contact assignment on connection for external audio sources R199	67
<b>13</b>	<b>Loudspeaker systems</b>	<b>68</b>
13.1	Removing and installing front bass and mid-range loudspeakers	68
13.2	Removing and installing rear bass loudspeakers	69
13.3	Removing and installing front treble loudspeakers	70
13.4	Removing and installing rear treble loudspeakers	71
13.5	Removing and installing subwoofer R211	71
<b>14</b>	<b>Telephone system</b>	<b>73</b>
14.1	General notes	73
14.2	Preparation for mobile telephone "UTP Premium Light" with Bluetooth technology	73
14.3	Removing and installing telephone transmitter and receiver unit	75
14.4	Removing and installing emergency assistance call button	76
14.5	Removing and installing telephone system microphone	76
14.6	Removing and installing telephone bracket in centre console	77
<b>15</b>	<b>Aerial systems</b>	<b>80</b>
15.1	General notes	80
15.2	Removing and installing aerial modules	84
15.3	Removing and installing roof aerial	86
15.4	Renewal of aerial wiring	87
<b>16</b>	<b>Multifunction steering wheel</b>	<b>88</b>
16.1	General notes	88
16.2	Removing and installing steering wheel operating unit	88
16.3	Removing and installing multifunction steering wheel control unit	89
16.4	Adapting multifunction steering wheel components	90
<b>17</b>	<b>Mobile online services</b>	<b>91</b>
17.1	General notes	91
17.2	Fitting locations overview - mobile online services	91
17.3	Removing and installing emergency call module control unit and communication unit J949	92
<b>18</b>	<b>Notes on operating mobile telephones and two-way radios</b>	<b>94</b>
18.1	General notes	94
18.2	Notes on performing repair work	94
18.3	Overview of battery, transmitter and receiver unit, fuse and wiring harness	96
18.4	Transmitting power and aerial fitting locations	97
<b>19</b>	<b>Suppression measures</b>	<b>98</b>
19.1	Implementation of suppression measures	98